

MIX-2351TIRAPA

Advanced Protocol

Multi-Criteria Photoelectric, Thermal and Infrared Sensor



Mircom Technologies Ltd.
25 Interchange Way, Vaughan ON, L4K 5W3
Tel: 905-660-4655, FAX: 905-660-4113

SPECIFICATIONS

Operating Voltage Range:	15 to 32 VDC
Operating Current @ 24 VDC:	200 uA (one communication every 5 seconds with green LED blink on communication)
Maximum Alarm Current:	2 mA @ 24 VDC (one communication every 5 seconds with red LED solid on)
Maximum Current:	4.5 mA @ 24 VDC (one communication every 5 seconds with amber LED solid on)
Operating Humidity Range:	15% to 90% Relative Humidity, Non-condensing
Operating Temperature Range:	32°F to 115°F (0°C to 47°C)
Air Velocity:	0 to 300 ft./min. (0 to 91.4 m/min.)
Height:	2.0" (51 mm) installed in B300A-6 Base
Diameter:	6.2" (156 mm) installed in B300A-6 Base; 4.1" (104 mm) installed in B501 Series Base
Weight:	3.4 oz. (95 g)
Isolator Load Rating:	0.0063*

*Please refer to your isolator base/module manual for isolator calculation instructions.

CAN/ULC S529 listed for Open Air Protection
CAN/ULC S530 listed for Heat Detectors

This sensor must be installed in compliance with the control panel system installation manual. The installation must meet the requirements of the Authority Having Jurisdiction (AHJ). Sensors offer maximum performance when installed in compliance with CAN/ULC S524. For a complete list of compatible bases, refer to the Base/Sensor Cross Reference Chart at systemsensor.com.

GENERAL DESCRIPTION

Model MIX-2351TIRAPA is a plug-in type multi-criteria smoke sensor that offers a photoelectric sensing chamber combined with a 135°F (57.2°C) fixed temperature heat detector and infrared (IR) sensors. The MIX-2351TIRAPA also transmit an alarm signal due to heat (135°F/57.2°C) per CAN/ULC S530.

All sensors transmit an analog representation of smoke density over a communication line to a control panel. Rotary dial switches are provided for setting the sensor's address. (See Figure 2.)

Two LEDs on the sensor are controlled by the panel to indicate sensor status. An output is provided for connection to an optional remote LED annunciator (P/N RA100ZA).

Mircom panels offer different features sets across different models. As a result, certain features of the photoelectric sensors may be available on some control panels, but not on others.

MIX-2351TIRAPA supports Advanced Protocol and CLIP (Classic Loop Interface Protocol) mode. The possible features available in the multi-criteria smoke sensors, if supported by the control unit are:

1. The sensor's LEDs can operate in three ways—on, off, and blinking—and they can be set to red, green, or amber. This is controlled by the panel.
2. The remote output may be synchronized to the LED operation or controlled independent of the LEDs.
3. Devices are point addressable up to 159 addresses.

Please refer to the operation manual for the ULC listed control panel for specific operation. The photoelectric sensors require compatible addressable communications to function properly. Connect these sensors to listed-compatible control panels only.

SPACING

Mircom recommends spacing sensors in compliance with CAN/ULC S524. In low air flow applications with smooth ceilings, space sensors 30 feet apart (9.1 m). For specific information regarding sensor spacing, placement, and special applications, refer to CAN/ULC S524 and the System Smoke Detector Application Guide, available from Mircom.

WIRING GUIDE


All wiring must be installed in compliance with the Canadian Electrical Code, applicable local codes, and any special requirements of the Authority Having Jurisdiction. Proper wire gauges should be used. The installation wires should

be color-coded to limit wiring mistakes and ease system troubleshooting. Improper connections will prevent a system from responding properly in the event of a fire.

Remove power from the communication line before installing sensors.

1. Wire the sensor base (supplied separately) per the base wiring diagram. (See Figure 1.)
2. Set the desired address on the sensor address switches. (See Figure 2.)
3. Install the sensor into the sensor base. Push the sensor into the base while turning it clockwise to secure it in place.
4. After all sensors have been installed, apply power to the control panel and activate the communication line.
5. Test the sensor(s) as described in the TESTING section of this manual.

FIGURE 1. WIRING DIAGRAM

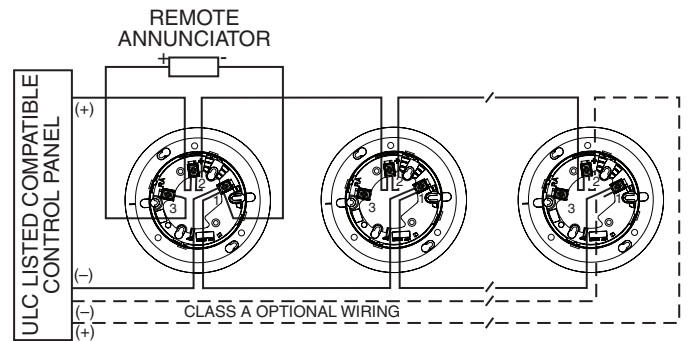


C0129-04CDN

CAUTION


Do not loop wire under terminal 1 or 2. Break wire run to provide supervision of connections.

FIGURE 2. ROTARY ADDRESS SWITCHES

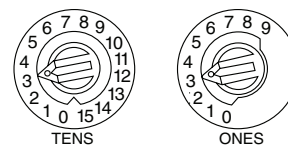


C0162-00

FIGURE 3. FEATURES OF THE PTIR DETECTOR

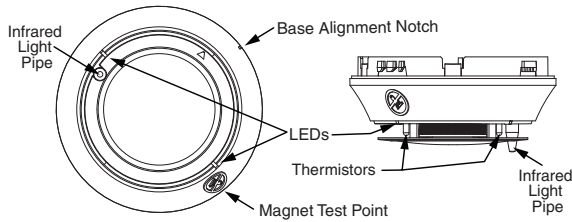

C2050-00

FIGURE 4. CLEANING THE PTIR DETECTOR

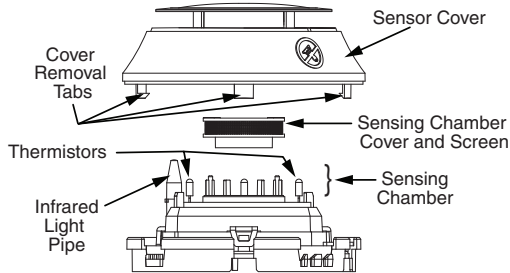

C2044-00

CAUTION

Dust covers provide limited protection against airborne dust particles during shipping. Dust covers must be removed before the sensors can sense smoke. Remove sensors prior to heavy remodeling or construction.

TAMPER RESISTANCE

Model MIX-2351TIRAPA includes a tamper-resistant capability that prevents removal from the base without the use of a tool. Refer to the base manual for details on making use of this capability.

TESTING

Before testing, notify the proper authorities that the system is undergoing maintenance, and will temporarily be out of service. Disable the system to prevent unwanted alarms.

All sensors must be tested after installation and periodically thereafter. Testing methods must satisfy the Authority Having Jurisdiction (AHJ). Sensors offer maximum performance when tested and maintained in compliance with CAN/ULC S536. Sensitivity readings are available through the fire alarm control panel (FACP). Refer to the manufacturer’s published instructions for proper use.

The sensor can be tested in the following ways:

A. Functional: Magnet Test (P/N M02-04-01 or M02-09-00)

This sensor can be functionally tested with a test magnet. The test magnet electronically simulates smoke in the sensing chamber, testing the sensor electronics and connections to the control panel.

- a. Hold the test magnet in the magnet test area as shown in Figure 3.
- b. The sensor should alarm the panel.

Two LEDs on the sensor are controlled by the panel to indicate sensor status. Coded signals, transmitted from the panel, can cause the LEDs to blink, latch on, or latch off. Refer to the control panel technical documentation for sensor LED status operation and expected delay to alarm.

NOTE: The magnet test initiates an approximately 10 minute period when the detector’s signal processing software routines are not active.

B. Smoke Entry

Canned aerosol simulated smoke (canned smoke agent) may be used for smoke entry testing of the smoke detector.

The multi-criteria smoke sensor uses algorithms to process signals received from multiple sensors to determine alarm conditions and reduce false alarms. Therefore, a single burst of canned smoke will not immediately place the detector into an alarm condition because the detector algorithms correctly determine a burst of canned smoke is not fire. In order to perform functional testing of the photoelectric sensor, the device must be placed into test mode. Test mode allows the detector to isolate the individual sensors for testing. The device can be placed into test mode through either of the following methods.

- a. Put the device into test mode by holding a test magnet in the magnet test area as shown in Figure 3 for 6-12 seconds.

NOTE: If the magnet is held in place for too long the fire alarm test function will be triggered. (See Magnet Test, above.) Reset the panel and proceed with testing the smoke entry portion of the device.

- b. Perform smoke entry testing immediately following the magnet test. The magnet test initiates an approximately 10 minute period when the detector’s signal processing software routines are not active.

Once in test mode, test the smoke detector using one of the tested and approved aerosol smoke products. Refer to the manufacturer’s published instructions for proper use of the canned smoke agent. When used properly, the canned smoke agent will cause the smoke detector to go into alarm.

Tested and approved aerosol smoke products include:

Manufacturer	Model
HSI Fire and Safety	25S, 30S (PURCHECK)
SDi	SMOKE CENTURION , SOLO A10, SMOKESABRE, TRUTEST, SOLO 365
No Climb	TESTIFIRE 2000

CAUTION

Canned aerosol simulated smoke (canned smoke agent) formulas will vary by manufacturer. Misuse or overuse of these products may have long term adverse effects on the smoke detector. Consult the canned smoke agent manufacturer’s published instructions for any further warnings or caution statements.

C. Direct Heat Method (Hair Dryer of 1000-1500 watts)

A hair dryer of 1000-1500 watts should be used to test the thermistors. Direct the heat toward the thermistor, holding the heat source approximately 12 inches (30 cm) from the detector in order to avoid damaging the plastic housing. The detector will reset only after it has had sufficient time to cool. Make sure both thermistors are tested individually.

D. Multi-Criteria Testing

Testifire® by SDi provides testing of the smoke and heat sensors. Consult the manufacturer’s published instructions for complete usage instructions.

A sensor that fails any of these tests may need to be cleaned as described under CLEANING, and retested. When testing is complete, restore the system to normal operation and notify the proper authorities that the system is back in operation.

CLEANING

Before removing the detector, notify the proper authorities that the smoke detector system is undergoing maintenance and will be temporarily out of service. Disable the zone or system undergoing maintenance to prevent unwanted alarms.

1. Remove the sensor to be cleaned from the system.
2. Remove the sensor cover by pressing firmly on each of the four removal tabs that hold the cover in place.
3. Vacuum the screen carefully without removing it. If further cleaning is required continue with Step 4, otherwise skip to Step 7.
4. Remove the chamber cover/screen assembly by pulling it straight out.
5. Use a vacuum cleaner or compressed air to remove dust and debris from the sensing chamber.
6. Reinstall the chamber cover/screen assembly by sliding the edge over the sensing chamber. Turn until it is firmly in place.
7. Replace the cover using the LEDs to align the cover and then gently pushing it until it locks into place. Make sure that the thermistors do not become bent under the cover.
8. Reinstall the detector.
9. Test the detector as described in TESTING.
10. Reconnect disabled circuits.
11. Notify the proper authorities that the system is back on line.

SPECIAL NOTE REGARDING SMOKE DETECTOR GUARDS

Smoke detectors are not to be used with detector guards unless the combination has been evaluated and found suitable for that purpose.

SUPPLEMENTAL INFORMATION

For Limitations of Fire Alarm Systems,
please go to:
[http://www.systemsensor.com/
en-us/Documents/156-1558.pdf](http://www.systemsensor.com/en-us/Documents/156-1558.pdf)



Limitations of
Fire Alarm Systems

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.

DEVICE AND SYSTEM SECURITY

Before installing this product ensure that the tamper seal on the packaging is present and unbroken and the product has not been tampered with since leaving the factory. Do not install this product if there are any indications of tampering. If there are any signs of tampering the product should be returned to the point of purchase.

It is the responsibility of the system owner to ensure that all system components, i.e. devices, panels, wiring etc., are adequately protected to avoid tampering of the system that could result in information disclosure, spoofing, and integrity violation.