

General Description

- Model SD-100-2WT: 2-Wire Photoelectric Smoke Detector with Heat Sensor and Remote Indicator
- Model SD-100-4WT: 4-Wire Photoelectric Smoke Detector with Heat Sensor

All models incorporate a microprocessor with an advanced optical sensing chamber and feature a restorable, fixed temperature (135°F/57.2°C) thermal detector. SD-100 Series detectors are designed to provide open area protection.

TYPICAL WIRING DIAGRAMS

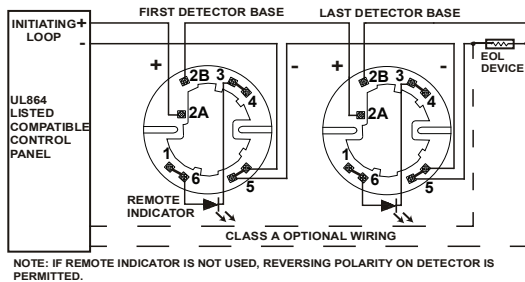


Figure 1(a) Typical wiring diagram of the 2-wire multiple-station smoke detector system.

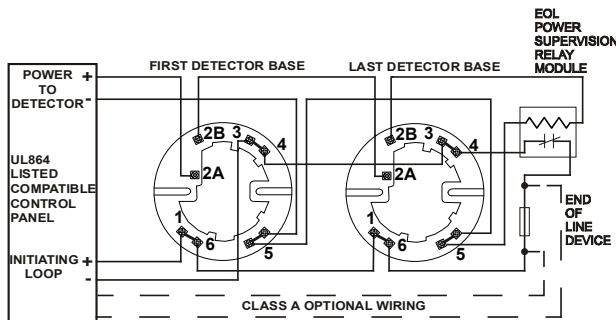


Figure 1(b) Typical wiring diagram of the 4-wire multiple-station smoke detector system.

CAUTION: DO NOT USE LOOPED WIRE UNDER TERMINALS 2 AND 5. BREAK WIRE RUN TO PROVIDE SUPERVISION OF CONNECTIONS.

MISE EN GARDE: POUR LE CONTRÔLE DES SYSTÈMES – POUR LES BORNES 2 ET 5, NE PAS UTILISER DE FIL ENROULÉ SOUS LES BORNES. COUPER LE CÂBLAGE POUR ASSURER LA SURVEILLANCE DES RACCORDEMENTS.

WARNING

TO PREVENT DETECTOR CONTAMINATION AND SUBSEQUENT WARRANTY CANCELLATION, THE SMOKE DETECTOR MUST REMAIN COVERED UNTIL AREA IS CLEAN AND DUST FREE.

AVERTISSEMENT

POUR ÉVITER LA CONTAMINATION DU DÉTECTEUR ET ANNULER LA GARANTIE, LE DÉTECTEUR DE FUMÉE DOIT RESTER COUVERT TANDIS QUE L'ENDROIT EST PROPRE ET SANS CONTAMINER DES POUSSIÈRE.

INSTALLING THE BASE

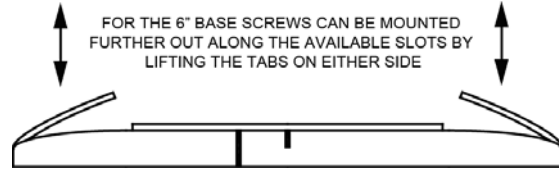


Figure 2 Installing 6" base

Notes: The end-of-line devices shown in Figures 1(a) and 1(b) must be compatible with the control panel. The end-of-line supervisory relay must be rated for the DC power voltage used.

Open area smoke detectors are intended for mounting on a ceiling or a wall in accordance with the fire standard in your country.

There is a limit of 21 smoke detectors on one loop.

1. Ensure that all wires are properly identified, and fasten the wires away from the connector terminals.
2. If you used a jumper wire to connect the poles of terminals 2 and 5 when testing the detector loop continuity, remove the jumper wire before you install the detector head.
3. Mount the base of the smoke detector directly onto an electrical junction box such as an octagonal (3", 3.5" or 4"), a round (3"), or a square (4") box without using any type of mechanical adapter.

INSTALLING THE HEAD

1. Thoroughly clean the area of construction debris and dust.
2. Align the mark on the detector head with the short mark on the base and twist the head clockwise to secure it. The mark on the head should line up with the long mark on the base.

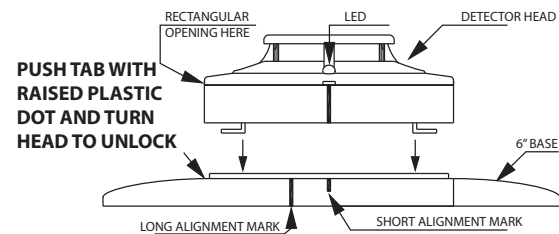
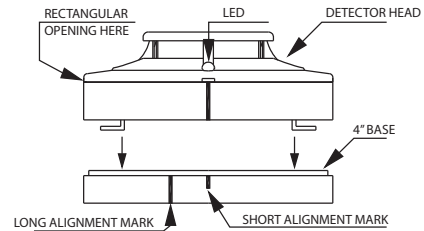


Figure 3 Attaching detector head onto base

ALARM AND SMOKE SENSOR TESTING

1. Disengage all the alarm signal services, releasing devices, and extinguisher systems during testing.
2. Energize the detector head for approximately one minute.
3. Make sure that the LED flashes green once every 5-7 seconds.
If it is not flashing, the detector is not functioning or the wiring is faulty. Re-check the wiring or replace the detector if necessary.
4. Position the test magnet against the side of the detector opposite the side marked **DO NOT PAINT** for at least 10 seconds.
The LED should illuminate steady red.
5. Reset the control panel to return to normal operation.
6. Allow smoke from a cotton wick or a test smoke aerosol to enter the detector-sensing chamber for at least 10 seconds.
When sufficient smoke has entered the chamber, the LED illuminates steady red. If it does not, then the detector requires service.
7. Reset each detector and control panel before testing any additional detectors in the same zone.
8. Re-engage all the alarm signal services, releasing devices, and extinguisher systems immediately after testing.

HEAT SENSOR TESTING

1. Switch on a flow of hot air at a temperature between 65°C and 80°C. This requirement can be met by some domestic hair dryers. Check that the temperature is correct and stable.
2. From a distance of several inches, direct the airflow at the guard protecting the thermistor. The detector should sound its alarm within 30 seconds.

3. When the alarm sounds, immediately remove the heat source and check that the LED is illuminated red.
4. Reset the detector from the control panel.
If the detector fails to sound its alarm within 30 seconds, it is too insensitive. Return it to the distributor for servicing.
6. Check that the system is set for normal operation and notify the appropriate authorities that the testing operation is complete and the system is active again.

NOT SUITABLE FOR INSTALLATION IN AREAS WHERE AIR VELOCITIES EXCEED 300 ft./min.

MAINTENANCE

The recommended minimum requirement for detector maintenance consists of an annual cleaning of dust from the detector head by using a vacuum cleaner. All maintenance operations must comply with NFPA-72A standards.

CAUTION: DO NOT ATTEMPT DISASSEMBLY OF THE FACTORY SEALED SMOKE DETECTOR. THIS ASSEMBLY IS SEALED FOR YOUR PROTECTION AND IS NOT INTENDED TO BE OPENED FOR SERVICING BY USERS. OPENING THE DETECTOR HEAD WILL VOID THE WARRANTY.

ATTENTION: NE PAS DEMONTRER LE DÉTECTEUR DE FUMÉE. CET ENSEMBLE EST ÉTANCHE POUR VOUS VOUS PROTÉGER CONTRE LES ÉLÉMENTS ET N'EST PAS PREVUE DE L'OUVRIR POUR L'ENTRETIEN. EN OUVRANT LA TÊTE DE SONDE ANNULERAIT LA GARANTIE RESPECTIVEMENT.

FOR MORE INFORMATION, REFER TO THE TECHNICAL BULLETIN LT-5267 SD-100-2W/4W

SPECIFICATION

Model	2/4 wire	Thermal (°C)	Voltage (VDC)	Max. Standby Current (µA)	Max. Alarm Current (mA)	Max. Surge Current (µA)	Max. Start-Up Time (s)	Max. Permissible Current (mA)	LED Flash Interval (s)	Alarm contact	Base model
SD-100-2WT	2	57.2	12.0-28.0	140	90	200	60	90	5-7	—	SDB-106-4 SDB-104-4
SD-100-4WT	4	57.2	10.5-33.0	140	48	200	60	48	5-7	Form A	SDB-106-4 SDB-104-4

Accessories: RSR-100 Remote Sensitivity Meter for SD-100 Detectors (LT-1146)

Disclaimer of Warranties and Limitation of Remedies and Liability

MGC Systems Corp. ("MGC" or the "Company") makes no warranty of merchantability or fitness for a particular purpose with respect to its goods, nor is there any other warranty, expressed or implied, except for the warranty contained herein and in MGC's standard terms of sale. All previous warranties are expressly revoked and no derivation or alteration, verbal or written, is authorized.

MGC's sole and exclusive obligation is to repair or replace, at its option, any part which is deemed by MGC to be defective in materials or workmanship under normal use and service, for a period of 12 months from the date of purchase, but not to exceed 18 months after shipment. MGC's warranty shall be voided if the product is altered or serviced by a non-authorized party. MGC does not represent that its products will prevent loss by fire or otherwise, or that its products will in all cases provide the protection for which its products are installed or intended. Buyer and end-users acknowledge that MGC is not an insurer and assumes no risk for loss or damage, other than as expressly agreed to by MGC in its warranty.

Under no circumstances shall MGC's liability, under warranty or otherwise, exceed the contract price for the goods for which liability is claimed, and in no event shall the Company be liable to the purchaser or any other third party for (a) consequential, collateral, incidental or special damages, including, without limiting the generality of the foregoing, loss of profits, loss of the product or any associated equipment, cost of capital, cost of substitute or replacement equipment, facilities or services, down time, purchaser's time, labor back charges, the claims of third parties, including customers, and injury to property or other incidental costs incurred by purchaser or any third party, or (b) direct damages (other than direct damages as expressly specified above).

25 Interchange Way •Vaughan (Toronto), Ontario CANADA L4K 5W3
Tel : (905) 660-4655 Fax : (905) 600-4113
 Web: www.mircom.com

LT-1055 Rev 2.3