



4. Retirez l'ensemble du haut-parleur ainsi que les fils du boîtier arrière. Si le boîtier arrière doit être remplacé, retirez les 6 écrous de blocage #6-32 qui le fixent au TX3 Touch. Placez le nouveau boîtier arrière sur les goujons et revissez les 6 écrous de blocage #6-32 sur les goujons. Passez à l'étape 11 s'il n'y a pas d'autres remplacements à effectuer.
5. Retirez les 10 vis à métaux Philips #4 x 5/8 po sur le périmètre de la grille avant. Il y a 5 vis en haut et 5 en bas. Retirez la grille avant. Si la grille avant est le dernier composant à remplacer, passez à l'étape 10.
6. Retirez les 3 vis à métaux Philips #4 x 5/8 po situées au centre de la plaque avant. Soulevez la plaque avant pour la sortir de la boîte en bois et retournez-la pour accéder aux haut-parleurs stéréo.
7. Remove the 8, #6-32 lock nuts from the stud bolts that keep the Stereo Speakers attached to the Front Plate. Remove the old Stereo Speakers and replace them with the new ones if required. Use the new Front Plate if the old one requires replacement. Replace the 8, #6-32 lock nuts on to the stud bolts and tighten them to secure the Stereo Speakers.
8. Flip over the Front Plate and Stereo Speaker assembly and place it back in the Wood Box. Feed the speaker wires through the holes in the Wood Box that allow the wires to run through channels on the outside. Use the new Wood Box if the old one requires replacement.
9. Secure the Front Plate to the Wood Box by placing 3, #4 x 5/8", Philips metal screws along the centre of the Front Plate.
10. Attach the Front Grill to the Front Plate and secure it using 10, #4 x 5/8", Philips metal screws along the perimeter. Use the new Front Grill if the old one requires replacement.
11. Ensure that the holes in the Wood Box through which the wires are feed are facing up and place the Speaker Assembly into the Backbox. Feed the wires through the holes in the Backbox. Secure the assembly into the Backbox by using 6, #6-32 x 1/4", Philips machine screws.
12. Reattach the two pairs of speaker wires to the Touchscreen Audio Mixer Board. Place the pair of wires from the left speaker into the terminal pair labelled Audio Out L. The striped wire is to be placed in the negative terminal and the plain color wire is to be placed in the positive terminal. Repeat this for the pair of wires from the right speaker, placing them into the terminal pair labelled Audio Out R. Tighten the screws on the terminal blocks to secure the wires in place.
13. Close the front panel cover on the TX3 Touch. Reconnect the power and turn on the unit. Restart the TX3 Touch software and ensure that the speakers function correctly.