

Converting Double Action Manual Stations to Single Action Instructions

Steps for Converting a Double Action Station to a Single Action Station

1. Using a key supplied with the station, unlock and open the manual station.
2. Looking at the interior of the manual station, remove the smaller two screws and accompanying brackets fastening the PUSH bar.
3. To easily remove the PUSH bar, hold the manual station vertically with one hand with the keyhole at the bottom. Tilt the manual station towards you and the PUSH bar should be easily accessible for removal.



LT-1104 Rev.0

Converting Double Action Manual Stations to Single Action Instructions

Steps for Converting a Double Action Station to a Single Action Station

1. Using a key supplied with the station, unlock and open the manual station.
2. Looking at the interior of the manual station, remove the smaller two screws and accompanying brackets fastening the PUSH bar.
3. To easily remove the PUSH bar, hold the manual station vertically with one hand with the keyhole at the bottom. Tilt the manual station towards you and the PUSH bar should be easily accessible for removal.



LT-1104 Rev.0

Converting Double Action Manual Stations to Single Action Instructions

Steps for Converting a Double Action Station to a Single Action Station

1. Using a key supplied with the station, unlock and open the manual station.
2. Looking at the interior of the manual station, remove the smaller two screws and accompanying brackets fastening the PUSH bar.
3. To easily remove the PUSH bar, hold the manual station vertically with one hand with the keyhole at the bottom. Tilt the manual station towards you and the PUSH bar should be easily accessible for removal.



LT-1104 Rev.0

Converting Double Action Manual Stations to Single Action Instructions

Steps for Converting a Double Action Station to a Single Action Station

1. Using a key supplied with the station, unlock and open the manual station.
2. Looking at the interior of the manual station, remove the smaller two screws and accompanying brackets fastening the PUSH bar.
3. To easily remove the PUSH bar, hold the manual station vertically with one hand with the keyhole at the bottom. Tilt the manual station towards you and the PUSH bar should be easily accessible for removal.



LT-1104 Rev.0