

FIRE-LINK® II

Signalink System Configurator User's Manual



Table of Contents

1.0 General Product Information	3
1.1 *** IMPORTANT *** Site Prequalification Requirement	3
1.2 Documentation Reference	3
1.3 Applicable System Components	3
1.4 Key Features of SSC	4
1.5 Minimum System Requirements	4
1.6 Dealer Kit	4
2.0 SSC Installation	5
2.1 Installation Quick Start	5
3.0 SSC Overview	7
3.1 Overview	7
3.2 The Job File	7
3.3 Programming Steps	7
4.0 Using the Configurator	8
4.1 Starting up the Configurator	8
4.2 Creating a New Job File	9
4.3 Entering Devices into the Device List	10
4.4 Connecting Serial Cable to the NMC	11
4.5 Connecting to the NMC	12
4.6 Sending Job to Panel	14
4.7 SSC Status Bar	14
4.8 Enrolling ISDs	15
4.9 Viewing Current Status	16
5.0 Reports	16
5.1 Creating a Commissioning Report	16
5.2 Interpreting the Commissioning Report	18
5.3 Saving the Commissioning Report	18
6.0 Event Logs	19
6.1 Retrieving the Event Logs	19
6.2 Opening a Saved Event Log	20
7.0 Post Installation	20
7.1 Laptop / NMC Synchronization Overview	20
7.2 Get Job, Send Job, Compare Job	22
8.0 Miscellaneous	23
8.1 Editing the Device List	23
8.2 Adding a Device to the Device List	23
8.3 Deleting the NMC's Device List	23
8.4 Changing the Profile	23
8.5 Importing Earlier Version Job Files	23
8.6 Using the Bar Code Scanner	24

1.0 General Product Information

1.1 *** IMPORTANT *** Site Prequalification Requirement

The Fire-Link®II Site Prequalification form must be completed by the dealer or installer AND approved by Signalink Technologies prior to installation of any Fire-Link® equipment. Equipment and/or installation warranties may be void if this installation is not approved by Signalink Technologies.

1.2 Documentation Reference

The chart below lists the pertinent documentation to install Fire-Link®II equipment.

This is Document Number: **077.0046 – Signalink System Configurator User's Guide**

Fire-Link® II		Documentation Reference
Document Number	Document Name	Description
077.0024	NMC and TPC Installation Guide	Installation and 120V Wiring of the NMC, TPC and CHK-400
077.0050	TPC Installation Guide	TPC and CHK-400 Installation Instructions (Enclosed in TPC Unit Box)
077.0048	NMC Fire Alarm Wiring Guide	NMC Fire Alarm and Fire Alarm Control Panel (FACP) Interconnect Wiring
077.0049	ISD Installation, Operation and Maint. Guide	ISD Installation, Operations and Maintenance Guide
077.0045	NMC Programming Manual	NMC and ISD Programming and Set Up
077.0046	Signalink System Configurator User's Manual	System Configurator User's Guide for NMC Programming Via Laptop
077.0025	Building Manager's Guide	NMC and ISD Operation, Test and Inspection Guide

1.3 Applicable System Components

This document applies to the following system components:

Fire-Link® II System Components			
	160kHz	132kHz	Color
ISD Horn Only	ISD-2501UR	ISD-2502UR	RED
	ISD-2501UW	ISD-2502UW	WHITE
ISD Horn/Strobe	ISD-2501URS	N/A	RED
	ISD-2501UWS	N/A	WHITE
NMC	NMC-101R	NMC-102R	RED
	NMC-101W	NMC-102W	WHITE

N/A: Not Available

1.4 Key Features of SSC

The Signalink System Configurator (SSC) is a laptop software application that allows the programming of the NMC via a laptop computer. It is convenient and simple to use and offers greater flexibility in programming and system start-up than manually configuring the system from the NMC keypad. Some of the key features of the SSC include:

- The ability to create "Job" files, including the NMC Device List and Configuration data, and store them on the laptop.
- The ability to use a bar code scanner to scan the ISDs' VIDs rather than manually entering the VID data.
- The ability to easily manage the Device List from the laptop rather than at the NMC.
- The ability to create the Job files remotely without having to be on-site and / or at the NMC controller.
- The ability to retrieve Event Logs from the NMC and store them with Job file.
- The ability to create and print post installation commissioning reports.
- The ability to run certain system diagnostics that are not available on the NMC

SSC installs quickly and easily from the Installation CD or from the web site download.

1.5 Minimum System Requirements

SSC installs and runs on most laptop computers with the following minimum requirements:

500 MHz or faster processor
Windows® XP Home, XP Professional with Service Pack (SP2), Vista
256 MB RAM
CD ROM Drive
1 GB available hard-disk space
1 available USB port or RS-232 serial port (to connect to the NMC)

NOTE: This software application will not run on Windows® 95 or Windows® 98 or early versions of Windows®

NOTE: This software application is not available for MAC.

1.6 Dealer Kit

A Dealer Kit is recommended when using the SSC. The Dealer Kit contains:

- 1 - SSC Installation CD (which include)
 - SSC Installation Software
 - Soft Copy Manuals (PDF Format)
 - Release Notes and other technical information
- 1 - USD to Serial Adapter (for connecting to the NMC)
- 1 - Serial Cable (for connecting to the NMC)
- 1 - Bar Code Scanner*

The Dealer Kit is available from the Distributor or from Signalink Technologies.


*The bar code scanner is recommended for scanning the ISDs' VID rather than entering the data manually. It greatly reduces the amount of time required to enter the data and may prevent data entry errors.

2.0 SSC Installation

2.1 Installation Quick Start

Step 1

Insert the installation CD into the laptop. The installation software will automatically run the set-up program.

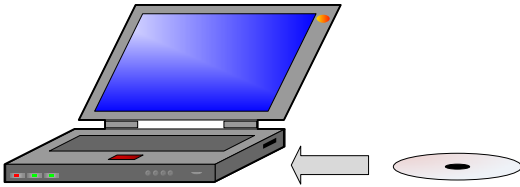


Step 2


The following screen will appear. Click **Install**.




When the Setup has completed, the following pop-up will appear. Click **OK**.

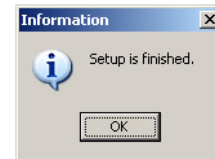


Step 3

The following screen will appear. The default Folder Path for all SSC files is C:\Documents and Settings\Office\My Documents. In Windows®, this is referred to as “My Documents”. If a different folder is preferred, click the  icon to the right of the Folder Path field and the explorer screen in Step 4 will appear.

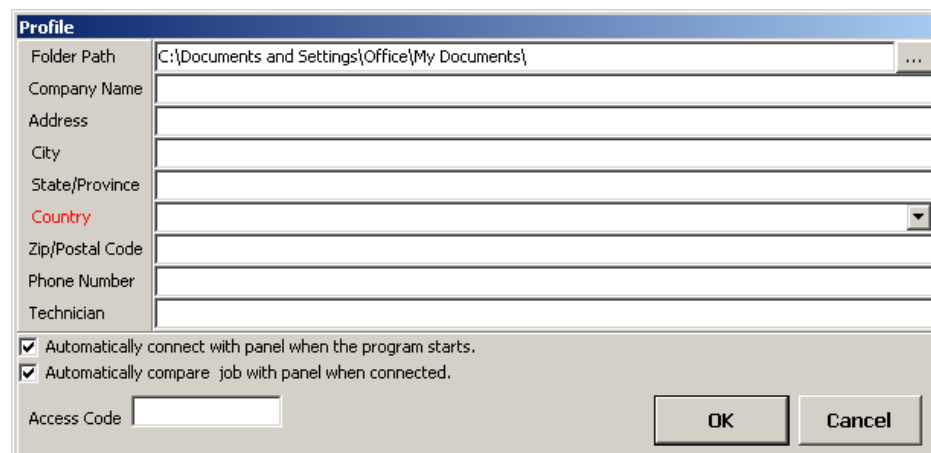

Step 4

Navigate to or create a different folder as desired. Once the folder has been selected, click **Save**. The file "JobList" will be created in the folder chosen.

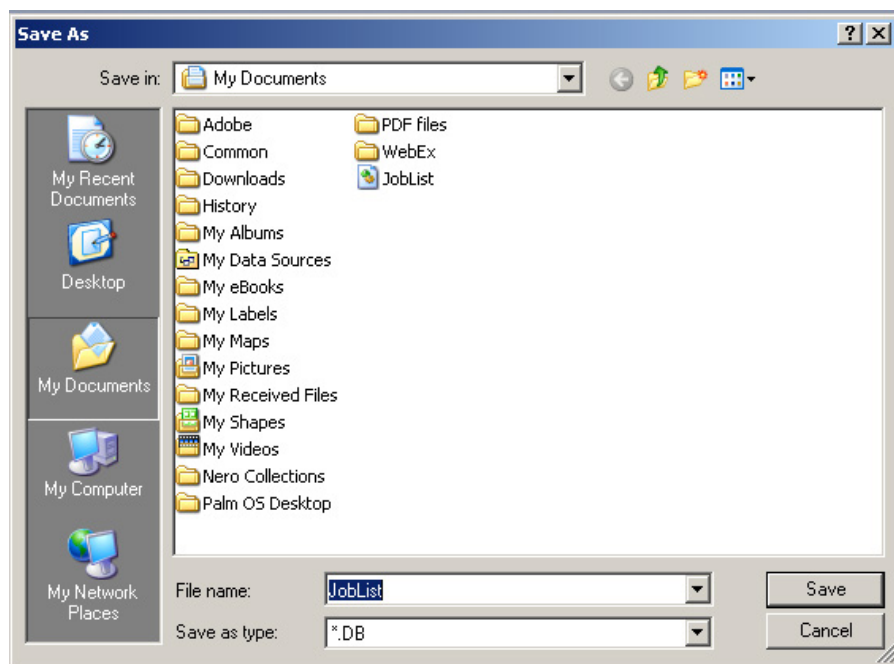
Step 5

Finish filling out the information in Profile dialog box. The "Country" field is required as this will pre-populate the NMC Model in the Job file. The "Access Code" is for access to special diagnostic and critical engineering functions. Leave it blank. When all the fields are completed, click **OK**.

Profile	
Folder Path	C:\Documents and Settings\Office\My Documents\
Company Name	
Address	
City	
State/Province	
Country	
Zip/Postal Code	
Phone Number	
Technician	
<input checked="" type="checkbox"/> Automatically connect with panel when the program starts. <input checked="" type="checkbox"/> Automatically compare job with panel when connected.	
Access Code	
<div>OK</div> <div>Cancel</div>	

***** Installation is of the Signalink System Configurator is complete! *****

3.0 SSC Overview

3.1 Overview

Refer to the NMC Programming Manual (077.0045) for information regarding system configuration, parameter settings and other system requirements. The Signalink System Configurator (SSC) provides a means of programming the NMC via a laptop. This document explains the how to use the SSC software but the configuration settings etc., are explained in greater detail in the NMC Programming Manual.

Programming NMC via the SSC is similar to programming the NMC manually with regards to the tasks required and the order in which they need to be performed. As with programming the NMC manually, knowing how the system is to be configured prior to programming will save time and repeated steps. Below is a list of parameters that should be known prior to programming the SSC and the NMC.

- NMC Mode configurations: **Accessory, Accessory With Strobe** or **Stand-Alone**.
- NMC Model configurations: **US** or **Canadian**
- If the NMC is configured as a Stand-Alone unit, the time settings for: **Auto Silence** and **Signal Silence Inhibit**
- ISD Alarm Type: **Temporal, Marching** or **Continuous**.

3.2 The Job File

The file that contains all of the job information is called the Job file. When created, the Job file contains the job site information, the Device list and NMC configuration settings. The Job file can be created any time and can be created remotely without being connected to the NMC. When connected to the NMC, the Job file must be sent to the NMC which sets the NMC configuration settings and downloads the Device list into the NMC. When connected to the NMC, the event logs can be retrieved from the NMC. The log information is also stored in the Job file. In essence, the Job file contains all of the information associated with that particular installation.

3.3 Programming Steps

There are a few programming steps that are required to program the NMC and start up the system. Below is an abbreviated step-by-step instruction.

STEP 1: Create the Job file

STEP 2: Enter the site and contact information

STEP 3: Enter the NMC configuration information

STEP 4: Enter the ISDs into the Device list

STEP 5: Save and close the Job file

At the NMC, connect the laptop to the NMC.

STEP 6: Open the Job file created

STEP 7: Send the Job file to the NMC

STEP 8: Start Enrollment

Once enrollment has completed:

STEP 9: Get the Job from the NMC. This will retrieve important network addressing information that may be necessary for diagnostic purposes.


STEP 10: Save and close the Job file.

The above programming steps are explained in greater detail in the following Sections.


4.0 Using the Configurator

4.1 Starting up the Configurator

To start the Signalink System Configurator (SSC), click the on the Windows® Start button, and then click All Programs. Click on the Signalink program bar and then click the SSC Icon. Alternatively, click on the SSC Icon located on the desk top.

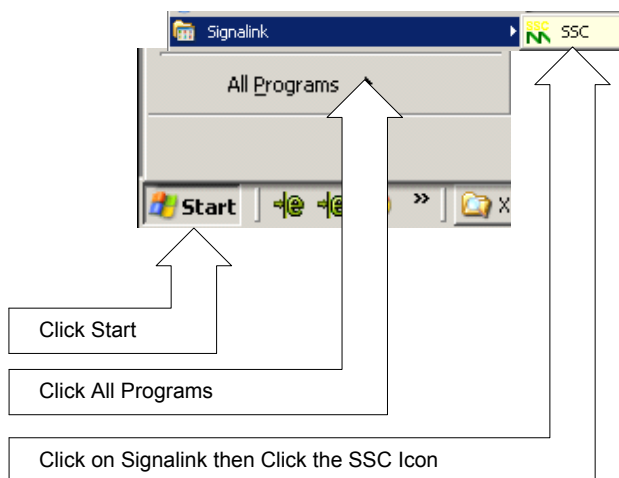


The following screen will appear. This is the SSC **Main Screen**.

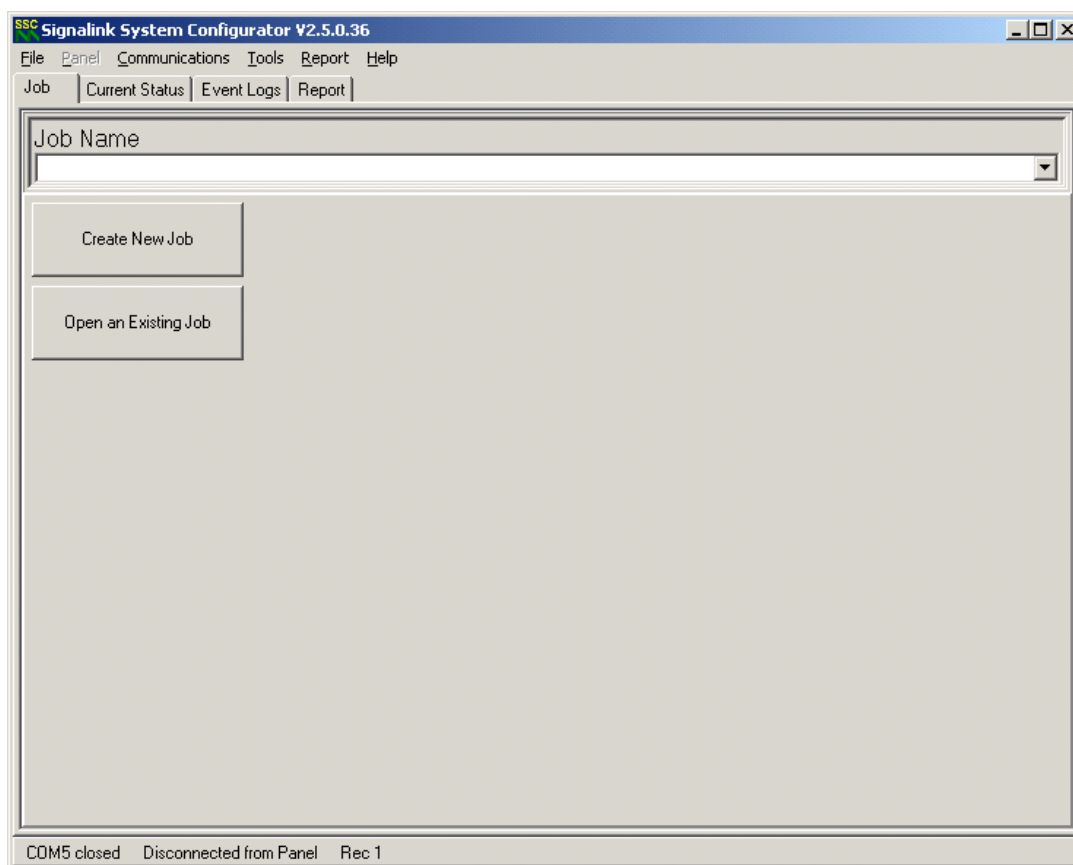


SSC Main Screen

4.2 Creating a New Job File

To create a New Job File, click the **Create New Job** button on the SSC Main Screen. In the **New Job Name** pop-up screen, enter a new Job name then **OK**.

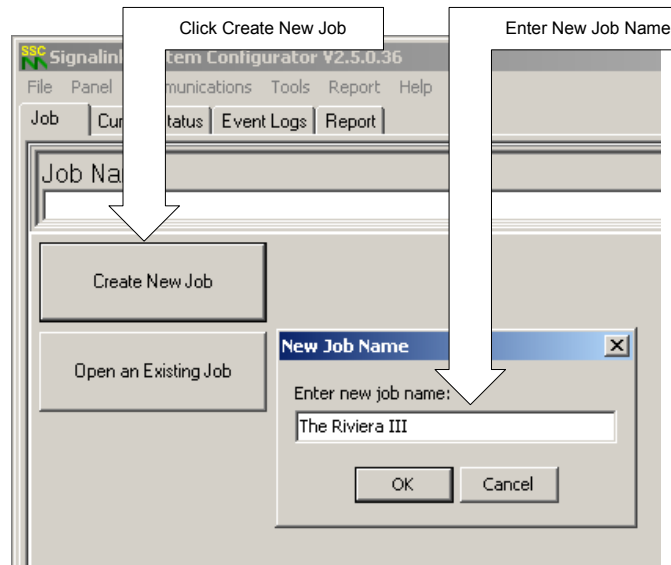

The following screen will appear: Note that the screen tab is **Job** and the Job Name is what was entered above

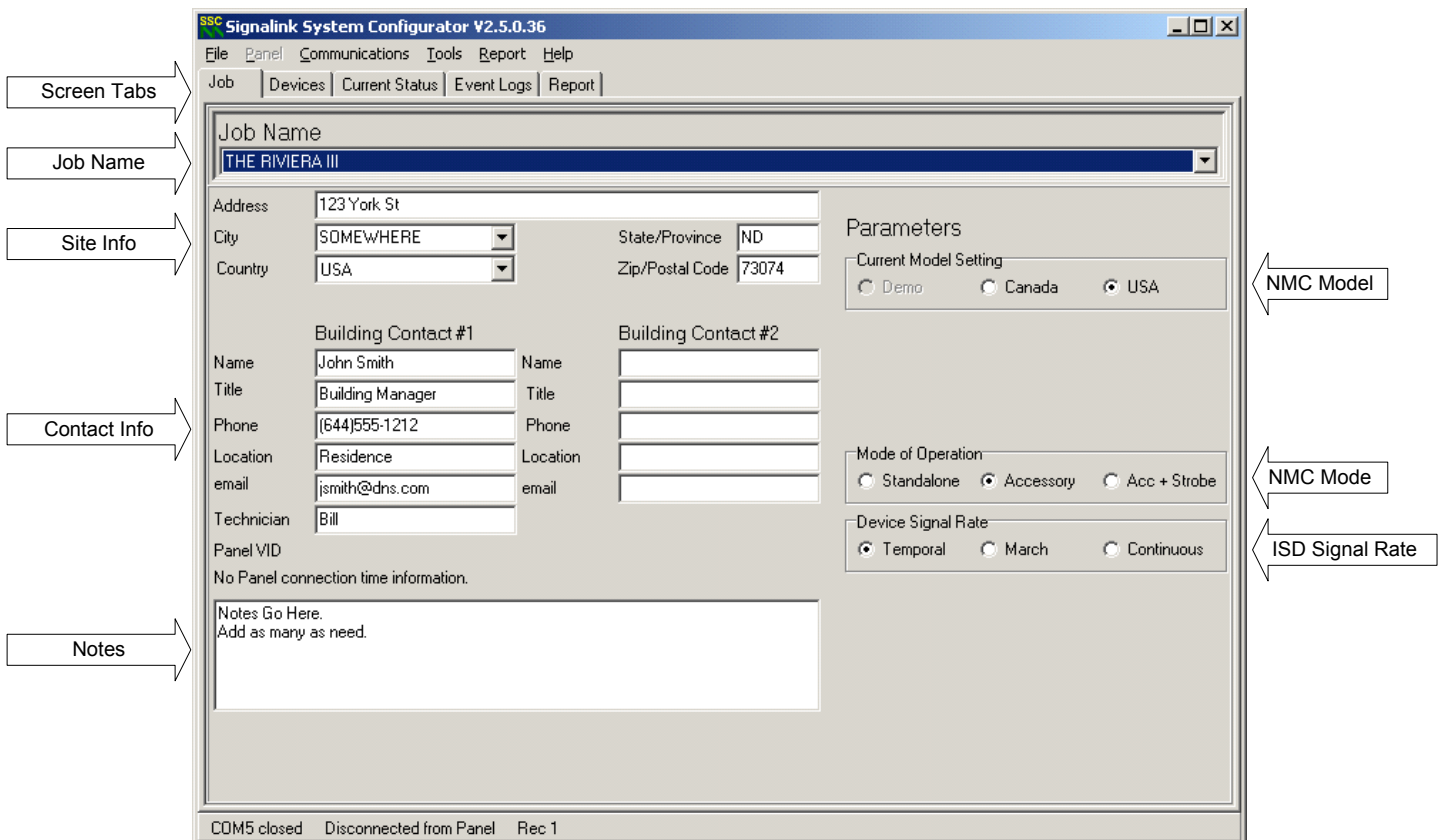

Enter the Site information, any Contact information and any Notes. The Site information is used on the reports if any are generated. The Contact information and Notes are for reference.

Select the NMC Model (US or Canadian). This will default to the Country setting that is selected in the Profile. See Step 5 of Section 2.1 (Installation Quick Start).

Select the NMC Mode (Standalone, Accessory or Acc + Strobe). Refer to the Programming Manual for explanation of NMC Modes.


Select the Device Signal Rate. This is ISD signaling rate.

This is a good time to save this Job file. In the upper left corner of the screen, click **File > Save Job**.

4.3 Entering Devices into the Device List

Use of a bar code scanner to scan the ISDs' VID is highly recommended when creating the Device list. It saves time, reduces the amount of typing and may prevent data entry errors. The bar code scanner is included in the Dealer Kit. **See Section 8.6** – Using the bar code scanner.


On the SSC Main Screen, click on the **Devices** tab. The following will appear.

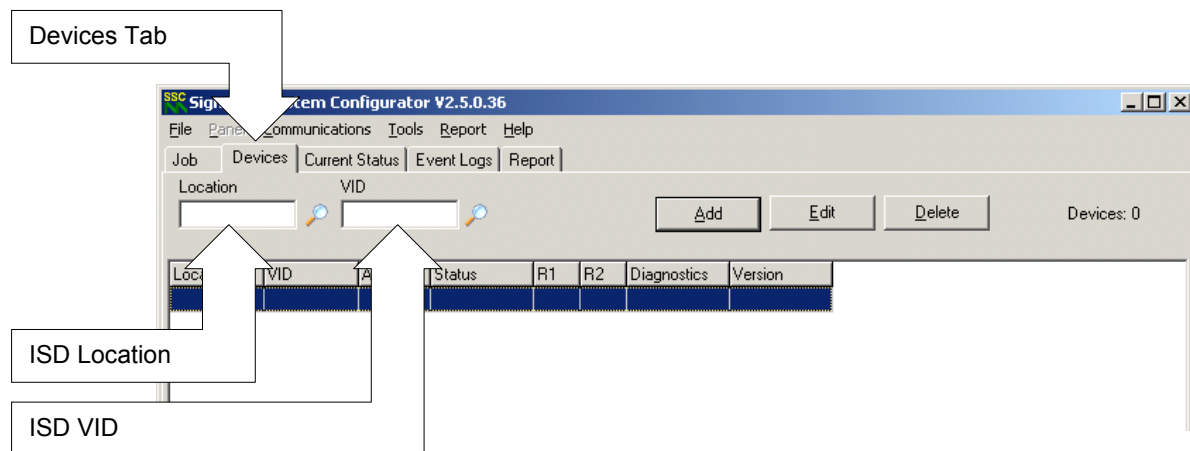

Enter the location of the ISD. It is generally the suite number or physical location. This field can be up to 8 alpha-numeric characters, upper or lower case. Dashes are allowed but **NO spaces or any other special characters**. After the location is entered, tab over to or click in the VID field. If using a scanner, scan the VID. When scanned, the scanner should beep and automatically advance to the next device to be added. If manually entering the VID, enter the VID then press **ENTER** or **ADD**.

NOTE: Duplicate Locations and duplicate VIDs are **NOT** permitted. If more than one ISD is required in a particular location, use a suffix such as -A or -1, etc.


As devices are added to the Device list, they will appear in the Device list table. It will list the ISDs' location and VID. It also gives a count of the number of devices in the list. The other information in the table is gathered from the NMC during and after enrollment. This information is discussed in **Section 5 - Reports**.

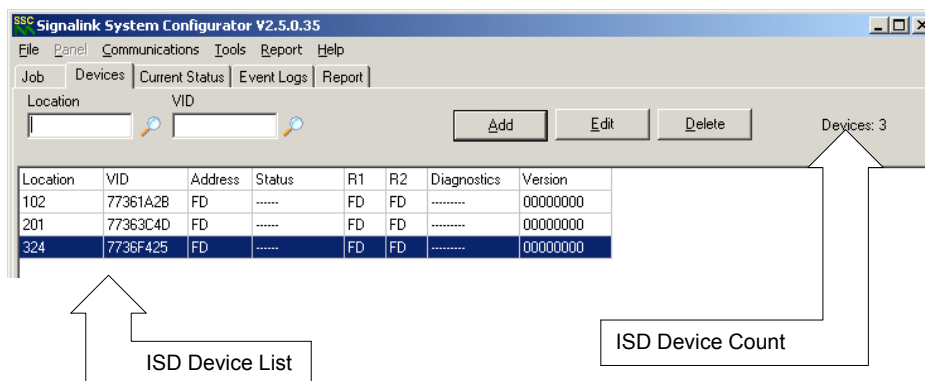


Once the Device list has been completed, save the Job file. Click **File > Save Job**.

4.4 Connecting Serial Cable to the NMC


Once the Job file has been created, the laptop needs to be connected to the NMC to download the Job file into the NMC. If the laptop has an RS232 serial port, connect the serial cable to the serial port. If the laptop only has USB ports, a USB to Serial adapter is required. This adapter is included in the Dealer Kit. If this is the first time a USB to Serial adapter is used on the laptop, the driver software for the adapter may need to be installed. Follow the manufacturer's instructions included with the USB to Serial adapter to install the driver software. Connect the serial cable to the USB adapter. Remove the dead front on the NMC to gain access to the RS232 (DB9) connector and plug the serial cable into the connector J118.

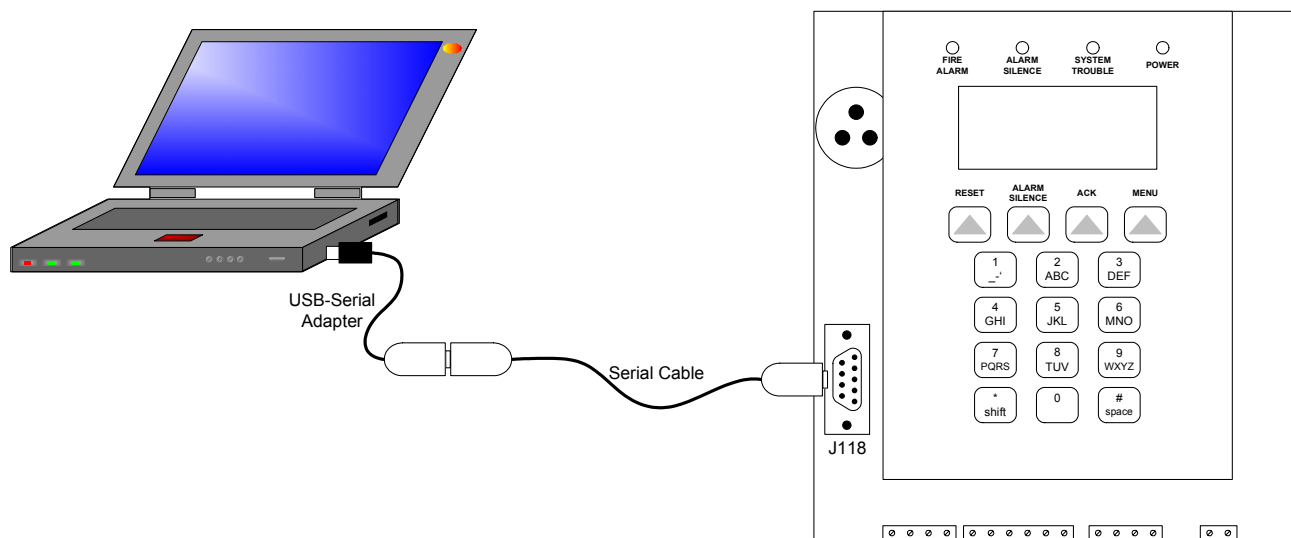


NOTE: A Ground Fault trouble may be displayed on the NMC when the cables are connected to the NMC. This is a normal condition. Press the  key on the NMC Keypad to silence the buzzer.

4.5 Connecting to the NMC


If the SSC software has been shut down or exited, restart SSC. Open the desired Job file. To open the Job file, click on the **File > Open Job**, OR click on the **Open Existing Job Button** OR click on the **Job Name** pull down and click on the appropriate Job file. This becomes the **Active Job**, meaning it is current Job that is open in SSC.

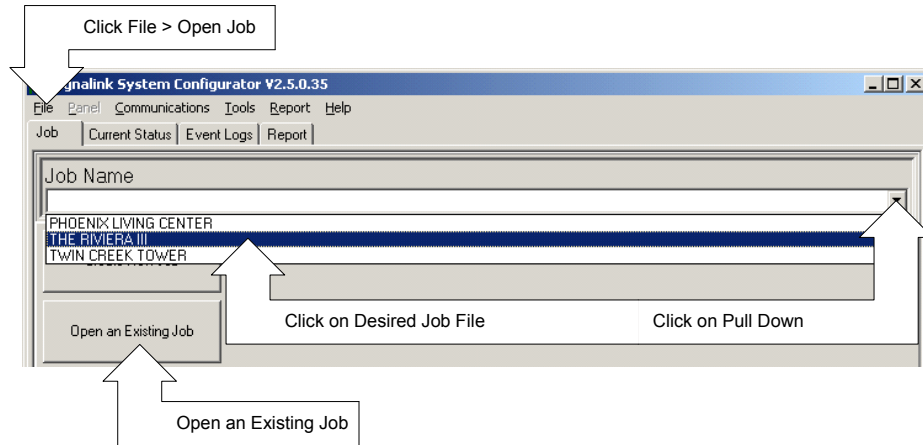


Once the cables are connected to the NMC and the Job file is open, click on the **Communications** pull down menu and click **Connect**, or press **F10** at any time.

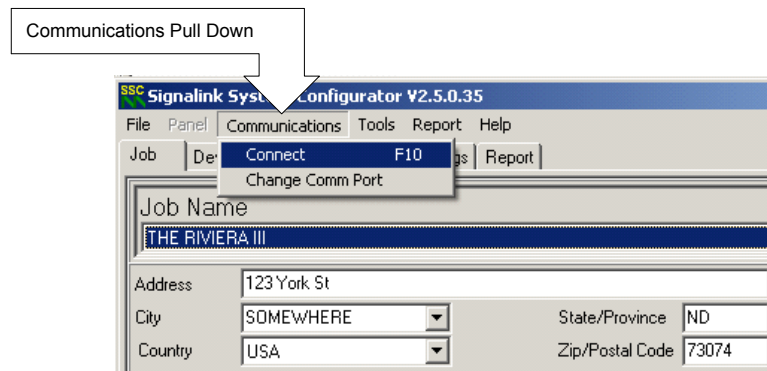


The bottom Status Bar will indicate the connection status. If the wrong Com port is selected or if there is some other problem with the connection, the Connection Attempt count will continue to increase since it can't establish connection. The most common cause is an incorrect Com port selection. To change the Com port, click **Change Comm Port** on the **Communications** pull down and select a different Com Port. If it still fails to connect, a cabling problem may be the issue.

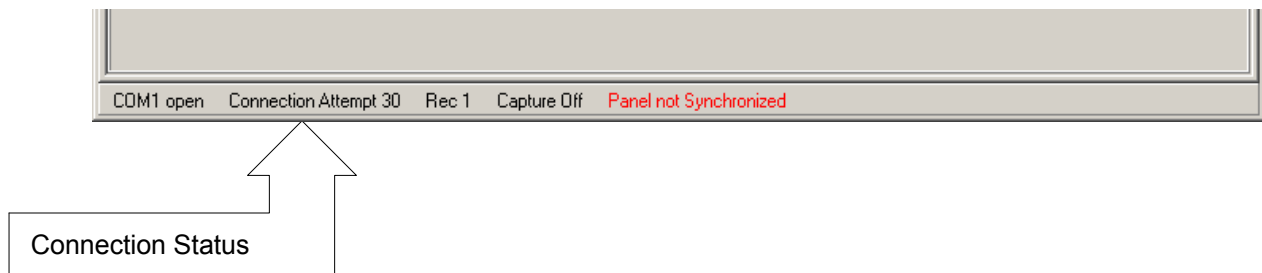

When communications is established with the NMC, the Status Bar Connection Status will indicate **Panel Connected [VID]** where VID is the VID address of the NMC. In this example, the VID of the panel is 77364900. On the NMC LCD display, NMC will also indicate **Connected To Computer**.

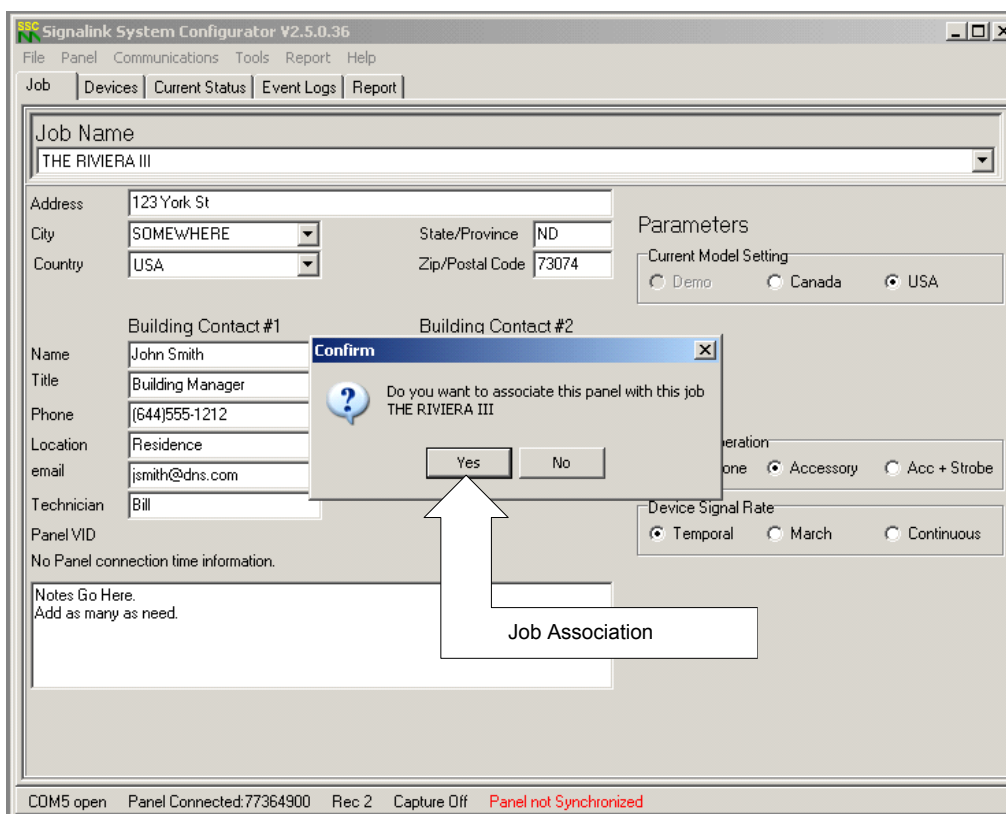

Panel Connected

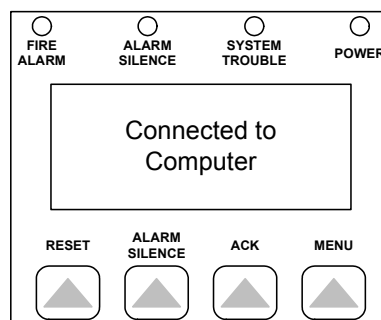


NMC Display when connected


Once connected, a pop-up window will appear and prompt the user: **Do you want to associate this panel with this job [Job file name]**. This will record the NMC's VID with the Job file and link the Job file name with the VID of the NMC. Click **Yes**. Job Association is discussed in **Section 7 – Post Installation**.

4.6 Sending Job to Panel

The next task is to send the Job file, which contains the Device list and NMC configuration to the panel. Click on the **Panel** menu and click **Send Job to Panel**.

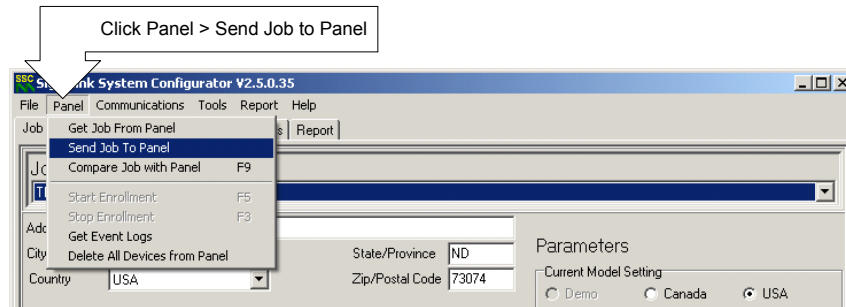


When the Job file has been successfully sent to the NMC, the status bar will indicate **Panel Synchronized**, meaning that the Job file on the laptop matches, or is synchronized, with the NMC.

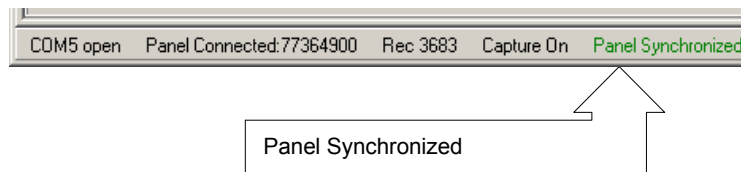

4.7 SSC Status Bar

Below is a view of the SSC Main Menu Status Bar. The status bar shows the connection status and other information regarding the connection state with the NMC.

- 1 Indicates which Com. Port is Opened on the laptop
- 2 Indicates the number of attempts the laptop is trying to establish communications with the NMC or Indicates the NMC is connected and the VID of the NMC
- 3 When the laptop is connected to the NMC, it constantly gathers data (Records) from the NMC. This is the record count of the number of records received from the NMC.
- 4 Capture is a special diagnostic function that collects certain network protocol information. The Capture function is a special function and is normally On when connected, Off when not connected.
- 5 Panel / Job file Synchronization. When the laptop is connected to the NMC, and when instructed to do so, the laptop will compare the information in the Job file to the information in the NMC. If the information between the Job file and the NMC are not the same, the laptop and the NMC are NOT **Synchronized**. When the information in Job file and the information in the NMC are the same, the laptop and the NMC are considered Synchronized. See **Section 7 – Post Installation** regarding Synchronization.

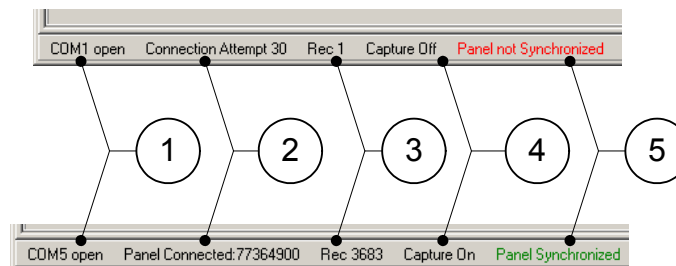


4.8 Enrolling ISDs

Once the Job file has been sent to the NMC and the panel and laptop are synchronized, the ISDs must now be enrolled. Reference the NMC Programming Manual for discussion on enrollment. To enroll the ISDs, click on the **Panel** menu then click **Start Enrollment**, or press **F5** at any time. Enrollment can only commence if the Job file and NMC are Synchronized. See **Section 7 – Post Installation**.


IMPORTANT

All ISD MUST be plugged in and powered up prior to starting enrollment. The enrollment process will struggle and may take a considerable amount of time to complete.

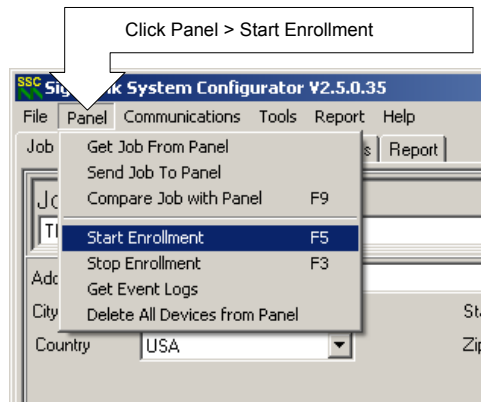


The enrollment status can be viewed in a couple of ways. On the Devices Tab, the Status column shows that status of each ISD, including any problems that may exist.

NOTE: Most fields in SSC have a Mouse-Over feature meaning when the mouse is over a particular field, a message or definition pop-up box will appear. In this case, the red mouse cursor resting over the Status column shows a definition of all of the letters in the status column. "E" indicates that the devices are enrolled.

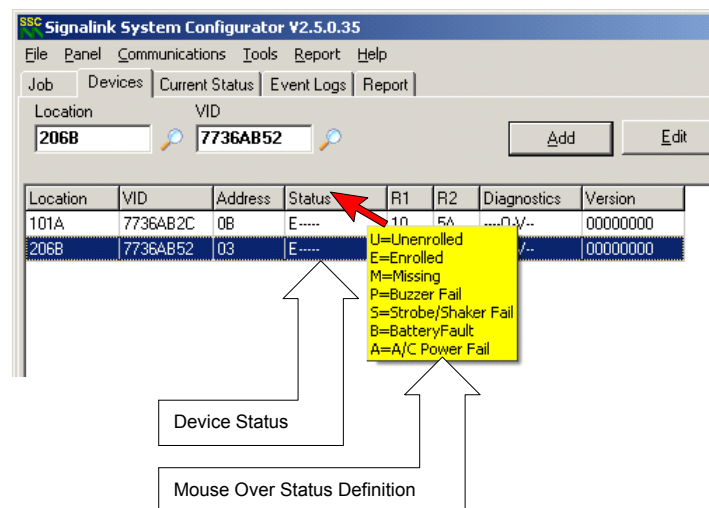

4.9 Viewing Current Status

Another way to view the enrollment status, as well as the overall system status, is to view the **Current Status** screen. Click on the **Current Status** tab. It will show the devices and their status as they enroll or the overall system status after enrollment. In the example below, 1 device is indicating a Battery Fault

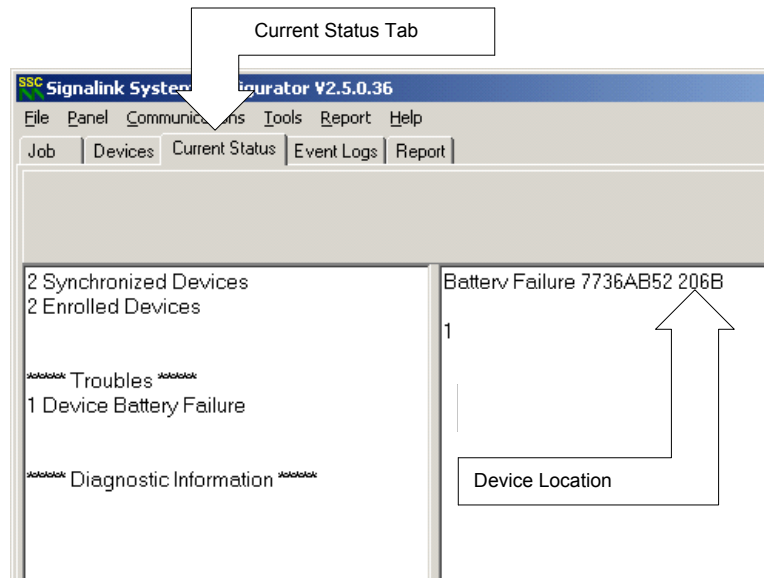


This concludes the enrollment process. The Job file should be saved at this time. Click **File > Save Job**.

5.0 Reports

5.1 Creating a Commissioning Report


It is recommended and often required to create a Commissioning Report at the conclusion of the installation. SSC will create a commissioning report based on the current status of the system. If there are System Troubles at the time of report creation, it will indicate those troubles in the report. The report will be populated with the Site information that was entered as well as the information contained in the Profile. In addition, notes can be added to the report. To create the report, click on the **Report** menu then click **Create Commissioning Report**.

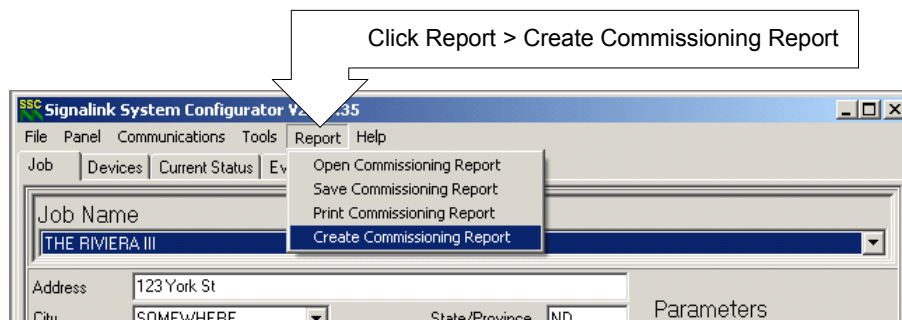

Commissioning Reports can be created any time and as often as required. However, since the Commissioning Report is created from the Job file information **AND** the current system status, the laptop must be connected to the NMC with the correct Job file opened in the SSC.

NOTE: The time / date stamp that is created in the report is retrieved from the laptop. Ensure the time and date of the NMC and the time / date of the laptop are correct and the same.

This is a typical Commissioning Report. Most of the information is automatically generated however some fields should be filled in manually. The report can be edited as need with notes and other observations anywhere on the form..

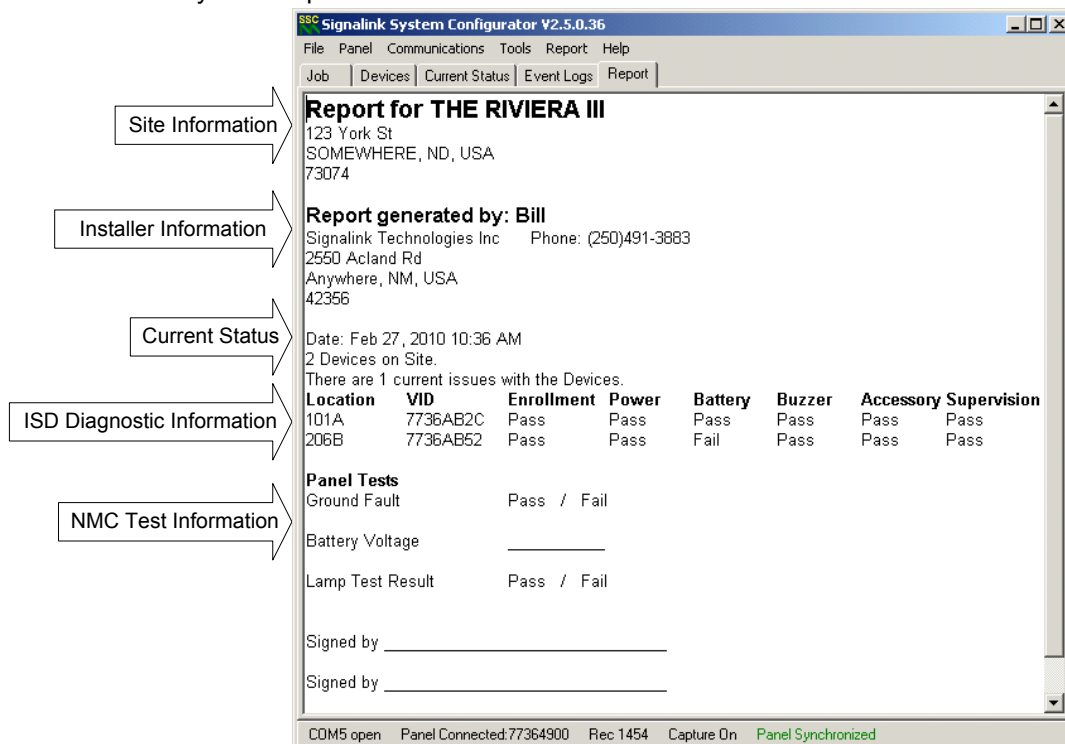

Report for THE RIVIERA III
 123 York St
 SOMEWHERE, ND, USA
 73074

Report generated by: Bill
 Signalink Technologies Inc Phone: (250)491-3883
 2550 Acland Rd
 Anywhere, NM, USA
 42356

Date: Feb 27, 2010 10:36 AM
 2 Devices on Site.
 There are 1 current issues with the Devices.

Location	VID	Enrollment	Power	Battery	Buzzer	Accessory	Supervision
101A	7736AB2C	Pass	Pass	Pass	Pass	Pass	Pass
206B	7736AB52	Pass	Pass	Fail	Pass	Pass	Pass

Panel Tests
 Ground Fault Pass / Fail
 Battery Voltage _____
 Lamp Test Result Pass / Fail

Signed by _____
 Signed by _____

CDM5 open Panel Connected:77364900 Rec 1454 Capture On Panel Synchronized

NOTE: The **Panel Tests** (NMC) are manual tests, such as measuring the battery voltage, etc. These tests and their results should be typed directly into the Report.


Ground Fault: To create a ground fault, use a wire to place a chassis ground on the NEGATIVE (-) battery terminal. The most convenient chassis ground is the wing nut used to for the door ground strap located on the left side of the NMC back box.

Warning

Care **MUST** be taken not to short any of the circuitry on the circuit boards or on the AC Power circuits. Use **ONLY** the **CHASSIS** ground for this test. **THIS TEST IS OPTIONAL**. DO NOT perform this test if uncertain.

Battery Voltage: Remove the battery leads and measure the battery terminal voltage. If this is a new Commissioning Report on a newly installed system, a few hours may be needed for the battery to reach a reasonable charge state.

Lamp Test: The Lamp Test is performed by pressing the Lamp-Test keys simultaneously.

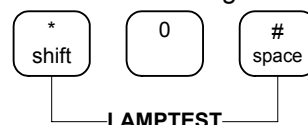

Test Results: To record the Pass / Fail condition of the NMC test, simply highlight the opposite result and press the delete key on the laptop. To enter the Battery Voltage, place the cursor on the Battery Voltage line and type in the measured voltage.

Other tests and notes can be added anywhere on this form.

5.2 Interpreting the Commissioning Report


Below is a chart describing the how to interpret the information within the report.

Item	Description	PASS	FAIL
Site Information	Information entered on the Job tab regarding the site location, etc.	N/A	N/A
Installer Information	Information contained in the Profile regarding the Installer and / or Installation company		
Current Status	Date: The current date / time of the laptop. Ensure the laptop and NMC date / time are current		
	Devices on Site: The number of devices in the device list Number of device issues (troubles)		
ISD Diagnostic Information	Location: The suite number or location of the ISD	Enrollment successful	Enrollment failed
	VID: The VID number of the ISD		
	Enrollment: The enrollment status of the ISD		
	Power: The ISD's AC Power status		
	Battery: The ISD's battery status	ISD's battery OK	Battery fault / missing
	Buzzer: The ISD's on-board diagnostic status of the buzzer	ISD's buzzer circuit OK	Buzzer fail
	Accessory: For ISDs with strobe, this indicates ISD's on-board diagnostic status Strobe circuitry	ISD's strobe circuit OK	Strobe circuit fail
	Supervision: The supervision status of the ISD.	ISD is communicating	ISD missing / unplugged
Panel Test	Ground Fault: Place a chassis ground on the battery. (See Warning above)	NMC Ground Fault OK	Ground Fault Failed
	Battery Voltage: Disconnect the battery leads and measure the battery terminal voltage	N/A	N/A
	Lamp Test: Press the Lamp Test buttons	NMC Lamp Test OK	NMC Lamp Test Failed

5.3 Saving the Commissioning Report

To save the report, click **Report > Save Commissioning Report**. In the explorer window, select the folder that is associated with the Job file, give the Report a name if the default name is not desired, then click **Save**.

Click Report > Save Commissioning Report

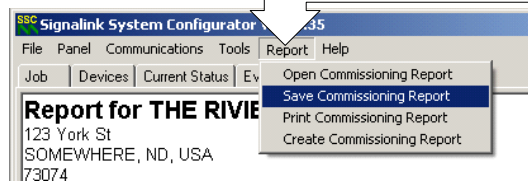

Report for THE RIVIERA III
123 York St
SOMEWHERE, ND, USA
73074


Report generated by
Signalink Technologies Inc.
2550 Acland
Anywhere, ND
42356

Date: Feb 26, 2010
2 Devices on site
There are no device issues.

Location
101A
206B

Panel Test
Ground Fault

Battery Voltage 12.5

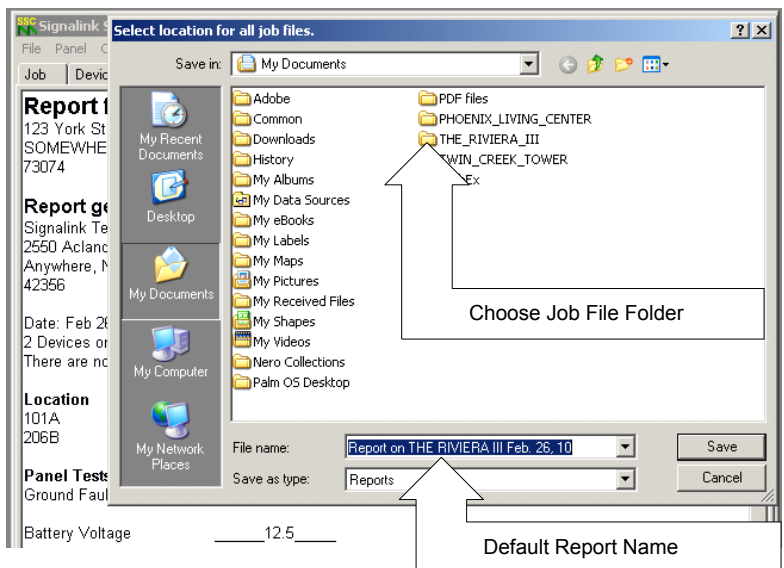

Choose Job File Folder


Default Report Name

NOTE: Once the report has been saved, it can be reopened and printed at any time. To open an existing report, click **Report > Open Commissioning Report**.


6.0 Event Logs

6.1 Retrieving the Event Logs

The Event Logs assist in troubleshooting the system and are often request by Signalink Technologies Technical Support Staff. The Event Log contains all of the Trouble logs, Alarm logs and Audit logs. They are saved in the same Job folder as the Job file. To retrieve the Event Logs, the laptop must be connected to the NMC and the correct Job file opened in SSC. To retrieve the Event Logs, click on the **Panel** menu then click **Get Event Logs**. It may take a moment to retrieve the Event logs depending on the amount of information in the logs.

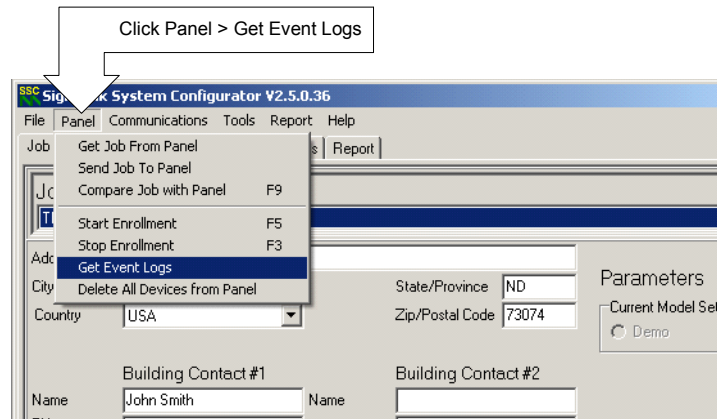

The report will appear as shown below on the **Event Logs** tab. By default, the data is arranged and sorted by Audit log first, Trouble log second and Alarm log third. The entire list can be sorted by device if desired.

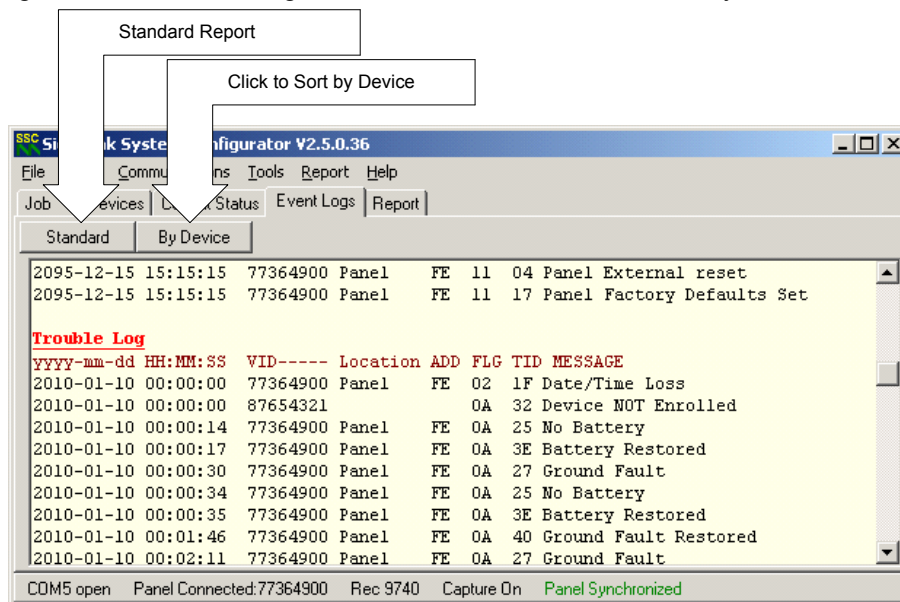

NOTE: The Event Log is saved with the Job file is saved. The Event Log is saved with the following name and format:


TroubleLogYYYYMMDD HHMMSS

Where YYYY = Year, MM = Month, DD = Day, HH = Hour (24 hour format), MM = Minute, SS = Second
As an example, if retrieved March 23rd, 2010 at 1:04:32 PM, it will appear in the Job folder as

TroubleLog20100223 130432

6.2 Opening a Saved Event Log

To open an existing Event Log saved on the laptop, ensure the appropriate Job file is opened in SSC then click **File > Open Trouble Log File**. The explorer screen will open and the list of saved Event Logs will be shown. The file names of the Event Logs are described above. Double click on the desired Log file (or click the file then click **Open**). The Log file will be displayed in the **Event Logs Tab**.

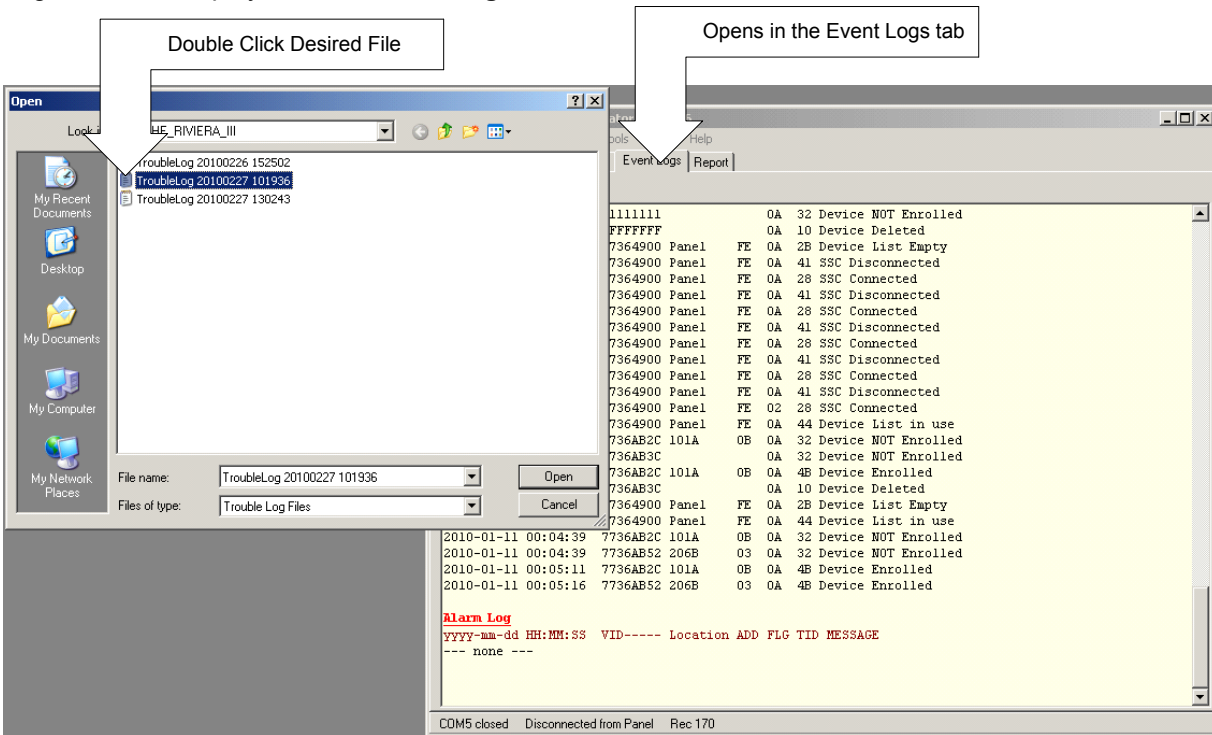

7.0 Post Installation

7.1 Laptop / NMC Synchronization Overview

Once a Fire-Link® System has been installed and commissioned, the NMC will retain its configuration and device information indefinitely. However, changes can be made to the NMC via the front panel or other means that may not get reflected into the Job file that created it. Likewise, there are things that may change on the laptop that are not reflected in the NMC. In either case, when the information in the Job file is different than the information in the NMC, they are not **Synchronized**. There are several different methods for synchronizing the laptop and the NMC, however if done incorrectly, it may produce undesirable results. Understanding what certain actions do will assist in making an informed decision. The discussion and flow chart below will preface the actions required for accurate synchronization.


Job Association: SSC requires the association of a specific Job file to a specific NMC. Essentially association means the Job file and the NMC's VID are referenced as a pair. When connection is made to the NMC, SSC will prompt the user at some point to associate a Job file to the connected NMC. This association is stored in a completely different file, other than the Job file, named **JobList**. If the user chooses not to associate a Job file to the connected NMC, no association made and connection to the NMC is terminated. There can only be one Job file associate to a specific NMC. If a different Job file is required to be associated with the connected NMC, SSC will disassociate the currently associated Job file and re-associate the different Job file.

Flowchart Terminology:

Associated Job: The Job file that is associated with the **connected** NMC.


Non-Associated Job: A Job file that is **NOT** associated with the **connected** NMC. The Non-Associated Job file may however be associated to a different NMC.

Active Job: The Job file that is currently active in SSC when connection is made to the NMC. It can be the Associated Job, the Non-Associated Job or simply no Job.

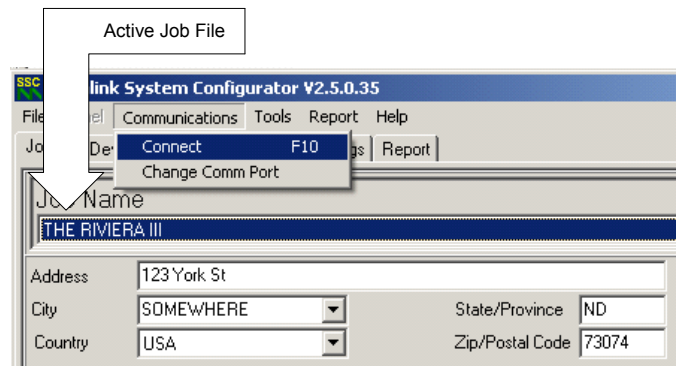

Below is a flowchart of what happens at the time of connection to the NMC and is based on certain conditions and decisions.

Note: Connection to an NMC that is not associated to a Job file implies either a connection to new NMC or the laptop connecting to the NMC does not list the NMC's VID in its JobList file. The latter would be the case if a different laptop is being used.

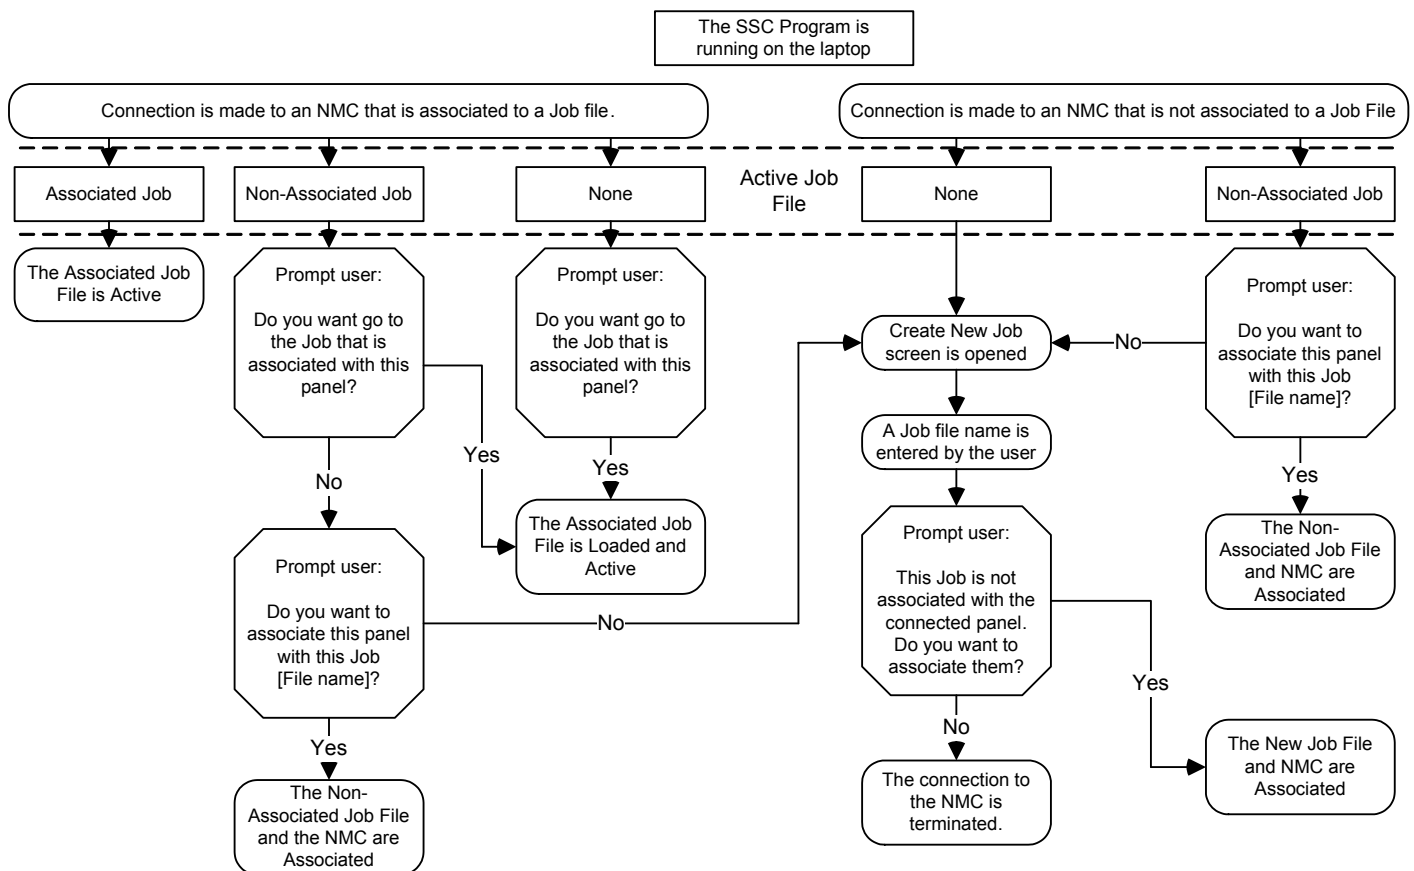

NOTE: Job file association does **NOT** mean Job file and the NMC are synchronized. It only means that a Job file is associated to an NMC. The information in the Job file and the information in the NMC may be different, as explained above.

7.2 Get Job, Send Job, Compare Job

The follow three actions will synchronize the Job file and the connected NMC. However it is important to understand what each one does.

Panel > Get Job From Panel:


This action will retrieve the information from the NMC and overwrite the information in the associated Job file. Regardless of what information was in the Job file, it is completely overwritten. **Any changes that were made to the Job file are lost.**

Panel > Send Job to Panel:

This action will send the Job file information to the NMC and overwrite any information in the associated NMC. Regardless of what information was in the NMC, it is completely overwritten. **Any changes that were made to the NMC are lost.**

Panel > Compare Job with Panel:

This action will compare the information in the associated Job file with the information in the NMC. This action is strongly recommended if it is uncertain if any changes to either the Job file or the NMC were made. This action will display any differences between the Job file and the NMC. It will also give the user the opportunity to decide which differences are correct and whether to make the corrections to either the Job file or NMC. When this action is performed, the following screen will appear **IF** there are differences.

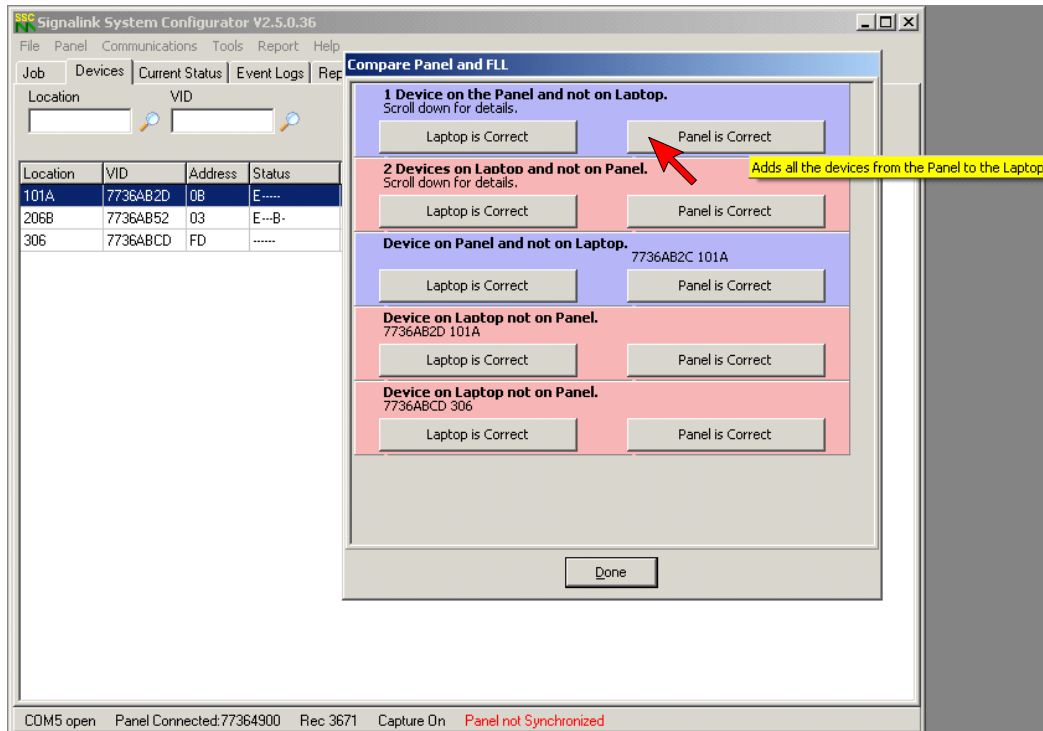

The "Mouse-Over" function will explain what actions will result when the particular option is clicked. In this example, two things have changed between the Job file and the NMC. Note that a single change may appear as two. The first two lines indicates the number of differences and which file (NMC [Panel] or Job [Laptop]) the changes are observed. The details of the differences are indicated on the subsequent lines. A detailed explanation is described as follows: (Next Page)

Change 1 (in blue): Indicates that there is a device in the NMC that does not appear in the Job file. The NMC shows device 101A having a VID of 7736AB2C. Device list (Job file) shows device 101A having a VID of 7736AB2D.

Change 2 (in pink): Indicates that there are two devices in the Job file that do not appear in the NMC. The Device list shows device 101A having a VID of 7736AB2D while the NMC shows device 101A having a VID of 7736AB2C. This is a case where a single difference shows up as two differences for essentially the same difference. The other difference is there is device 306 in the Device list that does not appear in the NMC.

In this example, device 101A may have been defective and replaced with a different device, thus having a different VID. In this case, the NMC is correct and the Job file needs to be corrected. Click **Panel is Correct** on the second blue line. Device 306 may be a device that needs to be added to the NMC. Click **Laptop is Correct** on the third pink line and device 306 will be added to the NMC's Device list.

NOTE: As actions are taken, the position of the differences displayed will change.

If it is certain that one or the other are totally correct, clicking on the actions in one of the first two lines are global and will force all of the differences to correct the NMC or the Job file.

8.0 Miscellaneous

8.1 Editing the Device List

The Job file Device list can be changed at any time. Note however that any changes made that are made to the Device list and sent to the NMC may require other actions, such as re-enrolling devices or deleting devices, at the NMC. To edit a device, click on the **Devices** tab then click on the device that is to be edited. The information will be displayed in the Location and VID fields. Make the changes necessary then click **Edit**.

8.2 Adding a Device to the Device List

To add devices to an existing Device list, click on the **Devices** tab. Enter data into the Location and VID fields then click **Add**. When the Job file is sent to the NMC, the added devices **MUST** be enrolled.

8.3 Deleting the NMC's Device List

To delete the entire Device List on the NMC, the laptop must be connected to the NMC. Click **Panel > Delete All Devices From Panel**.

WARNING: This will permanently delete the NMC Device list.

8.4 Changing the Profile

The profile contains the installer's information, such as name, address, etc. To change the profile, click **Tools > Profile**. Make any changes needed.


8.5 Importing Earlier Version Job Files

SSC has the ability to import earlier versions of Fire-Link Load Job files, V2.3.0 and V2.3.1. To import these files, click **File > Import Job(s)** then click the appropriate job file version. If it is uncertain which versions are which, contact Signalink Technologies Technical Support.


8.6 Using the Bar Code Scanner

Using a bar code scanner for scanning the ISDs' VID into the Device list is a very fast and accurate way to populate the Device list. The bar code scanner supplied with the Dealer Kit simply plugs into the laptop or computer via USB.

Plug the scanner into the laptop. Click on the Devices tab. Enter the ISD location then Tab to the VID field. When the cursor is in the VID field, scan the bar code.

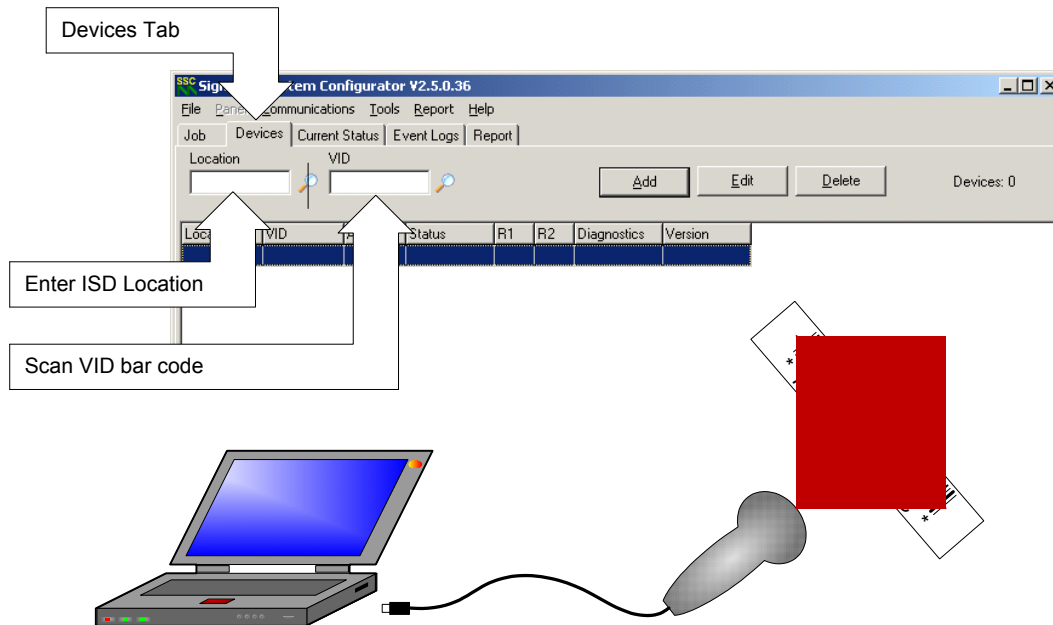

The ISD bar code is location on the back of the ISD. One convenient way to scan the bar code is to slide the ISD Box Cover enough to expose the scan hole on the bottom of the box. The ISD location can be written on the side of the box. In most cases a list of the ISDs with their VIDs are packed with the Case Box of the of the ISDs. This list can be scanned and the location written on the list. It is important however, to keep the association of the ISD location and its VID.

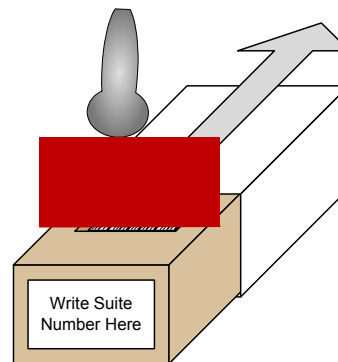

NOTE: Some scanners have a button on the top of the scanner. It may require a button press to cause the scanner to scan.

[illegible]

We strive to make our documentation accurate and easy to understand. To help us improve our documents, your feedback is very important to us.

feedback@signalink.com

Signalink Technologies Inc.
www.signalink.com
 Technical Support: 1-888-765-7514

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

