

# BC-160 Battery Cabinet - Installation Instruction

The BC-160 Battery Cabinet it comes complete with a lockable bottom hinged door that opens downwards to allow access to the battery compartment.

- Place the BC-160 Cabinet in a clean, dry, vibration-free area, a minimum of 6" below the Fire Alarm Control Panel it is being used with.
- Align the BC-160 Cabinet and Control Panel knock-outs so as to simplify conduit installation.
- Mount the BC-160 Cabinet, using the 6 pre-drilled mounting holes, to the wall.
- Connect the BC-160 Cabinet to the Control Panel cabinet with conduit between the adjacent knock-outs.

Note: Door not shown / All dimensions in Inches

