


### Module Mounting Locations

The FNC-2000 Fire Network Controller module provides network capability for the Network Fire Alarm system. One module is required per each network node panel. The FNC-2000 Fire Network Controller module is mounted in position 2 over the network main fire alarm board.



**Note:** Model FNC-2000 is used with both Flex-Net™ and MMX™.

**Figure 1: FNC-2000 Fire Network Controller Module**

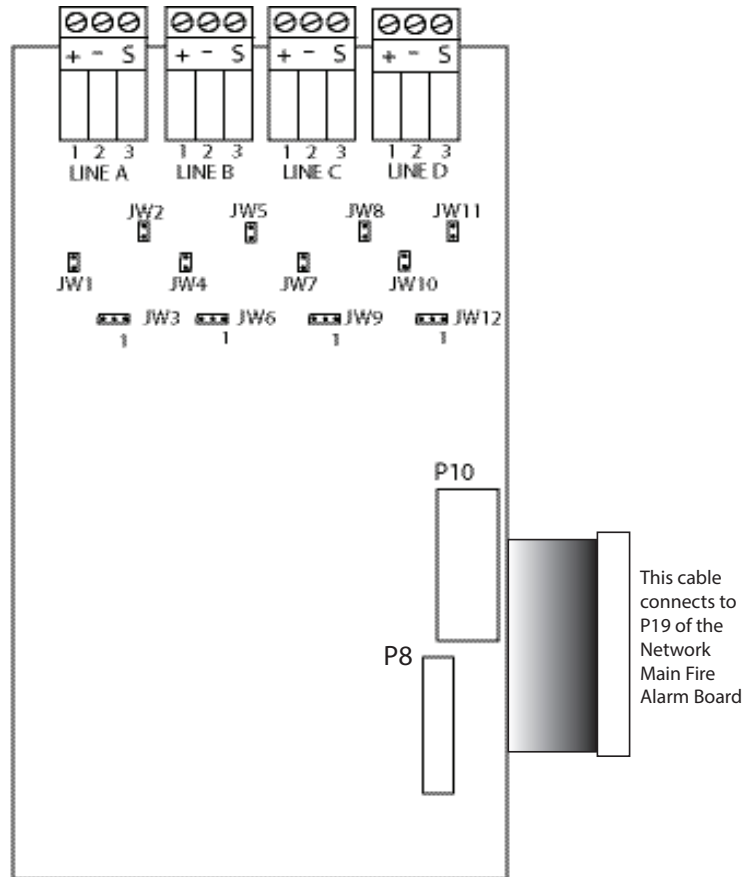

**Table 1: FNC-2000 Module List of Connectors and Jumpers and Functions**

CONNECTOR OR JUMPERS	Function
P8	P8 is for Factory Use Only.
P10	P10 connects to P1 of the FOM-2000-SP Fiber Optic Network Adder Module if used.
JW1, JW2, JW4, JW7, JW8, JW11	Jumpers for JW1, JW4, JW7, and JW10 equal Line Termination (always short). Jumpers for JW2 and JW8 equal Ground Fault (always short).
JW5 and JW11	Leave both un-installed. Do not connect JW5 or JW11 (open)
JW3, JW6, JW9, JW12	Jumpers for JW3, JW6, JW9, JW12 shall be present between pins 2 and 3 (far left) and remain as is.



**Note:** Network connection is through twisted cable from Line A, B, C and D. Refer to the Network Fire Alarm Manual for specific wiring and cable information.