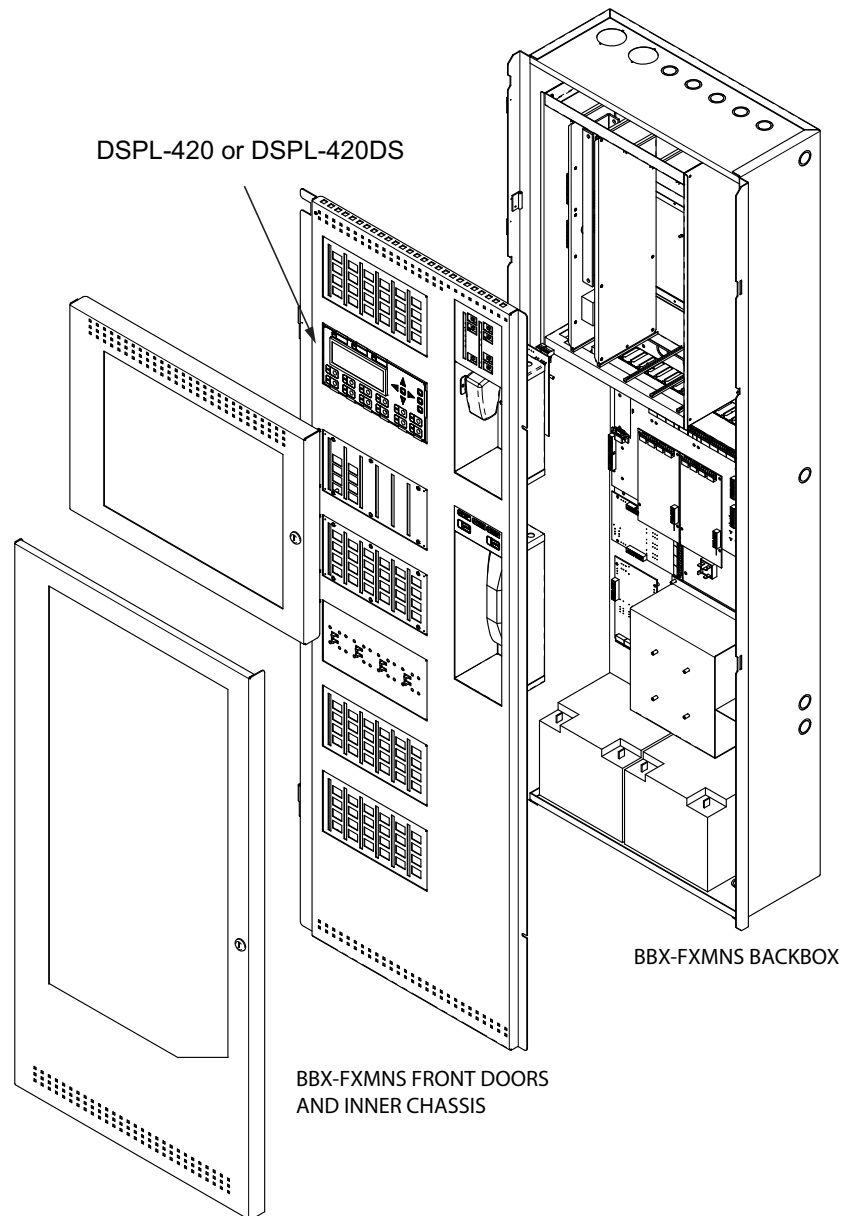


Module Mounting Locations

The DSPL-420 or DSPL-420DS Main Fire Alarm Display board mounts into the enclosure (as shown in Figure 1) as part of the display modules on the inner chassis. The DSPL-420 or DSPL-420DS is mounted to the inner chassis using the four #6 screws provided. Compatible with FX-2000, FleX-NetTM (FX-2000N) and MMX Fire Alarm panels.

Figure 1 FXMNS Enclosure Complete View**Electrical Specifications for Battery Calculations:**

Voltage: 24VDC

Current Consumption: standby current: 30mA
alarm current: 30mA