

# LT-6083 Installation of RB-FX2000MB and RB-FX2000MB12S

This document describes how to remove the old main board and install the replacement RB-FX2000MB or RB-FX2000MB12S.

**Caution: To prevent damage to the boards, always hold them by the edges.**

1. Power down the unit.
2. Disconnect the bridge, the resistor, and the ground wire from the board.
3. Remove the board.
4. Attach the replacement board to the chassis.
5. Connect the ground wire.
6. Connect the bridge wires to BR+ (red) and BR- (black).
7. Connect the resistor wires to P15 and P16.

