

LT-6084 Installation of RB-FA1000MB

This document describes how to remove the old main board and install the replacement RB-FA1000MB.

Caution: To prevent damage to the boards, always hold them by the edges.

- 1. Power down the unit.
- 2. Disconnect the bridge, the resistor, and the ground wire from the board.
- 3. Remove the board.
- 4. Attach the replacement board to the chassis.
- 5. Connect the ground wire.
- 6. Connect the positive red bridge wire to BDG+ and connect the negative black bridge wire to BDG-.
- 7. Connect the resistor wires to P11 and P12.

