

Installation of RPL-RS-042 and RPL-RS-056

This document describes how to remove the old resistor and install the replacement resistor.


If you have an FX-2000 series panel, see this page. If you have an FA-1000 series panel, see page 2.

1.0 If you have an FX-2000 Series Panel

1. Ensure that you have the right resistor.

If your panel is...	Use this resistor:
FX-2000-6 Series	RPL-RS-042
FX-2000-12 Series	RPL-RS-056

2. Power down the unit.
3. Disconnect the bridge, the resistor, and the ground wire from the board.
4. Remove the resistor by unscrewing the two screws.
5. Attach the replacement resistor using the two included screws.
6. Connect the ground wire.
7. Connect the positive red bridge wire to BR+ and connect the negative black bridge wire to BR-.
8. Connect the resistor wires to P15 and P16.

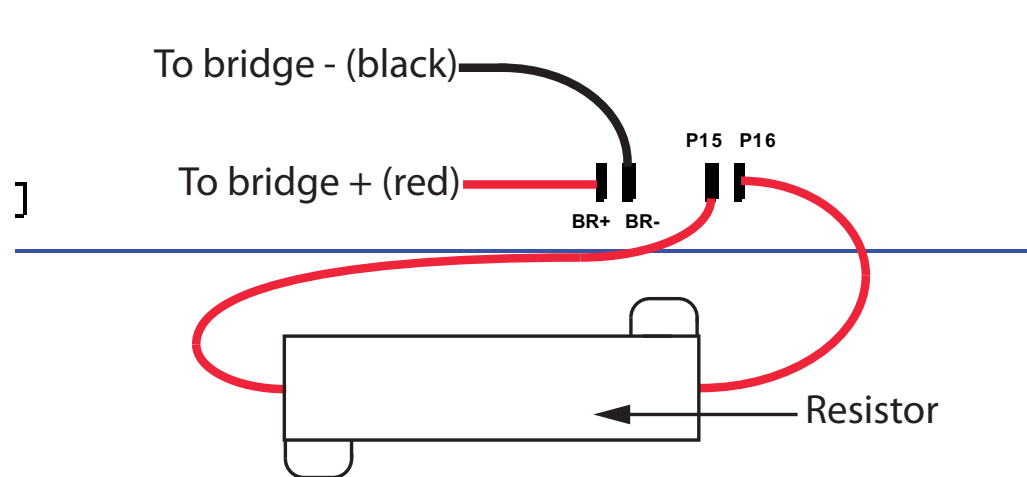

2.0 If you have an FA-1000 Series Panel

1. Ensure that you have the right resistor. .

If your panel is...	Use this resistor:
FA-1000-6 Series	RPL-RS-042
FA-1000-12 Series	RPL-RS-056

2. Power down the unit.
3. Disconnect the bridge, the resistor, and the ground wire from the board.
4. Remove the resistor by unscrewing the two screws.
5. Attach the replacement resistor using the two included screws.
6. Connect the ground wire.
7. Connect the positive red bridge wire to BDG+ and connect the negative black bridge wire to BDG-.
8. Connect the resistor wires to P11 and P12.

