



Terminal Replacement Installation Instructions

Remove these 3 4-pin terminal blocks

Replace with included 4 3-pin terminal blocks Alarm Supv Trouble