


Model RB-MD-1246 and RB-MD-1255 Replacement LCD Display & Keypad Installation Instructions

RB-MD-1246 Mounting

Unscrew the eight #8-32" locknuts that hold the existing board in place. Disconnect cable from main entry panel board and remove the display from the front door of the entry panel. Replace with new board RB-MD-1246 connect the cable and use the eight locknuts to mount the replacement board in place.


Figure 1: RB-MD-1246 Board Replacement

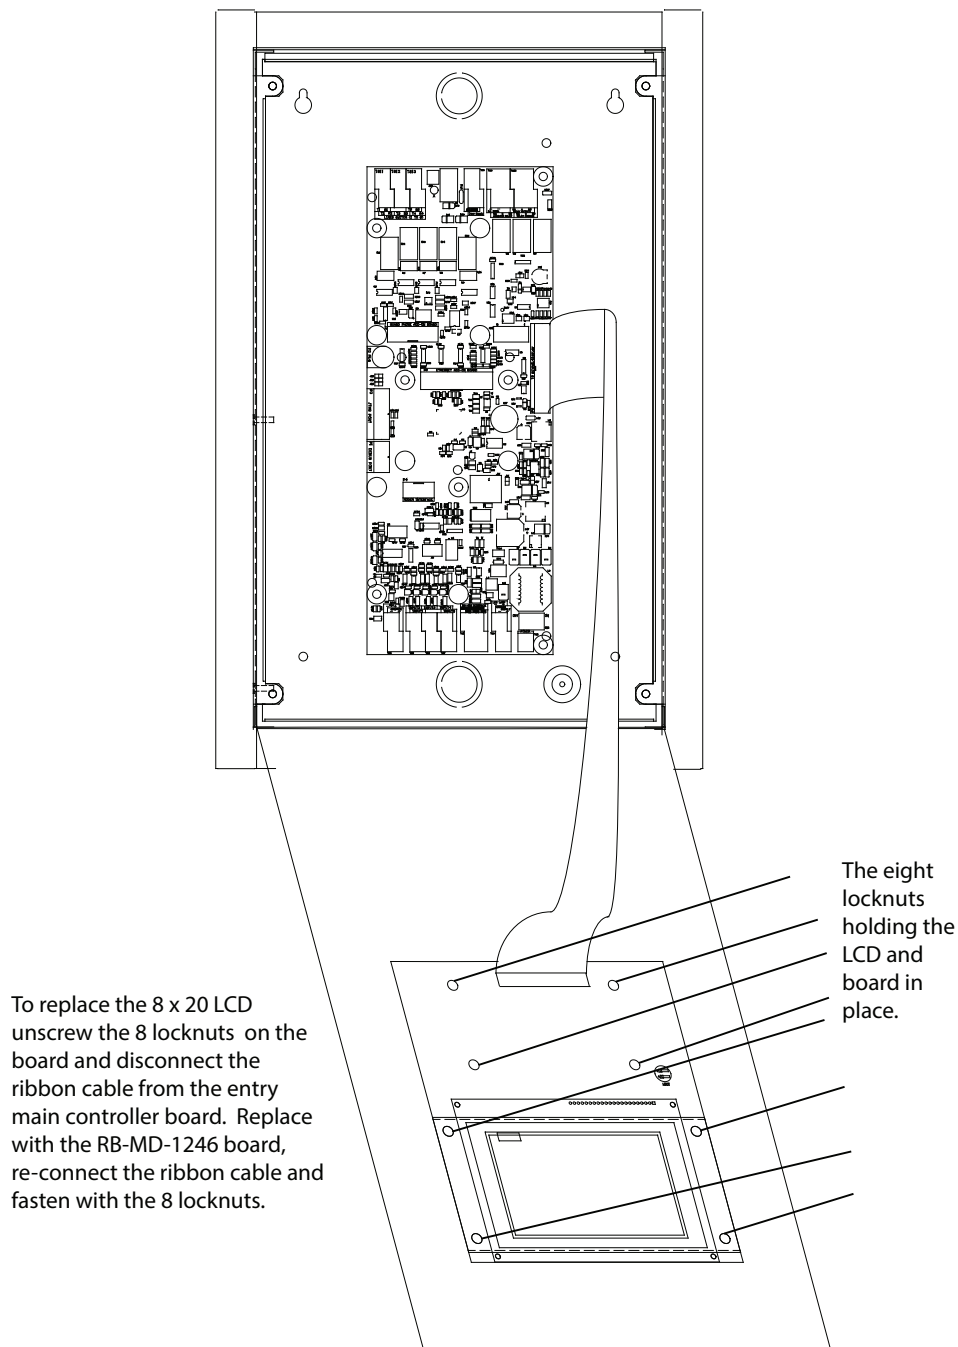

RB-MD-1255 Mounting

Unscrew the six #8-32" locknuts that hold the existing board in place. Disconnect cable from main entry panel board and remove the display from the front door of the entry panel. Replace with new board RB-MD-1255 connect the cable and use the six locknuts to mount the replacement board in place.

Figure 1: RB-MD-1255 Board Replacement

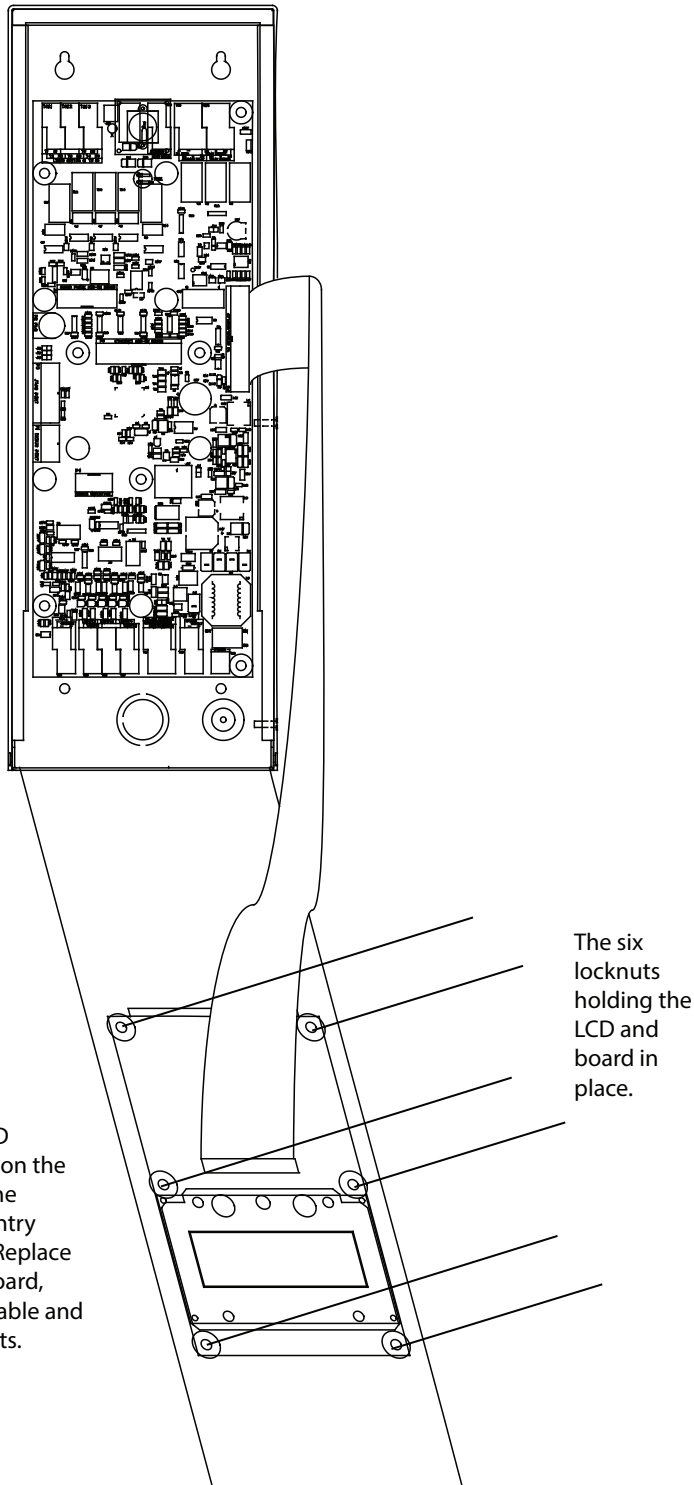

To replace the 4 x 20 LCD unscrew the 6 locknuts on the board and disconnect the ribbon cable from the entry main controller board. Replace with the RB-MD-1255 board, re-connect the ribbon cable and fasten with the 6 locknuts.

The six locknuts holding the LCD and board in place.