


# Flex-Net™ FX-4000 Quick Start

## Factory Default Jumper Settings

To ensure the correct operation of the Fire Alarm Control Panel, check that the jumpers on the main board are set correctly.

Jumper	Factory Default	Notes
JW1	Closed	Open this jumper if a PR-300 or UDACT-300 is installed
JW2	Open	Do not change
JW3	Closed on pins 1 and 2 (2 leftmost pins)	Do not change
JW4	Closed	Do not change
JW5	Open	Close this jumper to silence the on-board buzzer
P12	Closed on pins 1 and 2 (2 rightmost pins)	Do not change
Terminal	Factory Default	Notes
TS2	There is a wire connecting positions E+ and I+ (the 2 top pins)	Do not remove

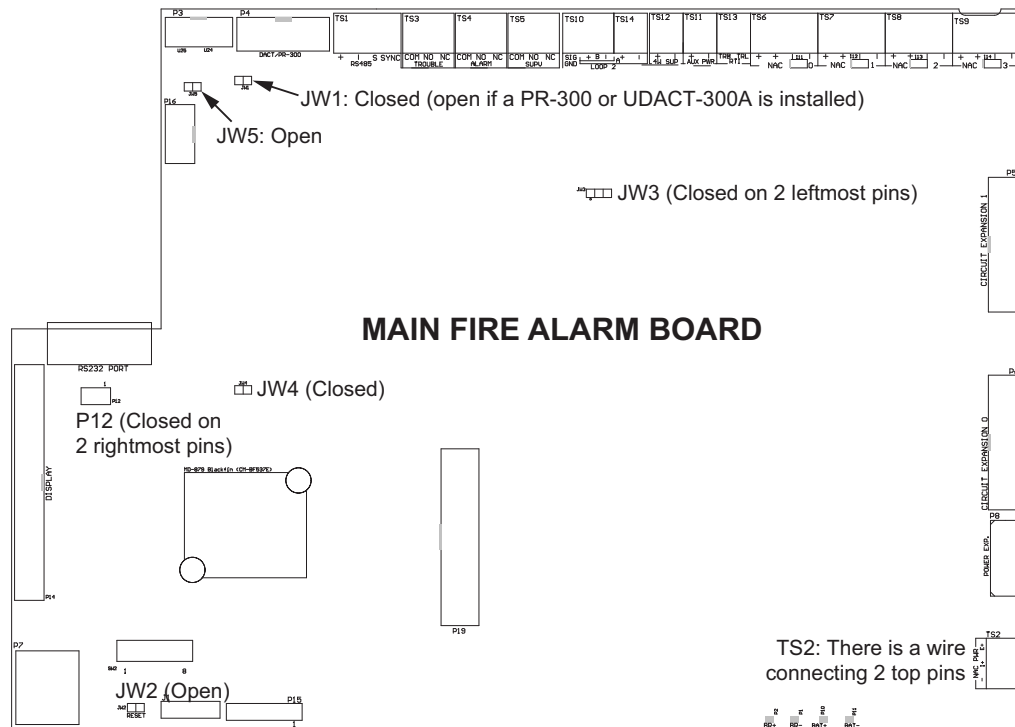

For more details, see LT-894MP the Flex-Net™ FX-4000 Installation Manual.