

# ALC-480 Dual Loop Adder Installation Instructions

The ALC-480 Dual Loop Adder module is mounted as shown below. For more information refer to the FX-401 manual LT-6670.

