


Note: Forward this document to the programmer of the system.

When you add an MP (MGC Protocol) manual station in the Configurator, it is configured as class B by default. Single stage manual stations must be configured as class A. Follow the instructions below to configure a manual station as class A. (Instructions for the MGC-400 Configurator are on page 2.)

MGC-4000 Configurator

To add an MP (MGC Protocol) manual station, follow these steps:

1. In the **Add Devices** window, click the **Device** menu and select **Dual Input (MIX4)**.
2. Click the **Option** menu, and select **Class A** for a single stage manual station and **Class B** for a two stage manual station.
3. Select **Manual Pull** in the **Type** menu.
4. Click **Add**.

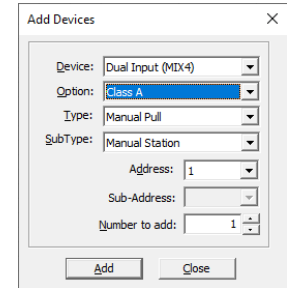

For example, to add a single stage manual station, add **Dual Input (MIX4)** and select **Class A** in the **Option** menu.

| Addr | Device | Type | SubType | IptMethod |
|------|--------------|-------------|----------------|-----------|
| 1.1 | Input (MIX4) | Manual Pull | Manual Station | Class A |

To add a two stage manual station, add **Dual Input (MIX4)** and select **Class B** in the **Option** menu. The first input is the pull handle and the second input is the stage two key.

| Addr | Device | Type | SubType | IptMethod |
|------|--------------|-------------|----------------|-----------|
| 1.1 | Input (MIX4) | Manual Pull | Manual Station | Class B |
| 1.2 | Input (MIX4) | Manual Pull | Manual Station | |

Convert a Device to Class A

To convert a class B device to class A after you have added it, follow these steps.

1. Double-click **Class B** in the **IptMethod** column for the device.
2. Select **Class A** in the menu that appears.

| Addr | Device | Type | SubType | IptMethod | F1 |
|------|--------------|-------------|----------------|-----------|----|
| 1.1 | Input (MIX4) | Manual Pull | Manual Station | Class B | |
| 1.2 | Input (MIX4) | Manual Pull | Manual Station | Class B | |
| | | | | Class A | |

To convert the device back to class B, select **Class B** in the **IptMethod** column.

MGC-400 Configurator

To add an MP (MGC Protocol) manual station, follow these steps.


1. Add a **(MIX-404x) Dual InputA**.

The device appears as two entries, **(MIX-404x)Dual InputA** and **(MIX-404x)Dual InputB**. These entries represent a two stage manual station. The first input is the pull handle and the second input is the stage two key.

| Addr | Device | Type | F1 | F3 |
|------|-----------------------|-------------|----|----|
| 1 | (MIX-404x)Dual InputA | Alarm Input | | |
| 2 | (MIX-404x)Dual InputB | Alarm Input | | |

2. To convert this device to a single stage manual station, double-click in column **F3** for the first entry, **(MIX-404x)Dual InputA**.
3. Select **CA** in the menu that appears.

| Addr | Device | Type | F1 | F3 | F4 |
|------|-----------------------|-------------|----|----|----|
| 1 | (MIX-404x)Dual InputA | Alarm Input | | | |
| 2 | (MIX-404x)Dual InputB | Alarm Input | | | |



The Configurator deletes **(MIX-404x)Dual InputB** automatically. The address that was used by **(MIX-404x)Dual InputB** is free to be used by another device.

| Addr | Device | Type | F1 | F3 |
|------|-----------------------|-------------|----|----|
| 1 | (MIX-404x)Dual InputA | Alarm Input | | CA |