
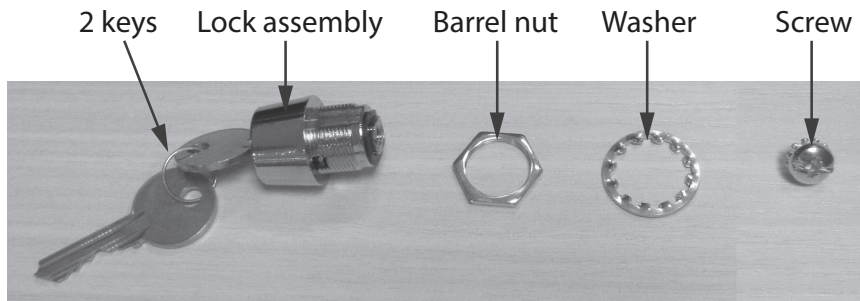


**Parts List**

**Note:** Keep the cam from the old lock and use it with the replacement lock.

**Install the Replacement Lock**


1. Insert the key into the lock assembly.
2. Insert the lock assembly in the hole in the door so that the key is on the outside of the door.
3. Turn the key so that the gap in the stop cam washer is on the upper right, as shown in figure 1.

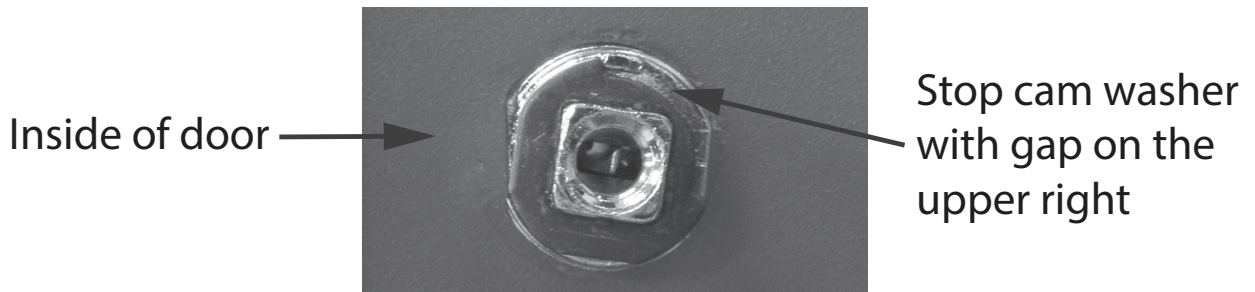

**Figure 1** Stop cam washer with the gap on the upper right

4. Place the washer on the lock assembly.
5. Screw the barrel nut on to the new lock assembly.
6. Place the cam from the old lock on the stop cam washer so that it points up.
7. Secure the cam with the included screw.

**Note:** Hold the key so that the lock does not turn while you secure the screw.

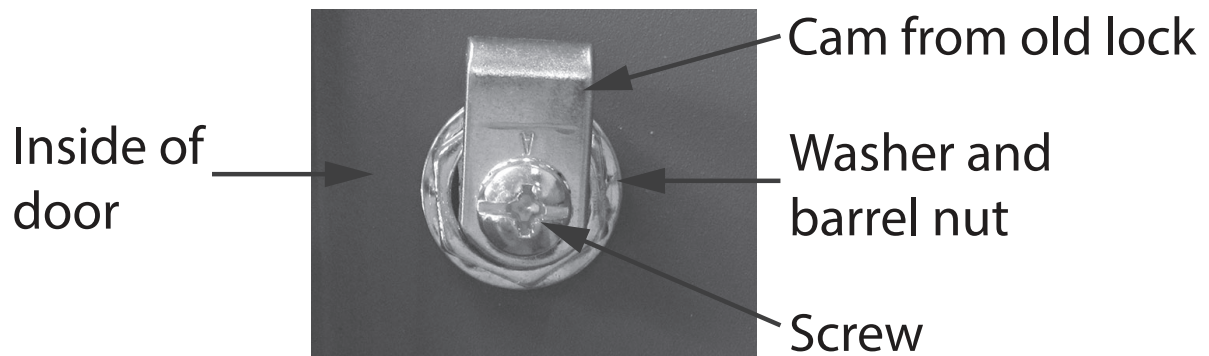

**Figure 2** Install cam pointing up

8. Ensure that you can lock and unlock the door as expected.