


# QMT-5300A, QMT-5302 and QZT-5302

Firefighters' Telephone System

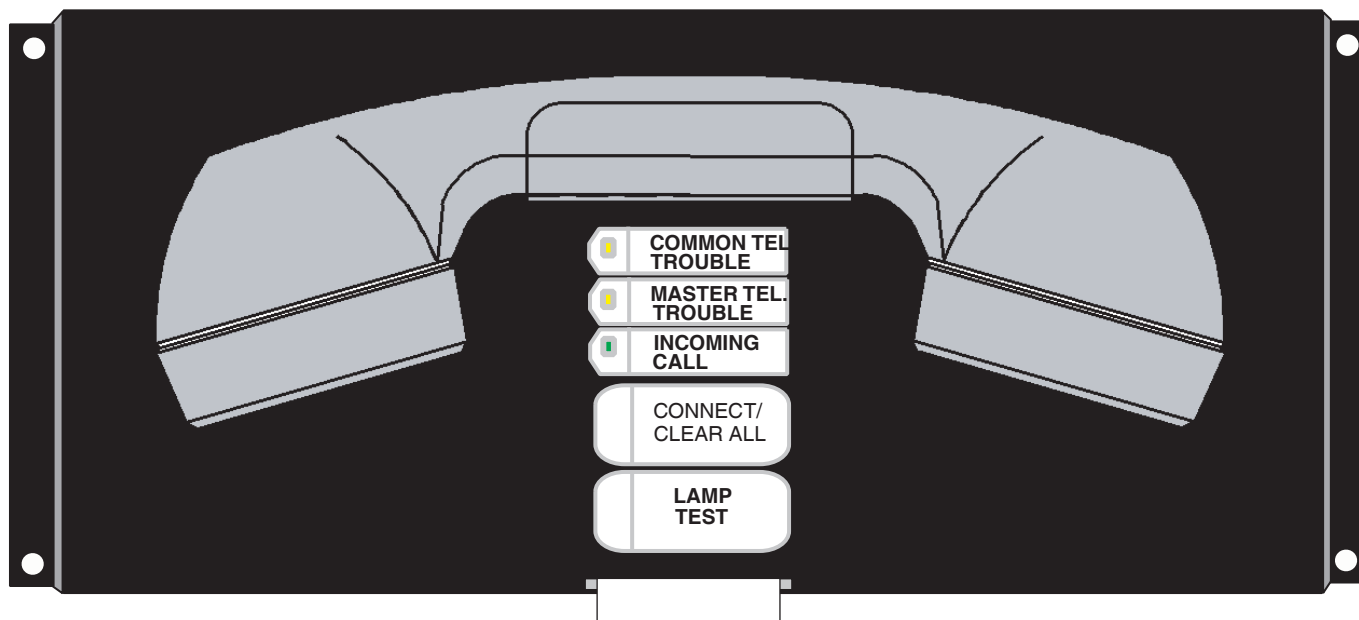



# QMT-5300A, QMT-5302 and QZT-5302 Instructions

---

## Introduction

MGC's Fire Fighters' Telephone may be used either alone as a Single Zone System (using the QMT-5300A or QMT-5302 Master Telephone by itself), or as a Multi-Zoned System (with the QZT-5302 Zone Adders).

## Mounting

The modules mount in any of the BB-1000 Series Remote Annunciator enclosures except for the QMT-5302 Master Telephone which mounts into a BB-5008 or BB-5014 backbox. For the QMT-5300A Master Telephone, the included extended window module must be installed in place of the existing window. In any BB-1000 enclosure, the QMT-5300A is mounted bottom-most, and one to five QZT-5302s above, for a total of 60 Telephone Zones. In any BB-5008 enclosure, the QMT-5302 should be mounted below the QZT-5302s and beside the master telephone for ease of ribbon cable installation.

## Labels

Two slide-in labels are supplied with the QMT-5300A ; the NP-735 is used for Single Zone and the NP-736 for Multi-Zone. Slide-in label NP-896 is provided with the QMT-5302, use the Connect for Single Zone or Clear All label for Multi-Zone. The QZT-5302 includes blank labels for Telephone Zone information.

## Chassis Ground

Connect one of the BB-1000 Series Backbox, BB-5008 or BB-5014 Earth-Ground points (Chassis Ground) to Earth Ground (cold water pipe).

## Power Supply

Only the telephone master QMT-5300A or QMT-5302 module requires power. It can be powered with a 24 VDC, 200 mA external DC power source (filtered or un-filtered, such as 4-wire smoke or auxiliary power from a Fire Alarm Control Panel), see Fig.1

## Jumpers

There are three jumpers on the QMT-5300A and QMT-5302 PCB showing at the top of the black chassis. For a Single-Zoned System JW1 and JW2 have jumpers installed, JW3 does not. For a Multi-Zoned system with QZT-5302s, JW1 & JW2 jumpers are removed, and JW3 is installed. There is one jumper, JW1, on each QZT-5302 Zone Adder, and a jumper is installed only on the last QZT-5302.

## Connectors

On the QMT-5300A and QMT-5302, P1 is used only for Multi-Zoned Systems. P2 is the connection for the Master Telephone Handset. On the QZT-5302, P1 connects to the QMT-5300A, QMT-5302 or previous QZT-5302, and P2 connects to the next QZT-5302.


## QMT-5300A/QMT-5302 Master Telephone Wiring

Figure 1 shows the wiring for QMT-5300A and QMT-5302. A Fire Alarm Control Panel's Detection Zone (should be configured as Trouble-Only or Non-Latching Supervisory) is used to annunciate Telephone Trouble. This is connected to the QMT-5300A or QMT-5302 TROUBLE terminals (polarity does not matter), and the ELR device for that zone is connected to the QMT-5300A or QMT-5302 ELR terminals. DC Power (24 V DC, filtered or unfiltered at 200 mA) is connected to the 24 V DC terminals.

If the Master Telephone is being used alone as a Single-Zone System, the NP-735 Label is used or Connect label from NP-896, and Jumpers are placed on JW1 and JW2 only. The one Telephone Zone connects to the TEL-CKT terminals. The 10 Kohm ELR resistor that is shipped with this unit is connected after the last Remote Telephone on the Zone and the negative black jumper is removed for Class B. For Class A wiring, remove both red and black jumper wires and wire from OUT + - to the remote telephones and back to RET + -.

If the Master Telephone is being used as a Multi-Zoned System with QZT-5302s, the NP-736 Label is used or Clear All label from NP-896, and a Jumper is placed on JW3 only. The TEL-CKT terminals are left as is. Telephone Zone wiring is done via the QZT-5302s.

**Figure 1: QMT-5300A/QMT-5302 Master Telephone Wiring**

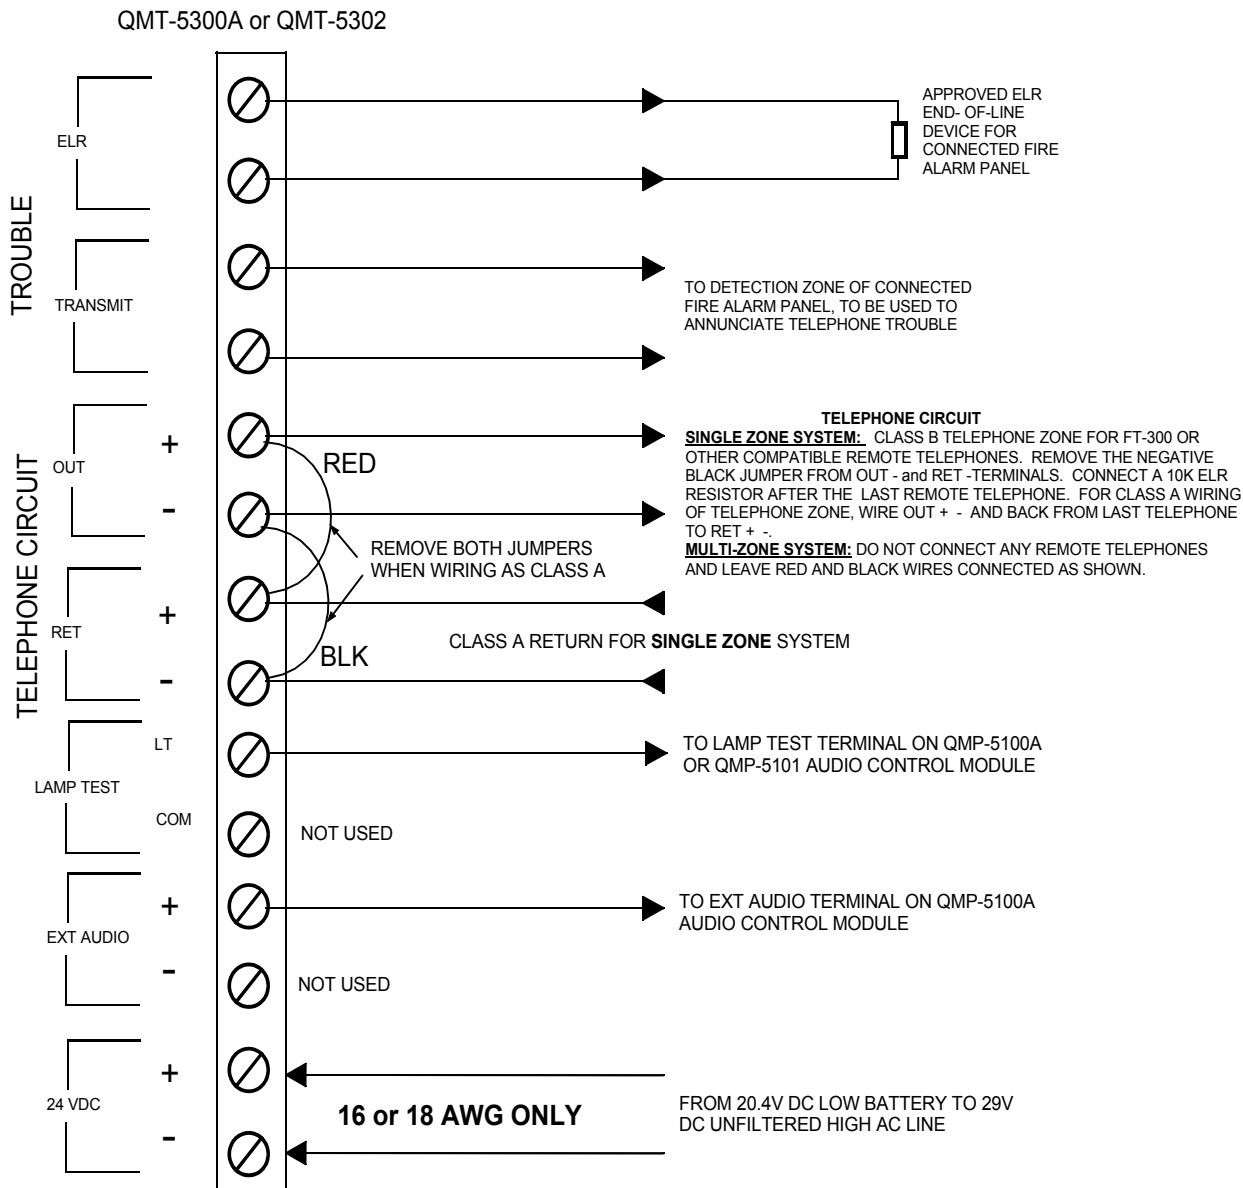

## QZT-5302 Zone Adder Wiring


Figure 2 shows the wiring for QZT-5302. The P1 Cable plugs into P1 on the QMT-5300A or QMT-5302 Master Telephone for the first Zone Adder, or into P2 of the previous Zone Adder for additional Zone Adders. The Jumper plug is removed from JW1 on each QZT-5302 and placed on the last QZT-5302.

The Telephone Zones connect to telephone circuits marked Out and Ret (return) terminals, numbered from 1 to 12. The 10 K ohm ELR resistors that are shipped with the panel are moved to the last Remote Telephone on each Zone (for Class B) and the negative to negative black wire jumper is removed when using class B wiring.

For Class A, each telephone zone is wired out from the OUT + - terminals to the remote telephones and back to terminals RET + and -. Also for Class A wiring both the red and black wire jumpers found on the positive and negative terminals of the QZT-5302 are removed.

Note that on each QZT-5302, the associated buttons for Telephone Zones 1 to 12 are numbered left to right, where Zones 1 to 6 are the top row, and 7 to 12 are the bottom row.

**Figure 2: QZT-5302 Zone Adder Wiring**

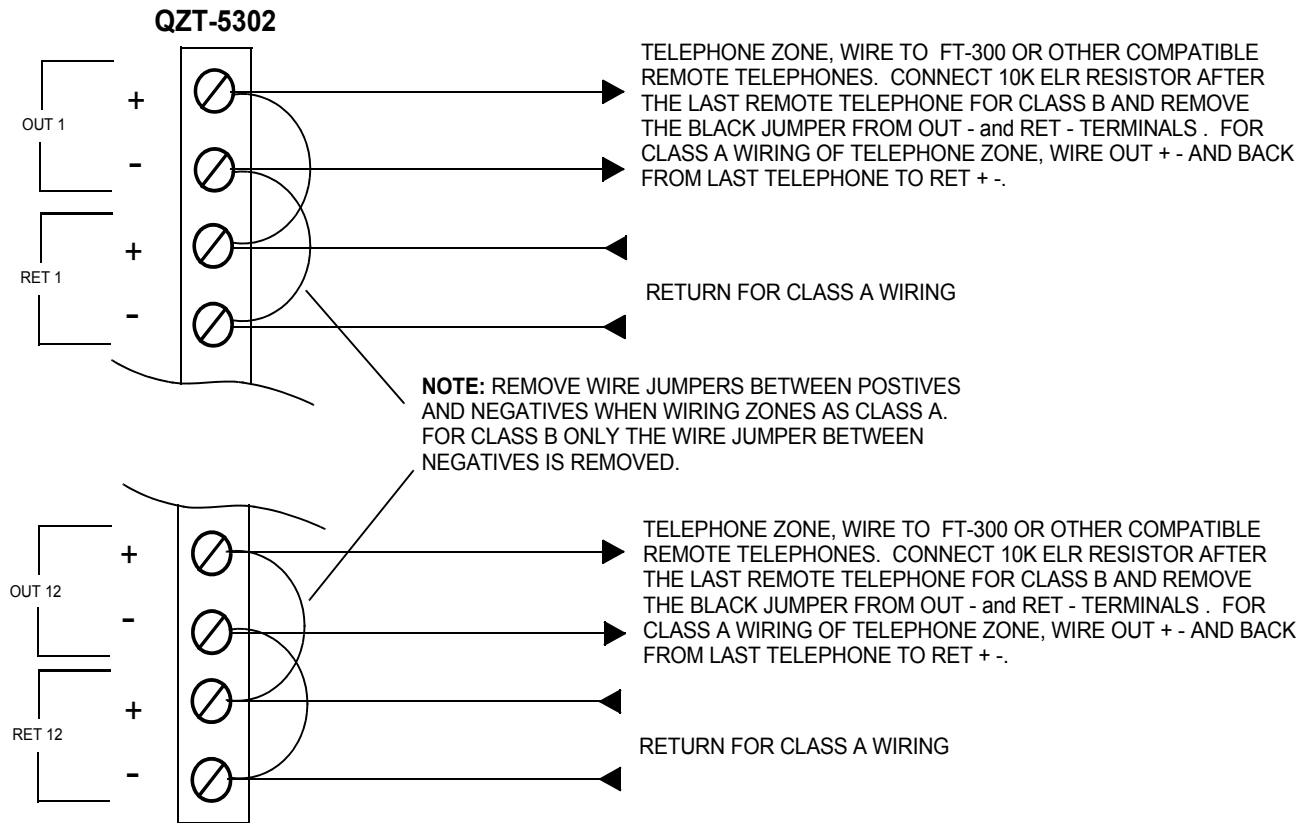

## Operation

### Single-Zone System

1. When Telephone “Rings” (the local buzzer sounds intermittently, and the Green Incoming Call LED flashes) press CONNECT to *answer*.
2. Press CONNECT again to *Hang-Up*. (Note that the Telephone Zone will *Hang-Up* automatically if all handsets on the Zone are placed back *On-Hook*.)
3. Press LAMP TEST to test all indicators.

### Multi-Zone System

1. When any Telephone Zone “Rings” (the local buzzer sounds intermittently, and the Green Zone LED and Incoming Call LED flash) press that Zone’s Button once to *answer*. Once any one Zone has been *answered*, calls from other Zone will cause that Zone’s Green LED and Incoming Call LED to flash, but the buzzer will not sound.
2. Press the *answered* Zone’s button once again to *Hang-Up*. (Note that the Telephone Zone will *Hang-Up* automatically if all handsets on the Zone are placed back *On-Hook*.)
3. Press the CLEAR ALL button to disconnect all Zones.
4. Press LAMP TEST to test all indicators.

### Indicators on QMT-5300A or QMT-5302

- **Common Tel. Trouble:** This LED will flash amber if there is any Zone or other trouble in the Fire Fighters’ Telephone System.
- **Master Tel. Trouble:** This LED will flash amber if the Master Telephone handset is disconnected.
- **Incoming Call:** This LED will flash green if any Telephone Zone has a handset *off-hook* and *unanswered*. It will be steady green if all Telephone Zones with *off-hook* handsets have been *answered*.
- **Buzzer:** The Buzzer will sound intermittently if one, and only one, Telephone Zone has a handset *off-hook* and *unanswered*.

### Indicators on QZT-5302

- **Telephone Zone Green LED:** This LED will flash green if there is any handset *off-hook* on that Zone, and the Zone has not been *answered* by pressing the Zone’s button. Once *answered*, the LED will be steady green.
- **Telephone Zone Amber LED:** This LED will flash amber for *Trouble* if there is an open-circuit fault on that Zone, such as the End-of-Line Resistor (ELR) being missing, or a wire break.

# Warranty & Warning Information

---

## **Warning Please Read Carefully**

Note to End Users: This equipment is subject to terms and conditions of sale as follows:

### **Note to Installers**

This warning contains vital information. As the only individual in contact with system users, it is your responsibility to bring each item in this warning to the attention of the users of this system. Failure to properly inform system end-users of the circumstances in which the system might fail may result in over-reliance upon the system. As a result, it is imperative that you properly inform each customer for whom you install the system of the possible forms of failure.

### **System Failures**

This system has been carefully designed to be as effective as possible. There are circumstances, such as fire or other types of emergencies where it may not provide protection. Alarm systems of any type may be compromised deliberately or may fail to operate as expected for a variety of reasons. Some reasons for system failure include:

#### **•*Inadequate Installation***

A Fire Alarm system must be installed in accordance with all the applicable codes and standards in order to provide adequate protection. An inspection and approval of the initial installation, or, after any changes to the system, must be conducted by the Local Authority Having Jurisdiction. Such inspections ensure installation has been carried out properly.

#### **•*Power Failure***

Control units, smoke detectors and many other connected devices require an adequate power supply for proper operation. If the system or any device connected to the system operates from batteries, it is possible for the batteries to fail. Even if the batteries have not failed, they must be fully charged, in good condition and installed correctly. If a device operates only by AC power, any interruption, however brief, will render that device inoperative while it does not have power. Power interruptions of any length are often accompanied by voltage fluctuations which may damage electronic equipment such as a fire alarm system. After a power interruption has occurred, immediately conduct a complete system test to ensure that the system operates as intended.

#### **•*Failure of Replaceable Batteries***

Systems with wireless transmitters have been designed to provide several years of battery life under normal conditions. The expected battery life is a function of the device environment, usage and type. Ambient conditions such as high humidity, high or low temperatures, or large temperature fluctuations may reduce the expected battery life. While each transmitting device has a low battery monitor which identifies when the batteries need to be replaced, this monitor may fail to operate as expected. Regular testing and maintenance will keep the system in good operating condition.

#### **•*Compromise of Radio Frequency (Wireless) Devices***

Signals may not reach the receiver under all circumstances which could include metal objects placed on or near the radio path or deliberate jamming or other inadvertent radio signal interference.

#### **•*System Users***

A user may not be able to operate a panic or emergency switch possibly due to permanent or temporary physical disability, inability to reach the device in time, or unfamiliarity with the correct operation. It is important that all system users be trained in the correct operation of the alarm system and that they know how to respond when the system indicates an alarm.

#### **•*Automatic Alarm Initiating Devices***

Smoke detectors, heat detectors and other alarm initiating devices that are a part of this system may not properly detect a fire condition or signal the control panel to alert occupants of a fire condition for a number of reasons, such as: the smoke detectors or heat detector may have been improperly installed or positioned; smoke or heat may not be able to reach the alarm initiating device, such as when the fire is in a chimney, walls or roofs, or on the other side of closed doors; and, smoke and heat detectors may not detect smoke or heat from fires on another level of the residence or building.

•*Software*

Most MGC products contain software. With respect to those products, MGC does not warranty that the operation of the software will be uninterrupted or error-free or that the software will meet any other standard of performance, or that the functions or performance of the software will meet the user's requirements. MGC shall not be liable for any delays, breakdowns, interruptions, loss, destruction, alteration or other problems in the use of a product arising out of, or caused by, the software.

Every fire is different in the amount and rate at which smoke and heat are generated. Smoke detectors cannot sense all types of fires equally well. Smoke detectors may not provide timely warning of fires caused by carelessness or safety hazards such as smoking in bed, violent explosions, escaping gas, improper storage of flammable materials, overloaded electrical circuits, children playing with matches or arson.

Even if the smoke detector or heat detector operates as intended, there may be circumstances when there is insufficient warning to allow all occupants to escape in time to avoid injury or death.

•*Alarm Notification Appliances*

Alarm Notification Appliances such as sirens, bells, horns, or strobes may not warn people or waken someone sleeping if there is an intervening wall or door. If notification appliances are located on a different level of the residence or premise, then it is less likely that the occupants will be alerted or awakened. Audible notification appliances may be interfered with by other noise sources such as stereos, radios, televisions, air conditioners or other appliances, or passing traffic. Audible notification appliances, however loud, may not be heard by a hearing-impaired person.

•*Telephone Lines*

If telephone lines are used to transmit alarms, they may be out of service or busy for certain periods of time. Also the telephone lines may be compromised by such things as criminal tampering, local construction, storms or earthquakes.

•*Insufficient Time*

There may be circumstances when the system will operate as intended, yet the occupants will not be protected from the emergency due to their inability to respond to the warnings in a timely manner. If the system is monitored, the response may not occur in time enough to protect the occupants or their belongings.

•*Component Failure*

Although every effort has been made to make this system as reliable as possible, the system may fail to function as intended due to the failure of a component.

•*Inadequate Testing*

Most problems that would prevent an alarm system from operating as intended can be discovered by regular testing and maintenance. The complete system should be tested as required by national standards and the Local Authority Having Jurisdiction and immediately after a fire, storm, earthquake, accident, or any kind of construction activity inside or outside the premises. The testing should include all sensing devices, keypads, consoles, alarm indicating devices and any other operational devices that are part of the system.

•*Security and Insurance*

Regardless of its capabilities, an alarm system is not a substitute for property or life insurance. An alarm system also is not a substitute for property owners, renters, or other occupants to act prudently to prevent or minimize the harmful effects of an emergency situation.

**IMPORTANT NOTE:** End-users of the system must take care to ensure that the system, batteries, telephone lines, etc. are tested and examined on a regular basis to ensure the minimization of system failure.

**Limited Warranty**

Mircom Technologies Ltd., MGC Systems Corp. and MGC System International Ltd. together with their subsidiaries and affiliates (collectively, MGC) warrants the original purchaser that for a period of three years from the date of shipment, proprietary manufactured product shall be free of defects in materials



and workmanship, under normal use. During the warranty period, MGC shall, at its option, repair or replace any defective product upon return of the product to its factory, at no charge for labor and materials. Non-proprietary, third party or OEM product shall be warranted in accordance with the warranty period of the manufacturer. Any replacement and/or repaired parts are warranted for the remainder of the original warranty or ninety (90) days, whichever is longer. The original owner must promptly notify MGC in writing that there is defect in material or workmanship, such written notice to be received in all events prior to expiration of the warranty period.

#### **International Warranty**

The warranty for international customers is the same as for any customer within Canada and the United States, MGC shall not be responsible for any customs fees, taxes, or VAT that may be due.

#### **Conditions to Void Warranty**

This warranty applies only to defects in parts and workmanship relating to normal use. It does not cover:

- damage incurred in shipping or handling;
- damage caused by disaster such as fire, flood, wind, earthquake or lightning;
- damage due to causes beyond the control of MGC such as excessive voltage, mechanical shock or
- water damage;
- damage caused by unauthorized attachment, alterations, modifications or foreign objects;
- damage caused by peripherals (unless such peripherals were supplied by MGC);
- defects caused by failure to provide a suitable installation environment for the products;
- damage caused by use of the products for purposes other than those for which it was designed;
- damage from improper maintenance;
- damage arising out of any other abuse, mishandling or improper application of the products.

#### **Warranty Procedure**

To obtain service under this warranty, please return the item(s) in question to the point of purchase. All authorized distributors and dealers have a warranty program. Anyone returning goods to MGC must first obtain an authorization number. MGC will not accept any shipment whatsoever for which prior authorization has not been obtained. NOTE: Unless specific pre-authorization in writing is obtained from MGC management, no credits will be issued for custom fabricated products or parts or for complete fire alarm system. MGC will at its sole option, repair or replace parts under warranty. Advance replacements for such items must be purchased.

Note: MGC's liability for failure to repair the product under this warranty after a reasonable number of attempts will be limited to a replacement of the product, as the exclusive remedy for breach of warranty.

#### **Disclaimer of Warranties**

This warranty contains the entire warranty and shall be in lieu of any and all other warranties, whether expressed or implied (including all implied warranties of merchantability or fitness for a particular purpose) and of all other obligations or liabilities. MGC neither assumes nor authorizes any other person purporting to act on its behalf to modify or to change this warranty, or to assume for it any other warranty or liability concerning this product.

This disclaimer of warranties and limited warranty are governed by the laws of the province of Ontario, Canada.

**Out of Warranty Repairs**

MGC will at its option repair or replace out-of-warranty products which are returned to its factory according to the following conditions. Anyone returning goods to MGC must first obtain an authorization number. MGC will not accept any shipment whatsoever for which prior authorization has not been obtained.

Products which MGC determines to be repairable will be repaired and returned. A set fee which MGC has predetermined and which may be revised from time to time, will be charged for each unit repaired.

Products which MGC determines not to be repairable will be replaced by the nearest equivalent product available at that time. The current market price of the replacement product will be charged for each replacement unit.

The foregoing information is accurate as of the date of publishing and is subject to change or revision without prior notice at the sole discretion of the Company

WARNING: MGC recommends that the entire system be completely tested on a regular basis. However, despite frequent testing, and due to, but not limited to, criminal tampering or electrical disruption, it is possible for this product to fail to perform as expected.

NOTE: Under no circumstances shall MGC be liable for any special, incidental, or consequential damages based upon breach of warranty, breach of contract, negligence, strict liability, or any other legal theory. Such damages include, but are not limited to, loss of profits, loss of the product or any associated equipment, cost of capital, cost of substitute or replacement equipment, facilities or services, down time, purchaser's time, the claims of third parties, including customers, and injury to property.

MGC MAKES NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO ITS GOODS DELIVERED, NOR IS THERE ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, EXCEPT FOR THE WARRANTY CONTAINED HEREIN.





**CANADA - Main Office**  
25 Interchange Way  
Vaughan, ON L4K 5W3  
Tel: (888) 660-4655  
(905) 660-4655  
Fax: (905) 660-4113

**U.S.A**  
4575 Witmer Industrial Estates  
Niagara Falls, NY 14305  
Tel: (888) 660-4655  
(905) 660-4655  
Fax: (905) 660-4113

**TECHNICAL SUPPORT**  
North America  
Tel: (888) Mircom5  
(888) 647-2665  
International  
Tel: (905) 647-2665

© MGC 2013  
Printed in Canada  
Subject to change without prior notice  
[www.mircomgroup.com](http://www.mircomgroup.com)