

## MPS-800 Series Fire Alarm Manual Station

## **How to Wire the Terminals**

**Note:** The maximum wire size is 14 AWG. Strip wires to 10 mm (25/64") maximum.

- 1. Lift the levers on the connectors on the back of the unit one at a time.
- 2. Insert the wires.
- 3. Close the levers.

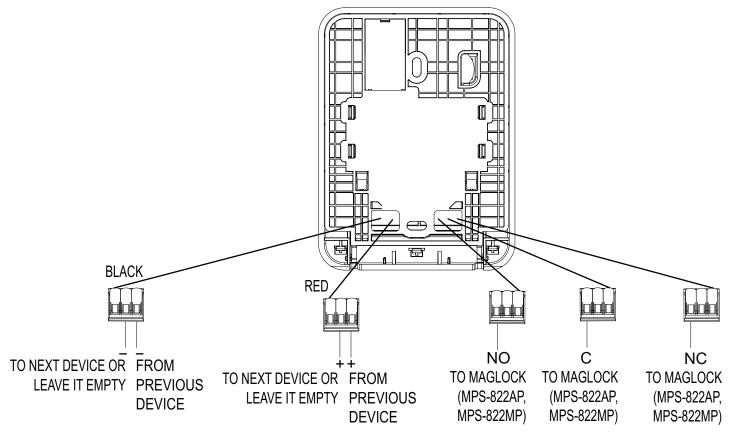


Figure 1 Wiring MPS-800AP series and MPS-800MP series

Canada 25 Interchange Way Vaughan, ON L4K 5W3 Tel: 1-888-647-2665

4575 Witmer Industrial Estates Niagara Falls, NY 14305 Tel: 1-888-647-2665

U.S.A



## MPS-800 Series Fire Alarm Manual Station

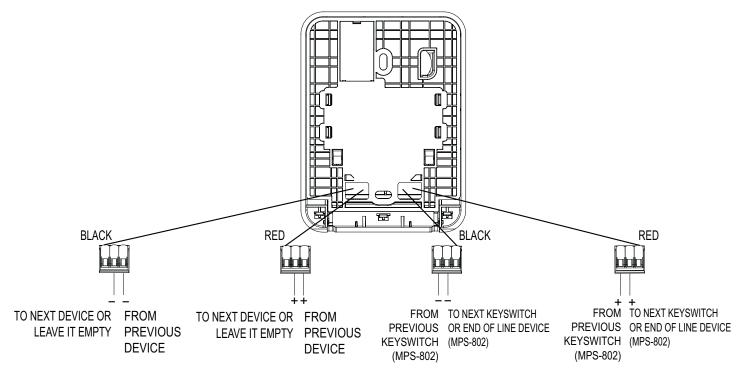


Figure 2 Wiring MPS-800 series