

# ALC-636 Dual Loop Adder Installation Instructions

The ALC-636 Dual Loop Adder module is mounted as shown below. For more information refer to the FX-3500 manual LT-1083 or the FX-3500RCU manual LT-1083RCU.

