

## FA-1025U OPERATING INSTRUCTIONS

**NORMAL STANDBY OPERATION:**     1) The green AC POWER indicator must be lit.  
  2) All alarm (Red LEDs) and trouble indicators  
   (Yellow LEDs) should be off.

**ALARM CONDITION:** The Activation of any compatible detector or any normally open fire alarm initiating device (e.g. Pull Station) will result in the following action by the PFC-3005 control panel:

- 1) Activate signalling outputs
- 2) Light the initiating Red Zone Alarm LED
- 3) The signalling outputs will remain activated until the alarm has been silenced or the system has been reset.

**ALARM SILENCING PROCEDURE:**

Signalling circuits may be silenced by sliding the zone signal silence switch to the right on the control panel. Subsequent alarms will reactivate alarm outputs.

If **SIGNAL SILENCE INHIBIT** has been selected. Signal Silence will not function for the inhibit time of 1 minute  
" None selected  
" 1 Minute

**SIGNAL SILENCE should not be activated until it is determined that an evacuation of the building is not required!**

**ALARM RESET:** After locating and correcting the alarm condition, reset the control panel by sliding the RESET switch to the right on the control panel.

**TROUBLE CONDITION:** Activation of a trouble signal under normal operation indicates a condition that requires immediate correction. Carefully note which indicators (LEDs) are illuminated and contact your local service representative. The audible tone may be silenced by sliding the trouble silence switch to the right. Trouble LEDs will continue to display the trouble condition(s) until the trouble(s) are corrected.

Local Service Representative

Name: \_\_\_\_\_

Company: \_\_\_\_\_

Address: \_\_\_\_\_

Telephone: \_\_\_\_\_

**OFF-NORMAL POSITION OF SWITCHES:** Placing any of the switches on the control panel to the off-normal position will indicate trouble and sound the audible tone.

**FUSE REPLACEMENT:** Secondary A.C. - FAST AGC2 (4A)  
Battery - FAST AGC2 (4A)

*FA-1025U INSTALLER: Mark the check box above as appropriate. This sheet must be framed and mounted adjacent to the control panel. For more information, refer to the FA-1025U Installation Manual.*