


CSIS-202A Supervised Signal Isolator Module Installation Instructions

The CSIS-202A is a signal isolator which provides two supervised isolator outputs. These isolators remove the bells, horns or strobes which follow it out of the circuit should there be a trouble (short). This feature provides integrity of the signal circuit, that is; should an isolated bell, horn or strobe malfunction, the rest of the bells, horns or strobes will continue to function

INSTALL ATION

The signal isolators mount into a standard 4 inch square electrical box using the 2 screws provided. These electrical boxes are usually mounted in hallways, outside the suites which contain the signalling devices to be isolated. There is a white front plate included with the isolator which is mounted onto the isolator as shown in Figure 1.

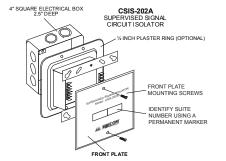

Electrical Ratings

Signal In: Regulated 24 FWR/24 VDC Suite Current: 100 mA MAX

Standby Current: 0.0A Max Trip Current: 300mA

To locate faulted suite device

- 1. Set all other signal circuits to bypass except the circuit under test.
- 2. If Class A circuit, disconnect the return wire at the panel.
- 3 Sound signals
- 4. Walk the floor to locate area where the sound ceases, this is the location of the fault

Figure 1: Module Installation Instruction

Notes

- 1. All unused screw terminals must be tightened to prevent shorting to front plate
- 2. For proper system operation refer to detailed installation instructions provided with control panel and local installation standards.
- 3. Wiring supervised by the Fire Alarm Control Panel as per Code.
- 4. Refer to signal device instruction for wiring gauge information.
- 5. Subtract 0.4A from the total signal circuit current when using any number of these isolators i.e. 1.7A subtract 0.4A equals 1.3A available for signalling when using isolators.

LT-875 Rev.0




CSIS-202A Supervised Signal Isolator Module Installation Instructions

The CSIS-202A is a signal isolator which provides two supervised isolator outputs. These isolators remove the bells, horns or strobes which follow it out of the circuit should there be a trouble (short). This feature provides integrity of the signal circuit, that is; should an isolated bell, horn or strobe malfunction, the rest of the bells, horns or strobes will continue to function.

INSTALL ATION

The signal isolators mount into a standard 4 inch square electrical box using the 2 screws provided. These electrical boxes are usually mounted in hallways, outside the suites which contain the signalling devices to be isolated. There is a white front plate included with the isolator which is mounted onto the isolator as shown in Figure 1.

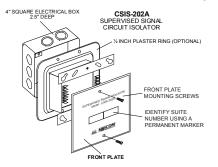

Electrical Ratings

Signal In: Regulated 24 FWR/24 VDC Suite Current: 100 mA MAX

Standby Current: 0.0A Max Trip Current: 300mA

To locate faulted suite device

- 1. Set all other signal circuits to bypass except the circuit under test.
- 2. If Class A circuit, disconnect the return wire at the panel.
- 3. Sound signals.
- 4. Walk the floor to locate area where the sound ceases, this is the location of the fault

Figure 1: Module Installation Instruction

Notes

- 1. All unused screw terminals must be tightened to prevent shorting to front plate.
- 2. For proper system operation refer to detailed installation instructions provided with control panel and local installation standards.
- 3. Wiring supervised by the Fire Alarm Control Panel as per Code.
- 4. Refer to signal device instruction for wiring gauge information.
- 5. Subtract 0.4A from the total signal circuit current when using any number of these isolators i.e. 1.7A subtract 0.4A equals 1.3A available for signalling when using isolators.

LT-875 Rev.0




CSIS-202A Supervised Signal Isolator Module Installation Instructions

The CSIS-202A is a signal isolator which provides two supervised isolator outputs. These isolators remove the bells, horns or strobes which follow it out of the circuit should there be a trouble (short). This feature provides integrity of the signal circuit, that is; should an isolated bell, horn or strobe malfunction, the rest of the bells, horns or strobes will continue to function

INSTALL ATION

The signal isolators mount into a standard 4 inch square electrical box using the 2 screws provided. These electrical boxes are usually mounted in hallways, outside the suites which contain the signalling devices to be isolated. There is a white front plate included with the isolator which is mounted onto the isolator as shown in Figure 1.

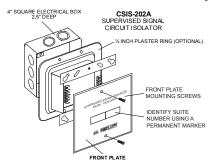

Electrical Ratings

Signal In: Regulated 24 FWR/24 VDC

Suite Current: 100 mA MAX Standby Current: 0.0A Max. Trip Current: 300mA

To locate faulted suite device

- 1. Set all other signal circuits to bypass except the circuit under test.
- 2. If Class A circuit, disconnect the return wire at the panel.
- Sound signals.
- 4. Walk the floor to locate area where the sound ceases, this is the location of the fault



Notes

- 1. All unused screw terminals must be tightened to prevent shorting to front plate.
- 2. For proper system operation refer to detailed installation instructions provided with control panel and local installation standards.
- 3. Wiring supervised by the Fire Alarm Control Panel as per Code.
- 4. Refer to signal device instruction for wiring gauge information.
- 5. Subtract 0.4A from the total signal circuit current when using any number of these isolators i.e. 1.7A subtract 0.4A equals 1.3A available for signalling when using isolators. LT-875 Rev.0


////// Mircom^{**}

CSIS-202A Supervised Signal Isolator Module Installation Instructions

The CSIS-202A is a signal isolator which provides two supervised isolator outputs. These isolators remove the bells, horns or strobes which follow it out of the circuit should there be a trouble (short). This feature provides integrity of the signal circuit, that is; should an isolated bell, horn or strobe malfunction, the rest of the bells, horns or strobes will continue to function

INSTALLATION

The signal isolators mount into a standard 4 inch square electrical box using the 2 screws provided. These electrical boxes are usually mounted in hallways, outside the suites which contain the signalling devices to be isolated. There is a white front plate included with the isolator which is mounted onto the isolator as shown in Figure 1.

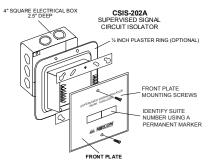

Electrical Ratings

Signal In: Regulated 24 FWR/24 VDC

Suite Current: 100 mA MAX Standby Current: 0.0A Max. Trip Current: 300mA

To locate faulted suite device


- 1. Set all other signal circuits to bypass except the circuit under test.
- 2. If Class A circuit, disconnect the return wire at the panel.
- 3. Sound signals.
- 4. Walk the floor to locate area where the sound ceases, this is the location of the fault

Figure 1: Module Installation Instruction

Notes

- 1. All unused screw terminals must be tightened to prevent shorting to front plate.
- 2. For proper system operation refer to detailed installation instructions provided with control panel and local installation standards.
- 3. Wiring supervised by the Fire Alarm Control Panel as per Code.
- 4. Refer to signal device instruction for wiring gauge information.
- 5. Subtract 0.4A from the total signal circuit current when using any number of these isolators i.e. 1.7A subtract 0.4A equals 1.3A available for signalling when using isolators.

1 T-875 Rev 0

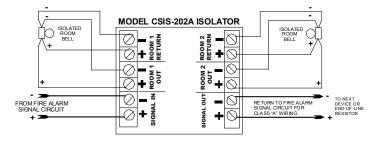

BELLS ARE SHOWN IN THE DRAWINGS, BUT THEY REPRESENT HORNS AND STROBES AS WELL.

Figure 2: CSIS-202A Isolator wiring with room bells, horns or strobes


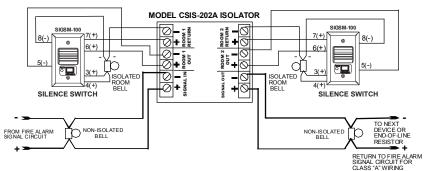


Figure 3: CSIS-202A Isolator wiring with SIGSM-100

LT-875 Rev.0

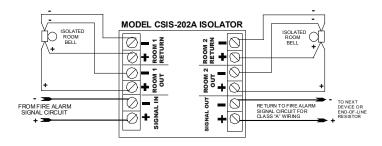

BELLS ARE SHOWN IN THE DRAWINGS, BUT THEY REPRESENT HORNS AND STROBES AS WELL.

Figure 2: CSIS-202A Isolator wiring with room bells, horns or strobes

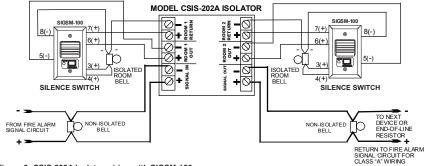


Figure 3: CSIS-202A Isolator wiring with SIGSM-100

MODEL CSIS-202A ISOLATOR

ISOLATED ROOM
SELL

TELL

TO NEXT BEILD TO NEX

BELLS ARE SHOWN IN THE DRAWINGS, BUT THEY REPRESENT HORNS AND STROBES AS WELL.

Figure 2: CSIS-202A Isolator wiring with room bells, horns or strobes


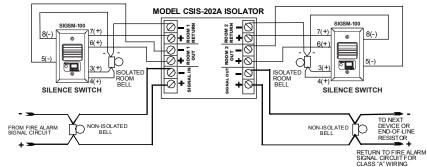


Figure 3: CSIS-202A Isolator wiring with SIGSM-100

LT-875 Rev.0

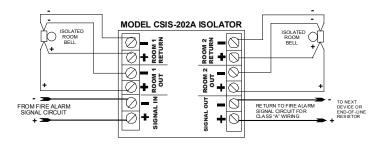

BELLS ARE SHOWN IN THE DRAWINGS, BUT THEY REPRESENT HORNS AND STROBES AS WELL.

Figure 2: CSIS-202A Isolator wiring with room bells, horns or strobes

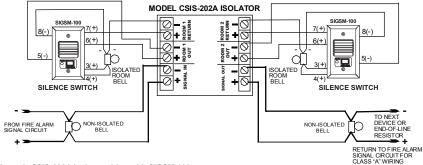


Figure 3: CSIS-202A Isolator wiring with SIGSM-100

LT-875 Rev.0