


Addendum to LT-899 INX-10A Manual

Module Mounting Locations

The INX-10AC is the same as the INX-10A except for how it is installed. The INX-10AC is mounted on a chassis. The chassis mounts into backboxes BB-5008 or BB-5014 instead of its own enclosure. The INX-10AC can be wired into an addressable loop (SLC) and provides additional power (10A) for signalling circuits (NACs -notification appliance circuits). The chassis is mounted using twelve #6 HEX nuts onto the backbox studs, see figure below.

INX-10AC Addressable Booster Chassis

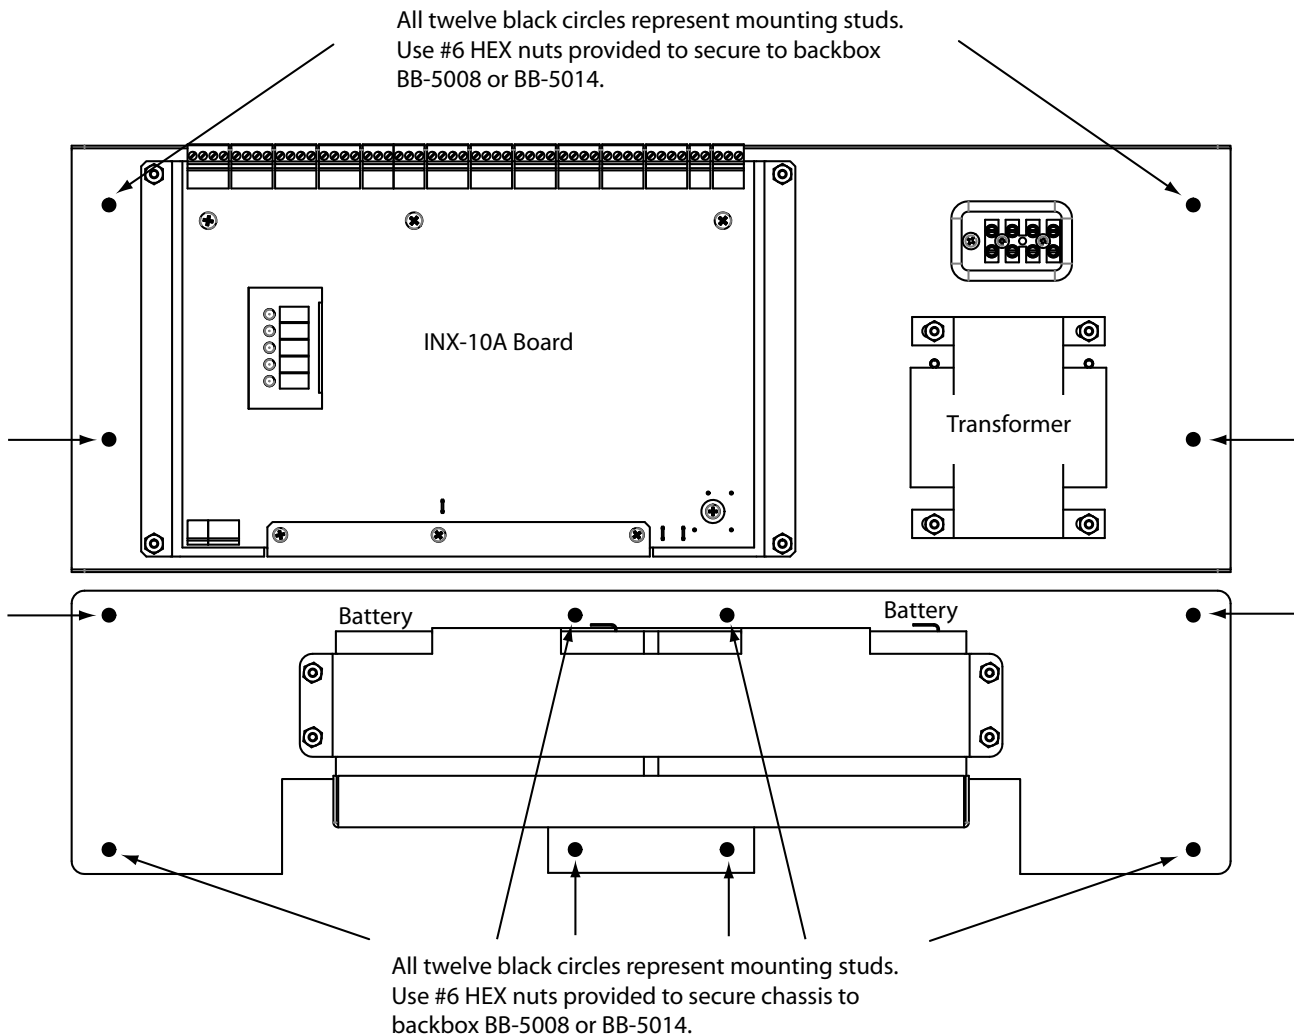

Note: Refer to LT-899 INX-10A Installation & Operation Manual for all INX-10AC wiring and set-up information.