 



To Public Switch Network  
←


To Elevator Recall Unit if installed  
←

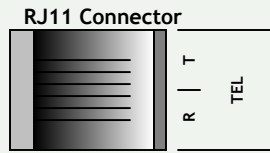


To increase sensitivity, turn the shaft of the control clockwise 1/10 of a revolution. To decrease the sensitivity turn the shaft of the control counter clockwise.

**ENTRY PANEL (ADC CONTROLLER)**

 Adjust this control for the occupant's desired listening level. Turn clockwise to increase volume.




Adjust this control for the desired speaker loudness at the Entry Panel. Turn clockwise to increase volume.

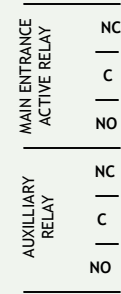







These contacts are activated when the communication link is engaged. These contacts are used for camera activation or multiple entrance application. 28V AC or DC, 2.0 Amp Maximum

These contacts are activated by dialing the digit "6" and are used for a garage door or lobby with auxilliary door. 28V DC or AC, 3.0 Amp Maximum

**LOCK BACK WIRING**

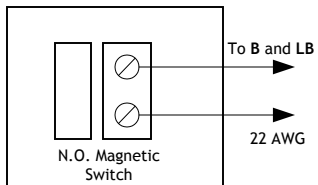

**DOOR OVERRIDE WIRING**

   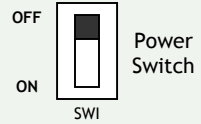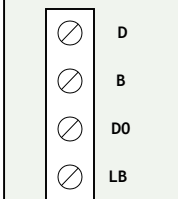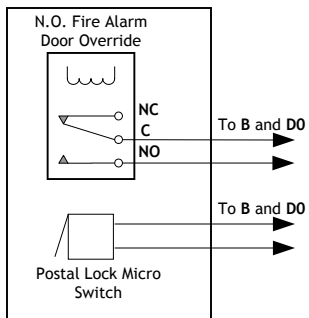

**Lamp Replacement:** use LEECRAFT #1873 only For universal type enclosures only

