

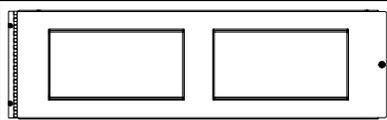



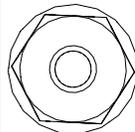
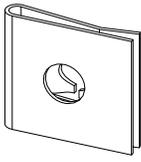
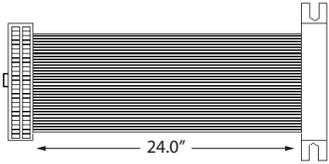
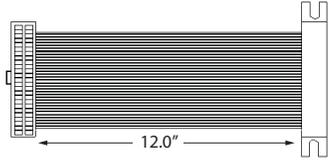




CCH-5008-PANELKIT Installation Instructions

1. Contents of the Kit



Name	Quantity	Picture	Description
BK-368	8		Medium "Z" Bracket 4 1/2" used for mounting display adders FDX-008(W)(KI), IPS-2424DS, QAZT-5302DS and RAX-1048TZDS Attach to backplate with 16 HD-050 nuts
BK-369	2		Small "Z" Bracket 3 3/4" used for mounting RAX-LCD and RAXN-LCD annunciators if more display frames are required Attach to backplate with 4 HD-050 nuts
CH-502B	2		2-window deadfront used for mounting display adders FDX-008(W)(KI), IPS-2424DS, QAZT-5302DS and RAX-1048TZDS Comes with 4 x CH-536B deadfront covers attached with 16 screws Attach to backbox with 2 HD-024 metal screws and 2 HD-304 washers
CH-443B	1		2-window deadfront used for the QMP-5101B, QMP-5101N, QMT-5302 and QMT-5302N Comes with 1 x CH-436B blank plate attached with 2 nuts Attach to backbox with 2 HD-024 metal screws and 2 HD-304 washers
CH-1043B	2		Ventilation plate Attach to backbox with 8 HD-024 metal screws
HD-024	16		Metal screw For fastening CH-502B, CH-443B deadfronts to backbox (6), CH-1043B ventilation plates to backbox (8), and extra (2)
HD-304	8		Washer For fastening CH-502B, CH-443B deadfronts to backbox (6) and extra (2)
HD-050	44		Nut, #6-32 For fastening brackets to backplate (20), modules to brackets (20), and extra (4)

Name	Quantity	Picture	Description
HD-226	5		Spring nut For closing deadfronts
MD-575	4		Cable extender, 26-pin ribbon
MD-687	6		34-pin ribbon cable, 12"
MD-580	4		4 conductor power cable, 24"


2. Attach the Backplate

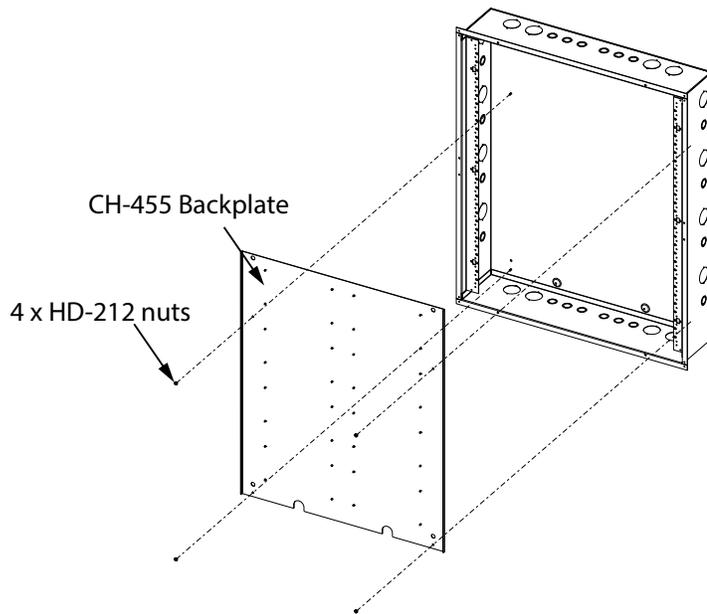


3. Attach Brackets

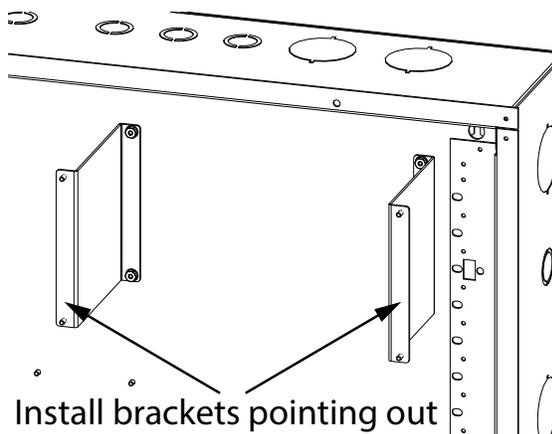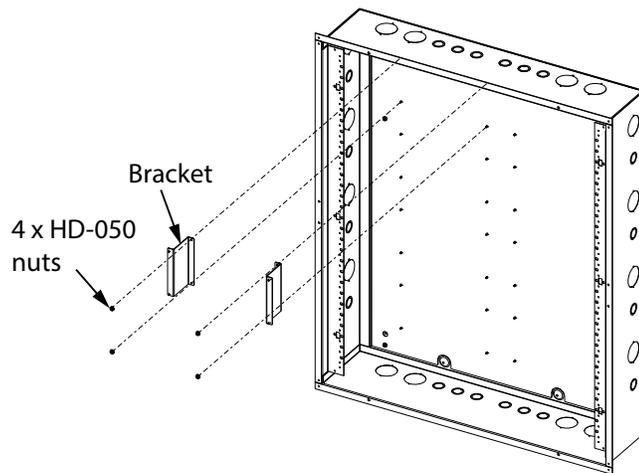


4. Mount Annunciators

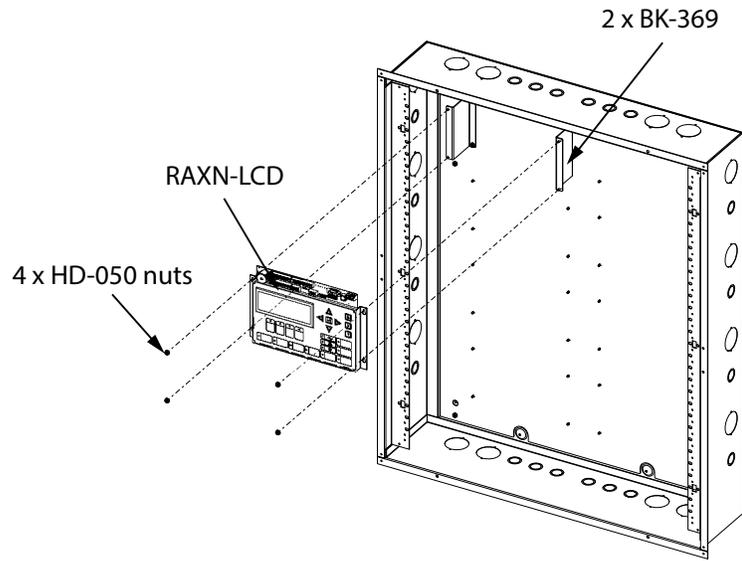

5. Attach Fill-In Blanks

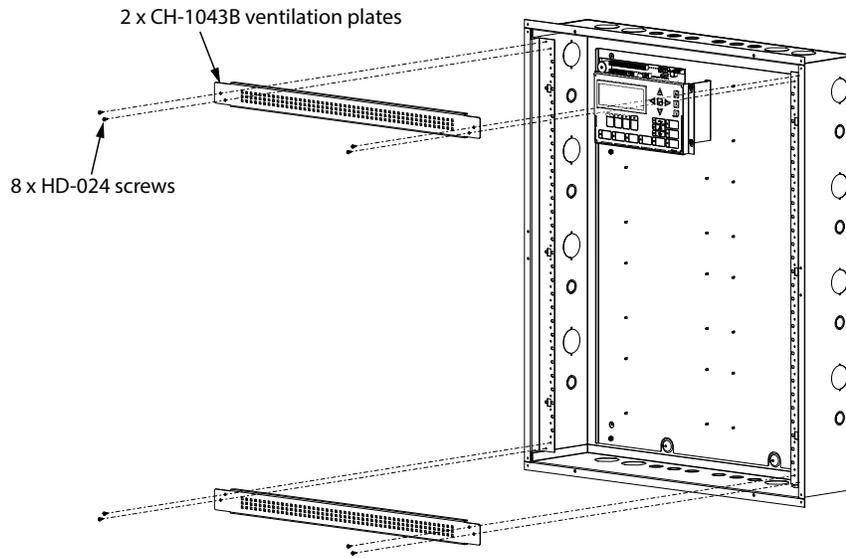

6. Attach Deadfronts

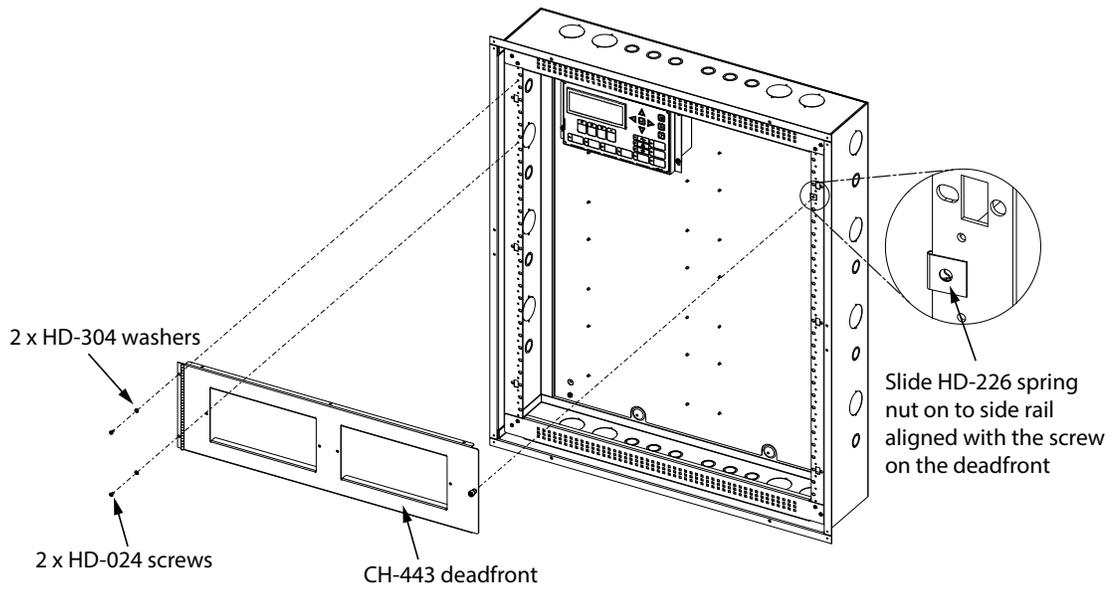

Example Setup

