


## Ferrite Bead Installaiton Instructions

This instruction shows how to install a ferrite bead onto field wiring for building system equipment. Use the photo below to loop field wiring through the ferrite bead. Place a tie wrap in the position indicated to secure the bead in place. Tie wrap must pass through the wire loop and around wires leaving bead to be secure.

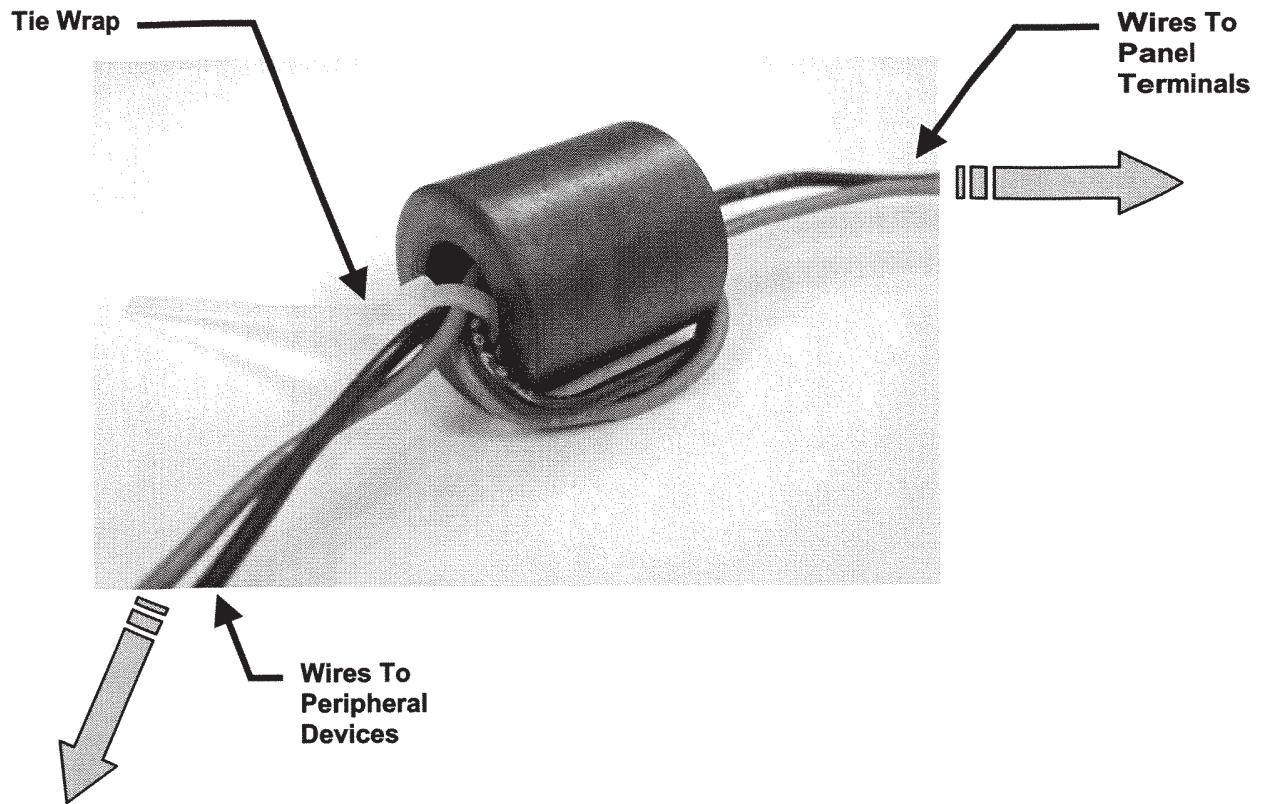

### NOTE:

1. If shielded cable is used, then the shield and shield drain wire must not pass through the bead.
2. See installation instructions or wiring diagrams for your equipment for specific wiring instructions.
3. Neatly dress and secure all wiring. Adhere to all applicable electrical regulations.

#### Canada

25 Interchange Way  
Vaughan, ON L4K 5W3  
Tel: (905) 660-4655  
Fax: (905) 660-4113

#### U.S.A.

60 Industrial Parkway PMB 278  
Cheektowaga, New York 14227  
Tel: (888) 660-4655  
Fax: (888) 660-4113

 **MIRCOM**<sup>®</sup>  
Advanced Life Safety Solutions<sup>sm</sup>

LT-2051MIR Rev.0