

TX3 Aperio Interface Installation Instructions

The **MD-1113** TX3 Aperio Interface Module mounts above the **MD-1067 TX3 Aperio Door Controller Module** in the location shown below. To mount the MD-1113, use the four HD-112 screws and four HD-396 spacers provided. The MD-1113 Module ribbon cable connects to the **P3** modem connector on the MD-1067.

To install the MD-1113 Module:

1. Connect the ribbon cable on the MD-1113 to the **P3** modem connector on the MD-1067 board.
2. Secure the four HD-396 spacers to the MD-1113 mounting holes on the MD-1067 (see Figure 1).
3. Align the MD-1113 over the spacers, and then attach the MD-1113 to the spacers with the four HD-112 screws.

Note: For the main application of the MD-1113 on the MD-1067 TX3 Aperio Interface Module, jumpers JW1 and JW2 on the MD-1113 should be open.

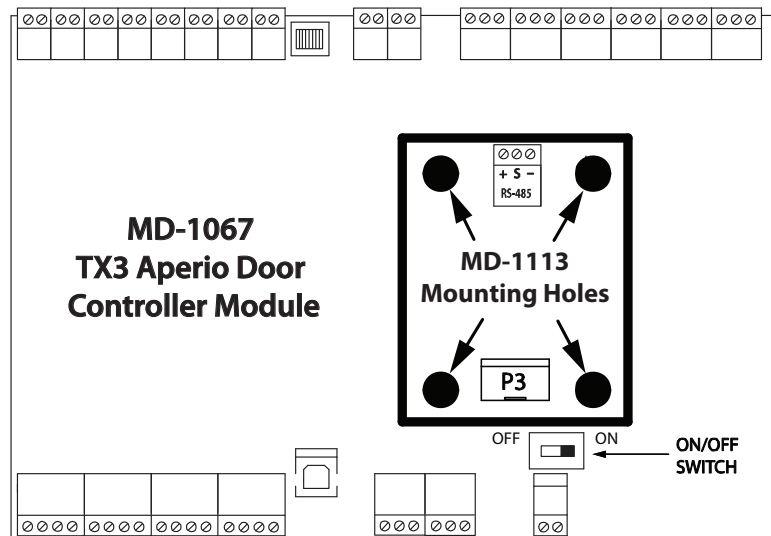


Figure 1. Locations of the mounting holes for the MD-1113 and P3 (modem connector).