


Installing the QBB-6001 Expansion Audio Enclosure

The QBB-6001 expansion audio cabinet is surface mounted. The QBB-6001 consists of the backbox and door. Install all cabinets and enclosures empty. Pull all required wiring in through the conduit holes provided (must be punched out). Do not mount the modules until mechanical installation is complete and all wires have been fed into the cabinets and enclosures.

Figure 1: QBB-6001 Dimensions, Mounting Holes and Knockouts for Installation

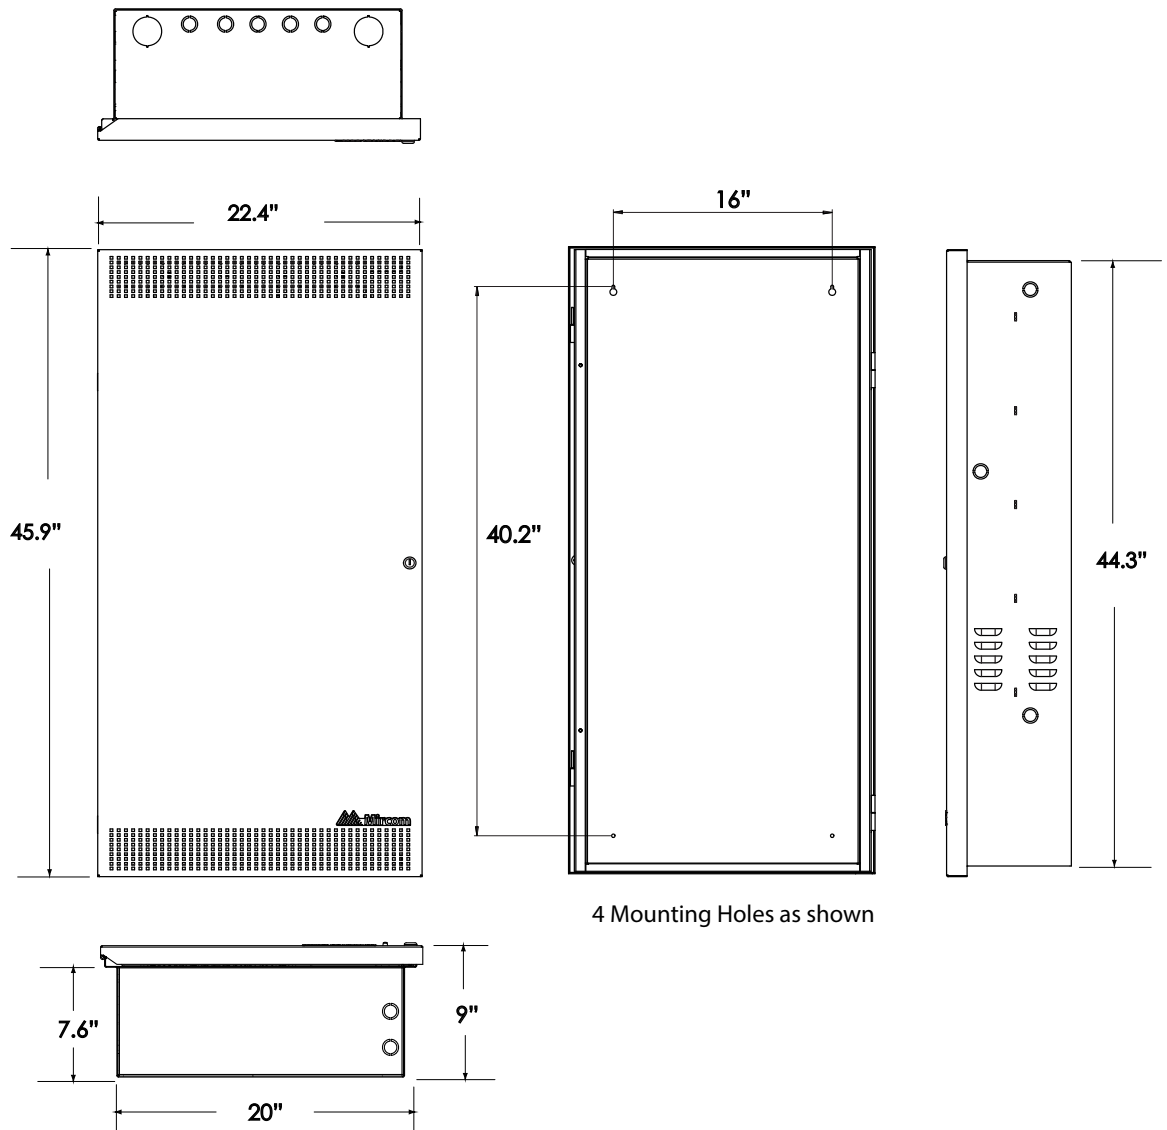


Note: It is extremely important to connect the audio cabinet's earth-ground point (chassis ground) to the earth ground. Conduits should be brought in only through the knockouts provided in the backbox.

Attach Mircom Label to Door


You can install the door so that it opens either way: left to right, or right to left. There are six holes in the door so you can attach the metal Mircom label to either side, depending on how the door is installed.

Figure 2: Holes for the Mircom Label

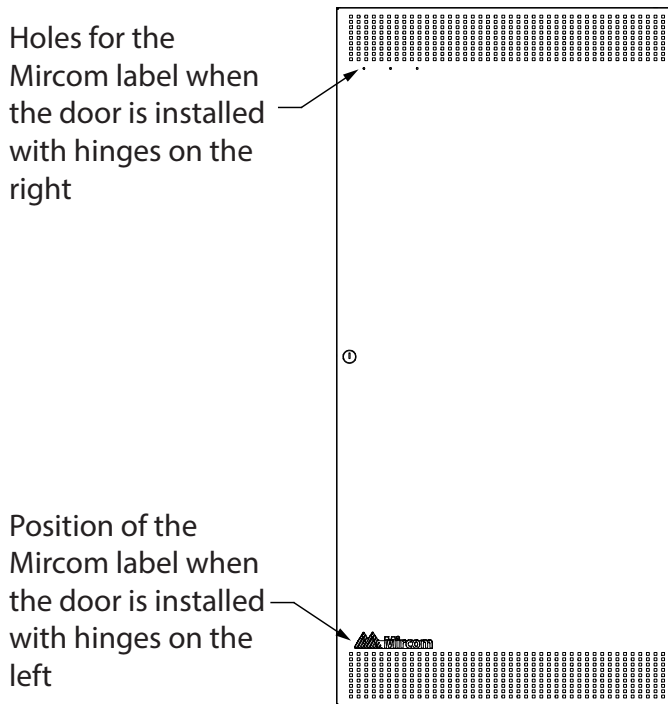

1. Remove the adhesive backing from the metal Mircom label.
2. Attach the label to the bottom of the door by sliding the studs on the label through the holes.
3. From the inside of the door, use pliers to push the washers on to the studs. Push the flat sides of the washers against the door.

Figure 3: Attach the Mircom Label to the Door

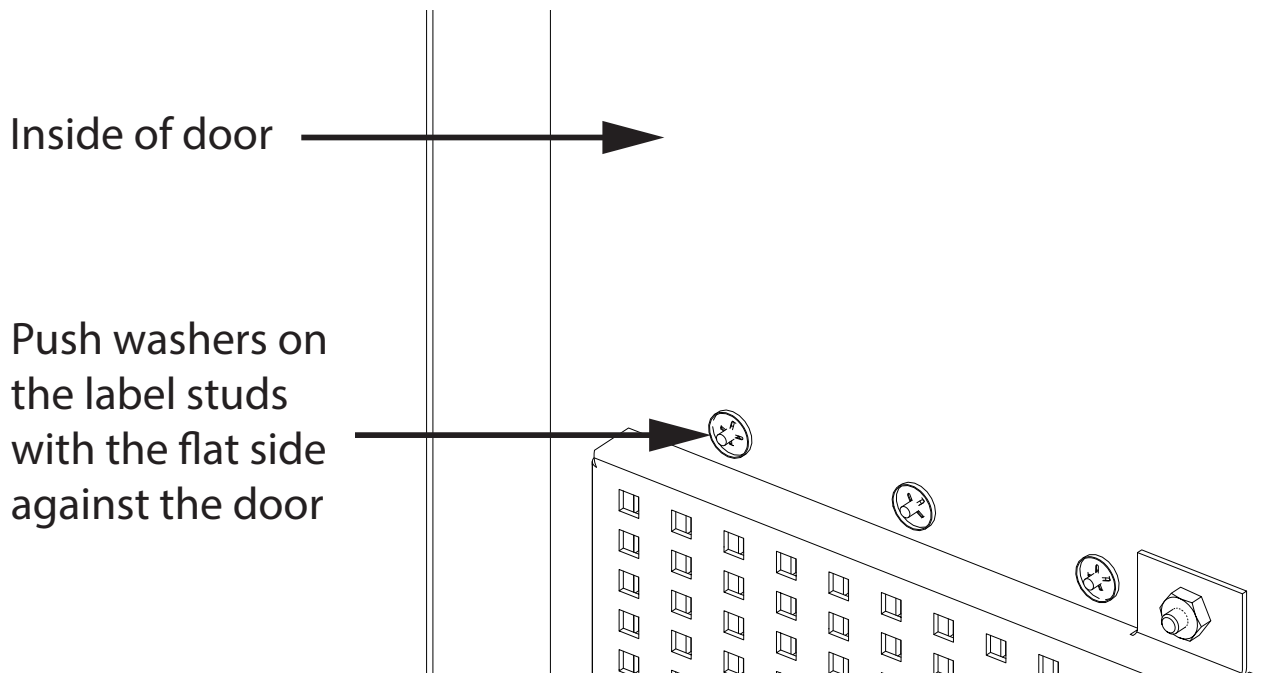

Attach Warning Label to Door

To comply with CAN/ULC-S527, attach the included warning label to the door over the keyhole, as shown below.

Figure 4: Attach the Warning Label to the Door

