

Figure 1 Inner chassis mounted in enclosure

To install the new chassis:

1. Place the new chassis over the six posts on the enclosure. Be sure to orient it the right way up.
2. Fasten six #8-32 nuts over the posts.
3. Attach the ground wire to the ground post and secure with a nut.
4. Reconnect the cables:



Attention: Use cable ties to secure the cables and keep them from getting caught in the door hinges.

- a. The DVI and USB cables from the display to the PC board.
 - b. The power cable from the display to TS6 on the power supply and audio mixer board.
 - c. The cable from the postal switch to INPUT 1 on the telephone access controller board.
 - d. The left speaker cable to TS2 on the power supply and audio mixer board.
 - e. The right speaker cable to TS3 on the power supply and audio mixer board.
 - f. The microphone cable to MIC on the telephone access controller board.
 - g. The camera USB cable to a free USB input.
5. Attach the bottom right power terminal to a suitable grounding wire and connect it to the site ground.

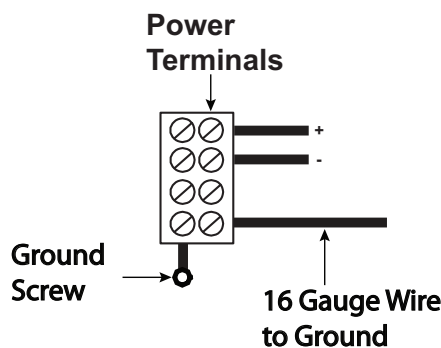


Figure 2. Grounding the 22" Touch Screen

6. Connect the MD-990 lode power supply wires to the Touch Screen Controller board panel terminal screws as shown in Figure 2. Ensure the MD-990 voltage selectable switch is set to 120V. For more information on connecting the power supply, see LT-996 TX3 Touch Screen Installation Manual.
7. Close the door that covers the power terminals and secure it with a nut.
8. Press the On/Off Switch (Figure 1) to turn the Touch Screen on.

Related Documents

For details on the telephone access controller board, see LT-6073 Telephone Access Quick Reference.

For instructions on installing a Logitech c615 HD Webcam, see LT-996 Touch Screen Installation Manual.

For instructions on installing a replacement 3M Multi-Touch Display, see LT-996 Touch Screen Installation Manual.

For instructions on installing a fan, see LT-6074 Installing the Fan in the 22" Touch Screen.

For instructions on installing a two door controller network board, see LT-981A Replacement TX3-CX-2-A Controller Board Installation Instructions.